



## Short manual WKB 660 Honda

Always work with the machine in a horizontal position (seen sideways). ✓

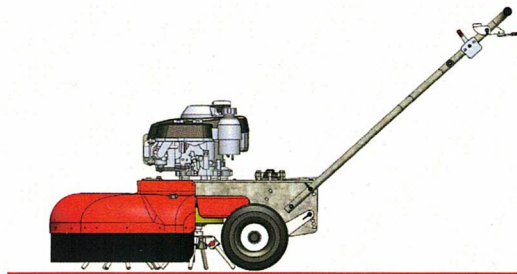

(Fig.: horizontal sweeping position)


As the brushes wear readjust the height of the rear axle to keep the machine horizontal. This optimises brush wear and performance.

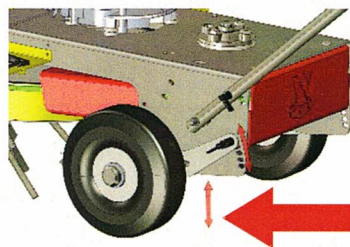

(Fig.: Axis adjustment)

As brushes wear adjust the height of the flexible guard. ✓


Adjusting screw

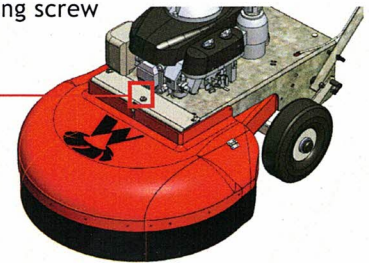

(Fig.: All-round protection adjusting screw)


**Important:** always allow 3 cm ground clearance, otherwise the flexible guard can be damaged.

Ground clearance  
(approx. 3 cm)

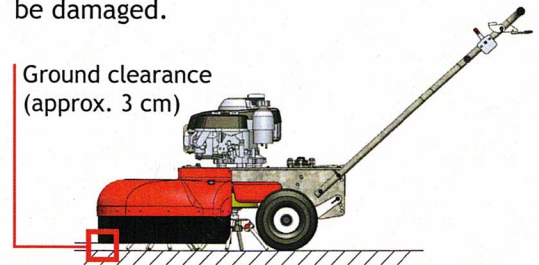


(Fig.: Ground clearance 3 cm)

- Do not bump the brush holders while working with the machine. (e.g. on the curb). ✓
- Change wire brushes with 30 mm remaining. Do not allow the brush holder to rub on the ground.
- When changing the wire brushes ensure the locking mechanism clicks into place.

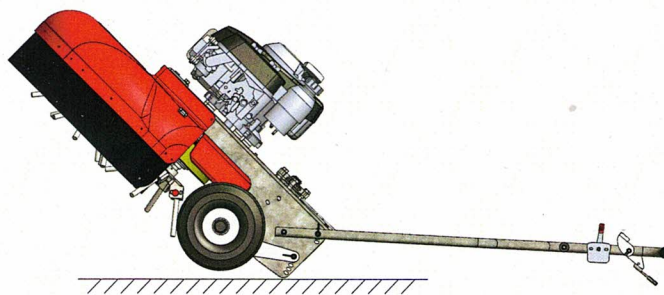

(Fig.: Changing brush elements)

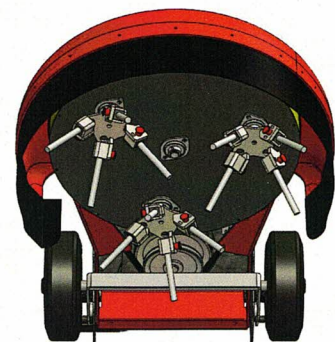

(Fig.: Changing wire braids)

Failure to comply can lead to damage or consequential damage to the machine.  
In this case the warranty claim does not apply.