



No	Code	Chinese name	Description	QTY	UNIT
1	100011264-0008	GB5789螺栓M6×16(三	Bolt, M6×16	6	pcs
2	100050611	XP380缸头盖(RoHS)	Valve Cover	1	pcs
3	100053417	XP380摇臂组合(RoHS)	Rocker Arm Assembly	2	pcs
4	100053416	XP380摇臂座(带塑料套)	Rocker Arm Base	1	pcs
5	100004576	182F气门锁夹(RoHS)	Valve Locker	4	pcs
6	100004516	182F气门弹簧座(锁夹式)	Valve Spring Seat	2	pcs
7	100004569	173F气门弹簧(钢丝直钩)	Valve Spring	2	pcs
8	100004602	173F挡油罩组合(RoHS)	Intake Valve Seal	1	pcs
9	100071344	XP440进气门(锁夹式)	Intake Valve	1	pcs
10	100071342	XP440排气门(锁夹式)	Exhaust Valve	1	pcs
11	100002473-0001	XP600E-3缸头螺栓(M10)	Bolt, M10×1.25×70	4	pcs
12	100053407	XP380缸头组合(RoHS)	Cylinder Head	1	pcs
13	100009378	168FA火花塞(F6RTC)	Spark Plug	1	pcs
14	100060965-0001	XP380缸头排气口双头	Stud, M8×102	2	pcs
15	100053412	XP380消声器垫(RoHS)	Gasket, Muffler	1	pcs
16	100096195	XP440导风板(RoHS)	Shroud	1	pcs
17	100054185	XP380排气消声器(无外罩)	Muffler	1	pcs
18	100060970	XP380消声器外罩(RoHS)	Muffler Guard	1	pcs
19	100011262-0004	GB5789螺栓M6×14(三	Bolt, M6×14	16	pcs
20	100011472-0004	GB6187.1螺母M8(镀锌)	Nut, M8	2	pcs
21	100011261-0014	GB5789螺栓M6×12(三	Bolt, M6×12	7	pcs
22	100121038	XP440化油器温控开关	Thermal Switch	1	pcs
23	100069233	XP380温控操纵杆(工作)	Thermal Lever	1	pcs
24	100064612	XP380挡风块组合(带风	Shield Assembly	1	pcs

25	100010309-0001	XP140A-3挡风块固定螺	Stud	1	pcs
26	100066993	XP380下导风板(RoHS)	Shroud, Down	1	pcs
27	100107769	O型圈(φ36×2.5_氟橡胶)	O-Ring,φ36×2.5	1	pcs
28	100084930	XP380进气管组合(带安	Inlet Pipe	1	pcs
29	100011267-0011	GB5789螺栓M6×22(三	Bolt, M6×22	4	pcs
30	100005940	XP600E-3化油器垫(Ro	Gasket, Carburetor	1	pcs
31	100126493-0002	XP380化油器总成(自动	Carburetor	1	pcs
32	100005959	XP600E-3空滤器垫(Ro	Gasket, Air Filter	1	pcs
33	100010374-0001	XP550E-3进气管双头螺	Stud, M6×92	2	pcs
34	100123280	XP380空滤器底座组合	Air Filter Base Assembly	1	pcs
35	100011276-0004	GB5789螺栓M6×55(8.	Bolt, M6×55	2	pcs
36	100011463-0003	GB6177.1螺母M6(平板	Nut, M6	2	pcs
37	100051657-0001	XP380空滤器滤芯组合	Air Filter Element	1	pcs
38	100061613	7T84MU空滤器盖组合	Air Filter Cover Assembly	1	pcs
39	100061610	衬套(φ11×φ6.6×30_三	Bush, φ11×φ6.6×30	2	pcs
40	100006034	168FA化油器放油螺栓	Gasket, Drain Bolt	1	pcs
41	100055709	XP380风门操纵杆(温控	Choke Lever	1	pcs
42	100011007-0003	GB845自攻螺钉ST4.8×	Self-tapping Screw, ST4.8×16	1	pcs
43	100053447	XP380缸头密封垫(RoH	Gasket, Cylinder Head	1	pcs
44	100010561	定位销φ12×16(RoHS)	Pin, φ12×16	2	pcs
45	100053398	XP380推杆组合(RoHS)	Push Rod	2	pcs
46	100004268	190F气门挺柱(RoHS)	Tappet	2	pcs
47	100053404	XP380活塞环总成(RoH	Piston Ring Set	1	pcs
48	100053405	XP380活塞(RoHS)	Piston	1	pcs
49	100003132	XP600E-3活塞销(RoH	Piston Pin	1	pcs
50	100003225	182F活塞销挡圈(RoHS)	Circlip	2	pcs
51	100054388	1P92F连杆三组件(MTI	Connecting Rod Assembly	1	pcs
52	100061609	XP380点火器压线杆(R	Wire Rod	1	pcs
53	100010556	定位销φ10×12(RoHS)	Pin,φ10×12	2	pcs
54	100011339-0003	GB5789螺栓M8×80(三	Bolt, M8×80	2	pcs
55	100146230-0001	XP380启动电机总成(直	Electric Starter	1	pcs
56	100146231-0001	XP380启动电机组件(直	Electric Starter	1	pcs
57	100071397-0001	XP380起吊挂板(带防折	Hook	1	pcs
58	100074876	1P90调压稳压器(14.4V	Regulator	1	pcs
59	100073186	XP380温控小拉簧(长5	Idle Spring	1	pcs
60	100008477-0003	TC160盖型带盘螺母(M	Nut, M6	3	pcs
61	100007162	XP600E-3塑料垫圈(Ro	Washer	3	pcs
62	100008851-0001	1P90F起吊螺栓(三价料	Hook Bolt	1	pcs
63	100061611	7T84MU导风外罩(RoH	Blower Housing	1	pcs
64	100011251-0004	GB5789螺栓M5×16(三	Bolt, M5×16	3	pcs
65	100053448	XP380挡草罩(带衬套)	Shroud	1	pcs
66	100054186-0001	XP380双头螺栓(M6×8)	Stud, M6×83	3	pcs
67	100060984-0002	GB6177.2螺母M20×1.5	Nut, M20×1.5	1	pcs
68	100072154	XP380飞轮组合(带齿圈	Flywheel	1	pcs
69	100011255-0002	GB5789螺栓M5×28(三	Bolt, M5×28	2	pcs
70	100053451-0003	XP380充电线圈(DC15V	Charging Coil	1	pcs
71	100017649	油封(φ35×φ52×7_丙烯	Oil Seal, φ35×φ52×7	2	pcs
72	100011248-0004	GB5789螺栓M5×10(三	Bolt, M5×10	2	pcs
73	100053453	XP380出线压板(RoHS)	Wire Board	1	pcs
74	100009075	190F减震胶垫(RoHS)	Damping Pad	1	pcs
75	100009465	XP600E-3出线压板二(Wire Board	1	pcs
76	100051891	XP380曲轴箱体组合(R	Crankcase	1	pcs

77	100011269-0010	GB5789螺栓M6×28(8	Bolt, M6×28	1	pcs
78	100053452-0003	XP380点火器组合(屏蔽	Ignition Module	1	pcs
79	100053402	XP380呼吸阀盖板(RoH	Breather Cover	1	pcs
80	100053400	XP380呼吸阀密封垫(R	Gasket, Breather Cover	1	pcs
81	100008440	1P64FC单向阀块弹簧	One-way Valve Spring	1	pcs
82	100004085	1P68F单向排气阀门(R	Breather Valve	1	pcs
83	100092298-0001	XP380机油尺组合(高位	Dipstick	1	pcs
84	100004146	XP600E-3机油塞座O型	O-Ring, Dipstick	1	pcs
85	100064024	O型密封圈(φ15.8×2.4	O-Ring, φ15.8×2.4	1	pcs
86	100087693	XP380废气管(丙烯酸酯	Breather Hose	1	pcs
87	100053409	XP380油门小拉簧(长1	Idle Spring	1	pcs
88	100053408	XP380油门操纵杆(三价	Throttle Linkage	1	pcs
89	100053457	XP380油门调速柄(RoH	Governor Gear Shaft	1	pcs
90	100017630	油封(φ6×φ11×4 丙烯	Oil Seal, φ6×φ11×4	1	pcs
91	100007986	168FA油门调速柄开口	Cotter Pin	1	pcs
92	100053410	XP380油门大拉簧(长7	Governor Spring	1	pcs
93	100053454	XP380油门支架组合(R	Governor Lever	1	pcs
94	100063564	XP380油门操纵组合(自	Governor Gear Bracket Assembly	1	pcs
95	100005136	1P65F板簧卡箍(φ12×8	Clamp	2	pcs
96	100017726	编织油管(φ6.3×φ12.5×	Fuel Hose, φ6.3×φ12.5×270	1	pcs
97	100000671	1P70F油管定位线夹(内	Clip	1	pcs
98	100004270	170F橡胶堵头(RoHS)	Plug	1	pcs
99	100061608	XP380卡线橡胶块(RoH	Clip Base	1	pcs
100	100060968	XP380曲轴箱密封垫(R	Gasket, Crankcase	1	pcs
101	100010554	定位销φ9×14(RoHS)	Pin, φ9×14	2	pcs
102	100033218	XP380曲轴总成(RoHS)	Crankshaft	1	pcs
103	100010577	1P64FC半圆键(RoHS)	Woodruff Key	1	pcs
104	100033227	XP380平衡轴(RoHS)	Balance Shaft	1	pcs
105	100010524-0001	平垫圈(φ17.2×1×φ26	Washer, φ17.2×1×φ26	1	pcs
106	100053399	XP380凸轮轴部件(减边	Camshaft	1	pcs
107	100063945	XP380调速从动齿轮组	Governor Gear	1	pcs
108	100004093	XP600E-3泄压阀盖板(Breather Cover	1	pcs
109	100004092	XP600E-3泄压阀弹簧(Spring	1	pcs
110	100010937	GB308钢球φ9.5(RoHS)	Steel Ball, φ9.5	1	pcs
111	100050608	XP380左曲轴箱盖(00型	Crankcase Cover	1	pcs
112	100004048-0001	1P90F精滤器连接螺管	Connection Pipe	1	pcs
113	100106538	平垫圈(φ6.2×1.5×φ13	Washer, φ6.2×1.5×φ13	1	pcs
114	100004088-0001	1P90F机油精滤器(50±	Oil Filter	1	pcs
115	100004011	XP600E-3机油泵总成(Oil Pump	1	pcs
116	100010132	XP600E-3机油泵盖板(Gasket, Oil Pump	1	pcs
117	100004025	XP600E-3机油泵盖板(Oil Pump Cover	1	pcs
118	100011325-0003	GB5789螺栓M8×40(三	Bolt, M8×40	8	pcs
119	100010277-0001	1P90放油螺塞(内槽9.7	Earth Bolt	1	pcs
120	100004076	XP600E-3粗滤器滤网(Breather Filter Screen	1	pcs
121	100053401	XP380粗滤器盖板(RoH	Breather Cover	1	pcs
122	100054241	平垫圈(φ35.4×1×φ52	Washer, φ35.4×1×φ52	1	pcs
123	100071406-0001	XP380起吊挂板二(三价	Hook	1	pcs
124	100070831	XP380油管定位线夹(φ	Clip	1	pcs
a	100066416	XP380化油器阻风门轴	Choke Shaft	1	pcs
b	100066417	XP380阻风门回位扭簧	Choke Spring	1	pcs
c	100006097	1P90F回位扭簧垫片(φ	Washer	1	pcs
d	100066418	XP380阻风门板(H90_2	Choke Plate	1	pcs

e	100066419	XP380化油器本体(XP3	Carburetor Body	1	pcs
f	100005898	178-LU浮子轴(2x25_P	Float Pin	1	pcs
g	100005894	178-LU针阀组合(P27-1	Needle Valve	1	pcs
h	100006053	161-VHA针阀弹簧(P18	Needle Valve Spring	1	pcs
i	100005704	178-LU浮子(P27-1-000	Float	1	pcs
j	100005720	178-LU浮子室密封圈	O-Ring, Float Bowl	1	pcs
k	100006096	1P90F化油器矩型密封	Seal	1	pcs
l	100055637	XP550E-3电磁阀线压	Idle Mixture Screw	1	pcs
m	100010885-0004	GB93弹垫φ5(三价兰白	Washer, φ5	1	pcs
n	100010952-0006	GB818螺钉M5x8(三价	Screw, M5x8	1	pcs
o	100006046-0001	XP550E-3电磁阀(XP60	Solenoid Valve	1	pcs
p	100006099	1P90F电磁阀密封垫(8	O-Ring, Solenoid Valve Seat	1	pcs
q	100006095	1P90F电磁阀座密封圈	O-Ring, Solenoid Valve Seat	1	pcs
r	100005727-0001	1P90浮子室螺钉(LC1F	Bolt	1	pcs
s	100006032-0001	XP550E-3化油器放油螺	Drain Bolt	1	pcs
t	100006033	161-VHA化油器放油螺	Gasket, Drain Bolt	1	pcs
u	100066420-0001	XP380浮子室(1P84F-5	Fuel Bowl	1	pcs
v	100066421	XP380主量孔(107_201	Main Jet	1	pcs
w	100066422	XP380化油器主喷管(X	Nozzle Tube	1	pcs
x	100005723	161-VHA怠速调节螺钉	Idle Adjusting Screw	1	pcs
y	100005546	1P90F节气门轴防尘垫	Gasket	1	pcs
z	100005887	1P90F节气门轴垫片(4	Gasket, Throttle Shaft	1	pcs
aa	100005805-0001	1P90F节气门轴套(P27	Throttle Shaft Sleeve	1	pcs
bb	100010883-0002	GB93弹垫φ3(兰白锌_F	Washer, φ3	2	pcs
cc	100010982-0002	GB822螺钉M3x5(三价	Screw, M3x5	3	pcs
dd	100127498	XP380化油器节气门板	Throttle Plate	1	pcs
ee	100066415	XP380节气门轴(XP380	Throttle Shaft	1	pcs
ff	100127499	XP380化油器怠速量孔	Idle Jet	1	pcs
gg	100005885	178F怠速定位杆(P27-0	Idle Jet Rivet	1	pcs