

JonCutter G4500, G5800 Parts List

NAME		BRAND
Chainsaw		JonCutter Farmertec
NUMBER	FARMERTEC#	PARTS NAME
A01		Nut M5
A02		Muffler cover
A03	PJG580025	Muffler
A04		Muffler gasket
A05		Muffler bolt M5×84
A06		Screw M5×10
A07		Screw M5×20
A08,A19-22	QGCS4500	cylinder piston kit with bore 43mm
A08,A19-22	QGCS5800	cylinder piston kit with bore 45.2mm
A09		Inlet pipe gasket
A10	PJG580036	Intake Manifold
A11		Screw M5×12
A12		Carburetor braket
A13		Screw M5×14
A14		Asbestos mat
A15		Spacer
A16		Lining ring
A17		Bracket gasket

A18		Cylinder gasket
A19		G4500 43MM Piston ring
A19	CS5800003	G5800 45.2MM Piston ring
A19-A22	HSCS4500	piston kit with bore 43mm
A19-A22	HSCS5800	piston kit with bore 45.2mm
A21		Piston pin
A22		Piston Circlip
A23	PJG580037	Piston Needle Bearing 11×15×12.5
A24		G4500 Washer
A24		G5800 Washer
A25	PJG580021	G5800 Crankshaft
A25	PJG450008	G4500 Crankshaft
A26		Woodruff key φ10
A27		Vacuum pipe
A29		Elbow
A30		High-temperature sleeve
A31		Guide(LH)
A32-A41	PJG580022	Crankcase
A32,A40	PJG580029	Oil seal
A33		Screw M5×30
A34		Crankcase(left)

A35		Snap ring
A36	PJG580028	Grooved ball bearing
A37		Location pin $\phi 6 \times 10$
A38		Crankcase gasket
A39		Crankcase(right)
A41		Double-screw bolt M8 $\times$ 42
B01		Screw M5 $\times$ 2.0
B02	PJG580008	Ignition Coil
B03		Ignition cover
B04		Cord
B05		Oil seal plate
B06		Screw W4 $\times$ 8
B07	PJG580007	Flywheel
B08		Nut M8 $\times$ 1
B09	PJG580009	Recoil Starter
B10	PJG580010	Start knob
B11		Start roop $\phi 3 \times 950$
B12		Guide(LH)
B13		Screw M5 $\times$ 14
B14		Start cover
B15		Start spring

B16		Start spring cover
B17	PJG580020	Starter Pulley
B18		Washer $\phi 5.2 \times \phi 16 \times 1$
B19		Screw ST4.8 $\times$ 14F
B20	PJG580042	Segment For Joncutter G4500
B21		Switch damper
B22		On-off switch
B23		Ground strap
B24		Screw M5 $\times$ 10
B25		Spark plug L7T
B26		Damper spring seat
B27		Damper spring
C01	PJG580024	Handle Bar
C02		Screw ST4.8 $\times$ 14F
C03	PJG580043	G5800 Tower spring
C04	PJG580044	G5800 Tower spring base
C05		Chain catcher
C06		Screw M5 $\times$ 14
C07		Damper cover
C08		Screw ST4.8 $\times$ 14F
C09	PJG580035	G5800 AV Mount Buffer for crankcase(small)

C10	PJG580045	G5800 AV Mount Buffer for fuel tank (big)
C11		Stopper
C12		Balancer seat
C13		Balancer assy
C14		Trigger spring
C15		Spring
C16		Throttle interlock pin
C17		Throttle interlock arm
C18		Rear handle cover
C19	PJG580013	Trigger
C20		Trigger pin $\phi 6 \times 25$
C21		Screw ST3.9 $\times$ 20F
C22	PJG580011	Rear Handle Fuel Tank
C23		Screw
D01		Air valve
D02	PJG580003	Top cover
D03		Screw M5 $\times$ 14
D04	PJG580014	Air Filter Cover Twist Lock Knob
D05		Air filter cover knob washer
D06	PJG580004	Air Filter Cover
D07	PJG580023	Air Filter Ass.

D08		Washer
D09		Guide(T)
D10	PJG580027	G5800 Carburetor W.
D10	PJG450009	G4500 Carburetor W.
D11		Stud M5×39A
D12		Mainfold
D13		Screw M5×50
D14		Manifold damper
D15		Choke rod damper
D16		Choke rod
D17		Damper
D18		Dust shield
D19	PJG580015	Choke Rod
D20		Fuel pipe
D21		Pendent
D22		Fuel filter assy
D23	PJG580016	Fuel Cap
D24		Fuel cap washer
D25		Element
D26		Fuel pipe assy
D27		Fuel cap assy

E01		Oil Cap
E02		Oil cap washer
E03		Element
E04		Oil tank valve
E05		Oil tank valve retainer
E06		Sponge
E07		Oil pipe
E08	PJG580032	Oil Pump Ass.
E09		Oil pump pipe
E10		Screw M4×14
E11		Oil pump cover
E12		Screw M4×10
E13	PJG580039	WORM
E14		Sealed sponge
E15		Oil filter
E16	PJG580038	Clutch Needle Bearing $\phi 12 \times \phi 15 \times 14.5$
E17,E18	PJG580040	clutch drum for G5800
E17		Sprocket
E18		Clutch drum
E19		Clutch washer
E20	PJG580031	Clutch

E21	PJG580017	Oil Cap
F01		Screw M5×10
F02		Spike bumper
F03		Screw M4×10
F04		Guide plate
F05		Guide plate gasket
F06		Chain guide
F07		Brake assy
F08		Brake damper
F09		Snap ring φ5
F10		Washer φ6.2×φ18×1
F11		Brake spring
F12	PJG580006	G5800 Hand Guard
F13		Stopper pin
F14		Snap ring φ3
F15		Front hand jacket
F16		Guard pin
F17		Stopper plate
F18		Snap ring φ4
F19		Nut M8×1.25
F20	PJG580005	Brake Assy

F21		Screw ST3.9×10F
F22		Brake spring cover
F23		Brake lever(Sub)
F24		Brake lever(main)
F25		Brake lever pin
F26		Screw ST3.9×8F
F27		Tensioner plate
F28		Tensioned bolt set
F29		Brake band
F30		Brake arm
F31		Brake spring(Main)
F32		Brake spring(Sub)
F33		Sawdust protector