 


Holzfforma G382 Parts List

 
NAME				BRAND
Chainsaw				Holzfforma Farmertec
No.	Picture	Farmertec #	OEM	Parts Name
1(2-18)		PJ44506	544 09 79-02	Chain Sprocket Cover For H. 445 450
2		PJ44553	735 31 08-20	E-CLIP
3,14,15		PJ44511	537 28 66-01 537 39 70-01 537 07 94-02	Chain Adjuster Set for H. 135 140 338 339 435 440 445 450
4		PJ44512	540 06 33-01	Chain Guide for H. 435 450 445
5		PJ44554	537 01 74-01	Bearing Sleeve For H. 445 450 350 351 353 359 261 262XP 266 268 272XP 281288, 288XP 3120XP
6		PJ44508	503 89 08-02	Chain brake knee joint ASSY For H. 445 450
7		PJ44509	503 46 59-01	BRAKE SPRING For H. 445 450
8		PJ44555	503 85 52-01	Guide Bushing For H. 445 450 350 351 353 440
9		PJ44510	544 08 29-01	COVER LID For H. 445 450
11		PJ44513	544 08 30-01	Wear Protector for H. 340 345E 350 455E 450E
12		PJ35059	537 04 30-01	BRAKE BAND ASSY
13		PJ44556	503 89 29-01	PIN KNEE-JOINT For H. 445 450 350 351 353 359
19		T0032	503 22 00-01	Bar Nut For H. 362 365 371 372 445 450
20		PJ35018	537 11 05-03	Clutch for H. 345 346 350 351 353

21		PJ44514	537 35 91-01	Clutch Spring for H. 340 345 345 455 450
22		PJ35061	503 87 30-72	Chain sprocket .325" - 7 Spur For H. 445 450 455 460 340 346XP 350 353
23		PJ35033	503 25 52-01	Clutch Needle Bearing For H. 55/350/353/357/359/450
24		PJ34021	503 93 18-01	Worm Gear For Husqvarna 340 345
25,26		PJ44515	540 05 79-01 537 15 48-01	Oil Pump for H. 435 435E 445 445E 450E
27		PJ44516	544 08 42-01	OIL HOSE for H. 135 140 435 440 445 450
29-37		PJ44539	537 43 82-01	Crankcase Assembly For H. 445 450
34		PJ44557	530 02 61-19	Check Valve For H. 445 450 353 359 365
35		PJ44558	537 40 35-01	Filter For H. 440 450 353 357XP 359 362 365 372XP 435 435E
36		PJ44559	544 08 33-01	Oil Filter For H. 445 450
37		PJ44551	544 33 16-01	Crankcase Guide Pin For HUS 455 440 445 450 435 465
38		PJ35070	503 86 93-01	Support for H. 345 346 350 351 353
39		PJ44540	544 11 12-01	Fuel Cap For H. 435 445 450 460 545 550
42		PJ44552	503 88 63-01	Chain Catcher For HUS 346 351 353 357 359 435 440 445 450
44 107		PJ44560	501 00 76-01	Annular buffer For H. 445 450
45		TD06230	503 21 51-03	Screw ST6*23
46		PJ44537	544 09 40-01	Chain Guide Plate for H. 445 450

47		TD04100	503 21 70-10	Screw ST4*10
48		PJ35080	503 90 59-01	Bumper Bucking Spike Felling Dog for H. 345 346 350 351 353
49		TM05200A	503 21 75-20	Screw M5*20
50		PJ44538	544 08 26-01	Hand Guard for H. 445 450
51		PJ44561	503 89 24-01	Catcher For H. 445 450 440 435
52		TD51140	503 89 30-01	Screw ST5.1*14
53		PJ36565	503 43 65-01	Brake Spring For H. 362 365 371 372
54-61		PJ44505	544 07 16-04 544 07 16-02	Recoil Starter For H. 445 450
54		PJ44505A	586 69 02-02	Starter Housing For H. 445 450
55		PJ44505B	537 28 32-01	Reinforcement Sleeve For H. 445 450 440 435
56		PJ43531	540 05 75-02	Recoil Starter Spring For H. 435
58		TD05160B	503 21 77-16	Screw ST5*16
59		T0002B	503 85 89-01 1128 190 2900	Starter Rope Roll 100MTR X 3.5MM
60		PJ44520	537 23 25-01	Starter Handle for H. 340 345 440 445 460 461
61		TD05210	503 21 73-21	Screw ST5*21
62		PJ44519	544 08 15-01	COOLING AIR CONDUCTER For H. 445 450
64		PJ43530A		Starter Pulley (Small) For H. 340 345 350

65		PJ43533		Torsion spring For H. 340 345 350
66		PJ43530B	537 42 32-01	Starter Pulley (Big) For H. 340 345 350
67		PJ44521	544 11 18-01	FLYWHEEL ASSY FOR H. 445 445E 450
68		PJ44562	537 24 56-01	Flywheel Pawl For H. 445 450 440 435
72		TM0801A	503 22 04-01	Flywheel Nut M8*1
73		PJ44570	573 93 57-01	Ignition Coil For H. 445 450
74		PJ44563	510 10 15-01	Wiring Assy. For H. 445 450 440 435
75		THUS520	503 20 02-20	Screw M5*20
76		PJ44503	544 14 77-02	MUFFLER For H. 445 450
77		PJ44522	579 75 32-01	Heat Deflector FOR H. 357 445 450
78		PJ44523	579 75 31-01	Muffler gasket For H. 445 450
79		THUS616	725 53 68-55	Screw M6*16
80		PJ44530	544 08 23-01	Intake Manifold Assy For H. 445
81		THUS516A	503 20 02-16	Screw M5*16
82		PJ44531	544 08 38-01	Intermediate Wall For H. 445
83		PJ44528	544 08 40-01	Carburetor Flange For H. 445 450
84		THUS525B		Screw ST5*25

85		PJ44529	544 08 41-01	Intake Flange For H. 445 450
86		PJ44564	544 14 82-01	Throttle For H. 445 450 445E 450E
87		PJ44504	506 45 04-01	Carburetor For H. 445 450
88		PJ44526	504 00 34-01	Filter Holder Assembly For H. 445
89		PJ44549	544 23 14-01	Air Filter Spring For HUS 445 445E 450 450E
90		PJ12037	4130 350 6200	Primer Bulb Fuel Pump For ST FS120 FS200 FS250
91		PJ44525	544 40 19-01	Hose for H. 435 440 450
92		PJ44524	544 12 97-01	Fuel Line FOR H. 435 445 450
94		PJ44527	503 21 07-50	Screw for H. 445
95		PJ45001	544 08 08-03	Air Filter For H. 445 450
95		PJ45068	544 08 08-01	Air Filter Nylon Type For HUS 445 450
96		PJ44545	525 86 21-01	FUEL TANK ASSY For H. 445 450
97		THUS490		Screw ST4*9
98		PJ44566	720 18 25-20	Parallel Pin For H. 445 450 350 351 353 435 440
99		PJ44543	544 09 97-01	THROTTLE TRIGGER For H. 435 445 450
100		PJ43532	544 09 99-01	Throttle Trigger Spring For H. 435 445 450
101		PJ44544	544 09 98-01	THROTTLE LOCKOUT For H. 435 445 450

102		PJ44546	504 12 22-01	Handle Insert For H. 445 450
103		PJ44541	504 09 88-01	Throttle Cable Assembly for H. 445
104		PJ44542	544 12 86-01	FUEL HOSE For H. 435 445 450
105		T0025	503 44 32-01	Fuel Filter Tip Diam: 5.4mm Body Diam: 19mm
106		PJ44540	522 62 00-03	Tank Cap Assy For H. 445 450
108		PJ44547	544 10 12-01	AV Spring for H. 445 450
109		PJ44568	721 12 63-39	Grooved Pin for H. 445 450
110		PJ44569	501 15 29-01	Tank Vent Assy. For H. 445 450 435 440 455 460 340 345 350 346 353 570 576
111		PJ44548	544 08 39-01	Front Handle for H. 445 450
112,43		THUS624	503 21 88-76	Screw ST6*24
113		TD61160	503 21 02-70	Screw ST6.1*16
113A		PJ35043	503 89 83-01	ANTIVIBRATION ELEMENT
114		PJ44517	544 34 83-03	CYLINDER COVER ASSY For H. 445 450
115		PJ44518	503 89 47-01	SNAP LOCKING For H. 445 450
116		QG45044	544 11 98-03	44mm Cylinder Kit For H. 450
117		HS45044	544 08 89-05	44mm Piston Kit For H. 450

118		HSH3504415	544 08 87-01	Piston Ring 44X1.5mm
120		PJ35032	501 45 16-01	Piston Needle Bearing for H. 55 350 10x13x14
121		PJ44532	544 10 87-01	GASKET
122		PJ44533	544 10 92-01	GASKET
123		THUS640		Screw M6*40
124		T0004	503 23 51-11	SPARK PLUG
125		PJ44550	540 05 73-01	SUPPORT
126		PJ44534PRO	525 60 50-01	CRANKSHAFT ASSY
127		PJ44535	544 06 20-01	BEARING
128		PJ44536	544 01 38-01	SEALING