

## Parklio parking barijera

*Korisničko uputstvo na srpskom jeziku  
Prevod i prodajna adaptacija za SVE ZA POD DOO*

Napomena: dokument je pripremljen na osnovu originalnog korisničkog uputstva proizvođača Parklio. **Električnu vezu i puštanje u rad treba da izvrši stručno lice.**

### Namena

Zaštita rezervisanih parking mesta, privatnih parking mesta i mesta za EV punjenje

### Varijante

Standardni model sa baterijom i solarnim panelom, ili model sa stalnim napajanjem

## Sadržaj

1. Uvod i pregled proizvoda

2. Upozorenja i opšte mere predostrožnosti
3. Opis proizvoda, komponente i tehnički podaci
4. Ugradnja i puštanje u rad
5. Upravljanje barijerom
6. Čišćenje i održavanje
7. Odlaganje uređaja
8. Prilozi: slike, tehnički crteži i izjava o usaglašenosti

## 1. Uvod i pregled proizvoda


Hvala Vam na interesovanju za Parklio parking barijeru. Ovaj dokument predstavlja prevod i praktično prilagođenu verziju originalnog uputstva, pripremljenu za prodaju i podršku kupcima kompanije SVE ZA POD DOO. Cilj dokumenta je da omogući jasno razumevanje proizvoda, pravilnu montažu, bezbednu upotrebu i osnovno održavanje.

### Osnovni pregled

Parklio parking barijera služi za zaštitu parking mesta i omogućava kontrolu pristupa putem mobilne aplikacije, daljinskog upravljača ili centralizovanog sistema, u zavisnosti od konfiguracije. Predviđena je za privatne, poslovne i polujavne parking površine, kao i za zaštitu mesta za punjenje električnih vozila.

### Ključne prednosti za prodaju i upotrebu

- Otvaranje i zatvaranje putem aplikacije Parklio Connect bez potrebe za stalnom internet vezom na samoj lokaciji.
- Automatsko zatvaranje nakon odlaska vozila, radi zaštite slobodnog mesta.
- Mogućnost deljenja digitalnih ključeva sa vremenski ograničenim ili trajnim pristupom.
- Solarni panel doprinosi većoj autonomiji baterije kod standardnog modela.
- Dostupne su verzije sa baterijskim napajanjem ili sa stalnim AC/DC napajanjem.
- Pogodno i za zaštitu parking mesta uz EV punjače.
- Mogućnost prilagođavanja bojom ili logotipom, u skladu sa projektom i količinom.

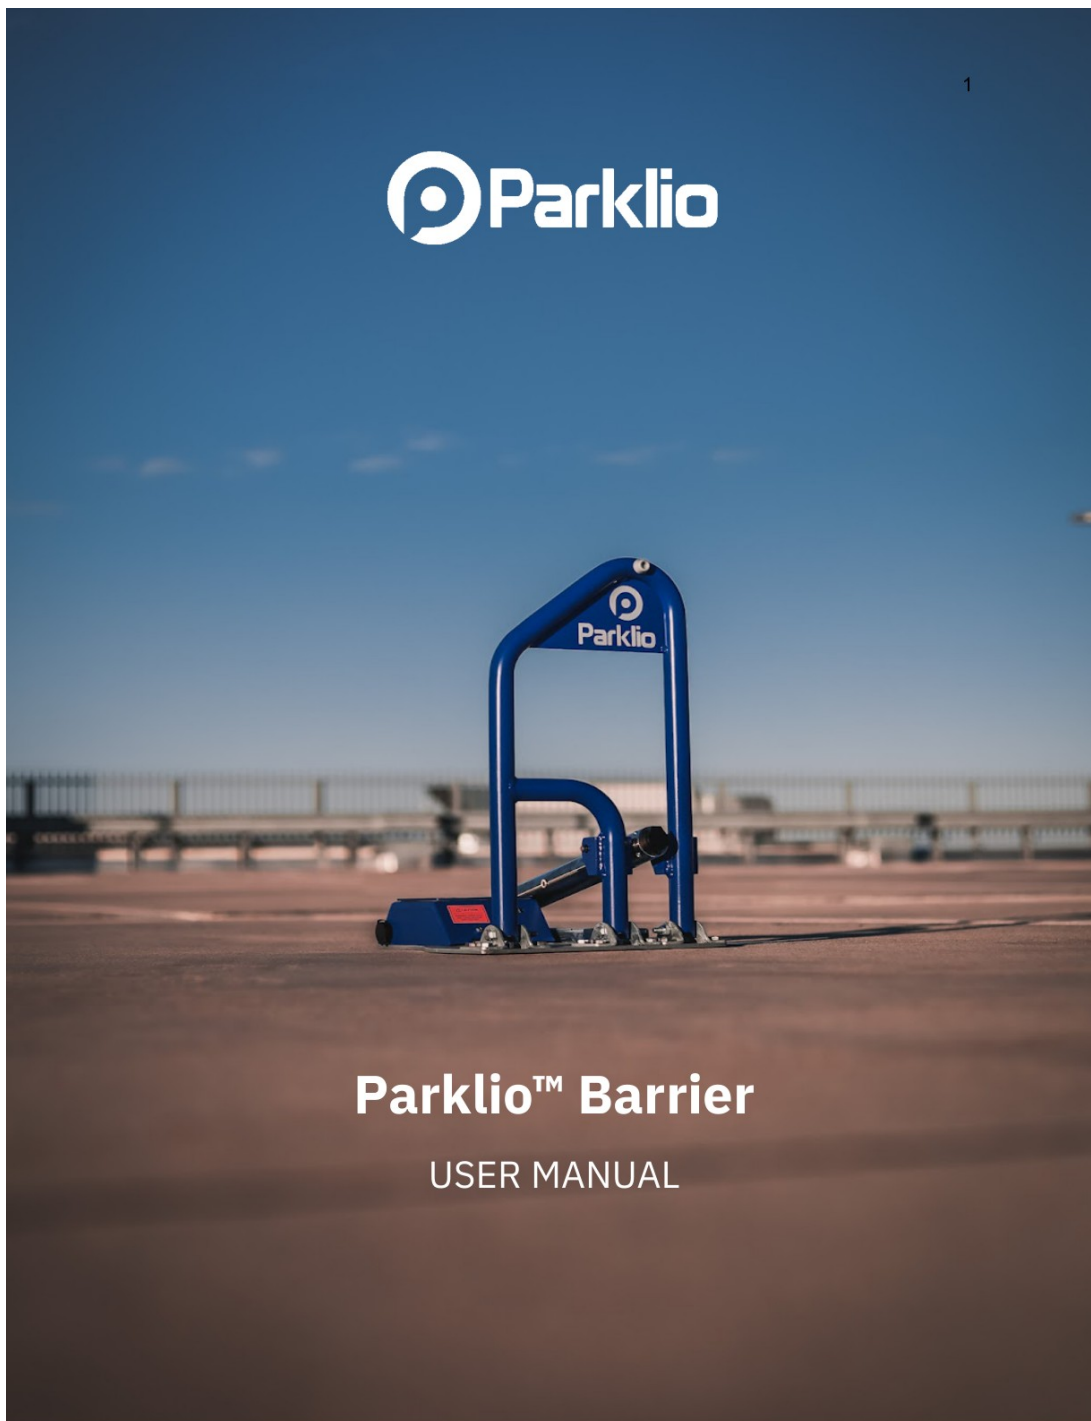

## 2. Upozorenja i opšte mere predostrožnosti

Nepravilna ugradnja ili upotreba mogu dovesti do oštećenja uređaja, gubitka garancije ili povrede korisnika. Pre montaže i korišćenja obavezno pročitajte tehničke podatke i bezbednosne smernice.

### Bezbednosna uputstva

- Nemojte koristiti uređaj ako niste pročitali i razumeli ovo uputstvo.

- Koristite isključivo originalne ili od proizvođača odobrene baterije, napajanja, punjače i zamenske delove.
- Unutrašnjost uređaja ne izlagati vodi.
- Popravke treba da obavlja stručno lice.
- Bateriju pre prve upotrebe napuniti do punog kapaciteta.
- Baterijski paket ne izlagati direktnom izvoru toplote i ne koristiti sa drugim uređajima.
- Pre povezivanja i rada poštovati polaritet, naponske opsege i uslove iz ovog dokumenta.

### **Upozorenja pri montaži**

- Montažu treba da izvodi kvalifikovano lice, posebno kada je uključeno stalno električno napajanje.
- Tokom montaže, čišćenja, održavanja i popravke uređaj mora biti odvojen od izvora napajanja.
- Uređaj se ugrađuje isključivo na čvrstu i ravnu betonsku podlogu.
- Ugradnja nije dozvoljena u eksplozivnim ili lako zapaljivim atmosferama.
- Električna instalacija mora biti izvedena u skladu sa važećim propisima.

## **3. Opis proizvoda, komponente i tehnički podaci**


### **Pregled osnovnih delova**

Na sledećim slikama prikazani su glavni sklopovi i unutrašnji raspored ključnih komponenti barijere.

### 3. Product Description

This section provides a complete description of the Smart Parking Barrier's physical characteristics and technical specifications.

#### 3.1. Product Components Overview

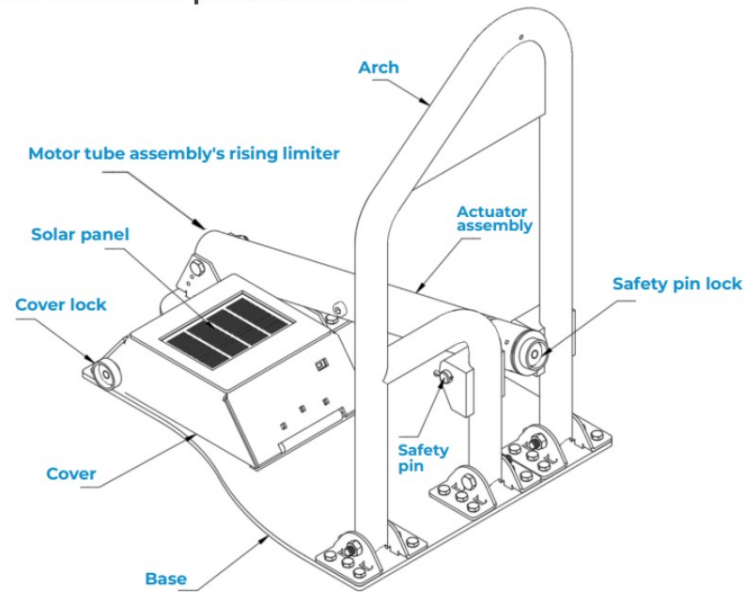


**Parking barrier parts**

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Osnovni delovi barijere*

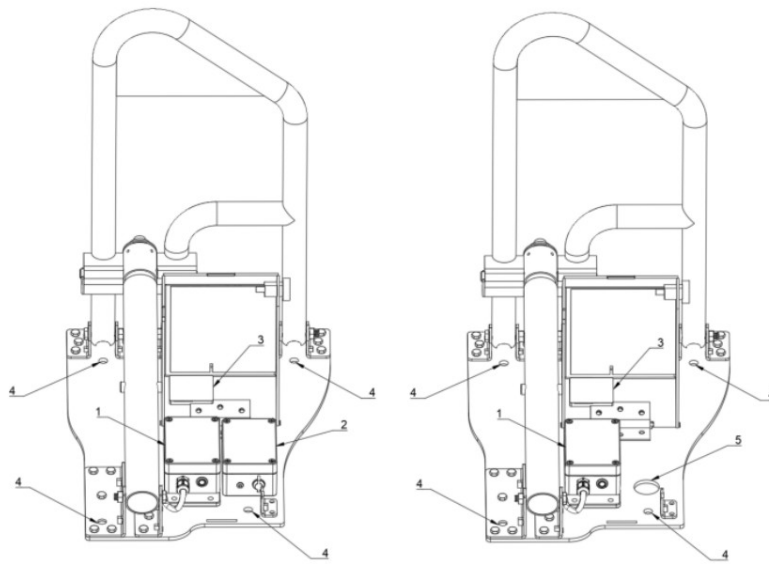

**Battery powered barrier back view**

**Constant supply model**


- 1. Control Unit Electronic**
- 2. Battery Pack**
- 3. Laser Sensor Assembly**
- 4. Mounting Holes**
- 5. Cable Hole**

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Pogled sa zadnje strane: baterijski model i model sa stalnim napajanjem*

The control unit houses the BLE radio and is in charge of regulating the Barrier. It is linked to the actuator, the laser sensor, and the battery.

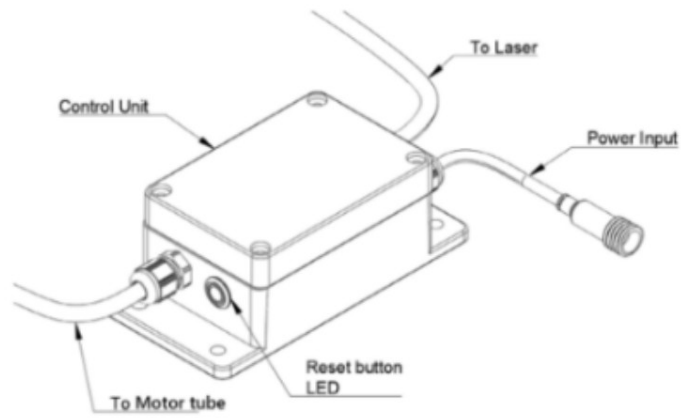

**Control unit**

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276




*Kontrolna jedinica*

The Parklio™ Battery Pack is a portable power source for the Parklio Smart Parking Barrier. Parklio Barriers support the use of Parklio Battery Packs and Parklio Double Battery Packs.

For enhanced sustainability and cost-efficiency, the barrier incorporates an integrated solar panel. This panel plays a significant role in increasing the battery's autonomy, offering an environmentally friendly and efficient energy solution for the automated barrier.



**Regular recharging of the barrier's batteries is necessary to maintain optimal performance and uninterrupted functioning of the barrier, even though the solar panel provides extended battery life.**

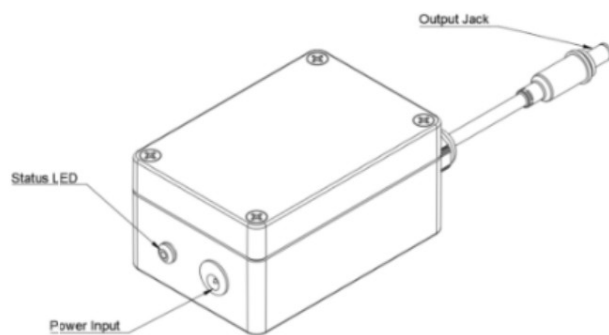

**Battery pack**


FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Baterijski paket*

LED STATE	Description
Off	The battery pack is charged, or the battery pack is not connected to a charger.
On	The battery pack is connected to a charger and charging.
Blinking	There is an error during charging. Stop charging immediately.

The barrier uses a safety pin to connect the actuator to the barrier arch. The pin serves as a safety measure to safeguard the barrier from excessive force and allows for manual operation by removing it and lowering the barrier. The pin is designed to break into three pieces in case of excessive frontal force to the arch and can easily be replaced by a new one.

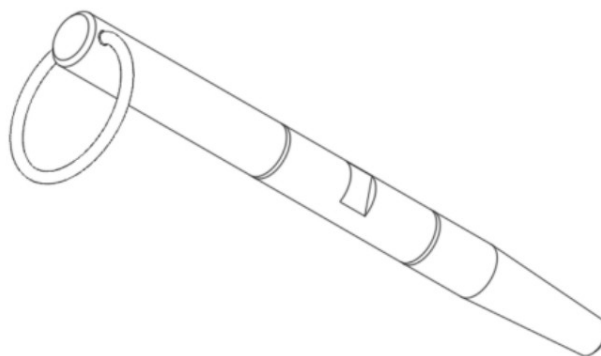

**Safety pin**

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Sigurnosni pin*

## Objašnjenje komponenti

- Kontrolna jedinica sadrži BLE radio, upravlja aktuatorom, laser senzorom i napajanjem.
- Baterijski paket je prenosivi izvor energije za standardni model. Moguće je koristiti i dvostruki baterijski paket, prema podržanoj konfiguraciji proizvođača.
- Integrisani solarni panel doprinosi dužem radu između punjenja, ali ne isključuje potrebu za periodičnim dopunjavanjem baterije.

- Sigurnosni pin povezuje aktuator i luk barijere. Projektovan je da pukne pri prekomernoj sili kako bi zaštitio ostatak sklopa.
- Laser senzor i magnetni senzor služe za detekciju prisustva vozila.


#### Stanja LED indikacije baterije

LED stanje	Opis
Isključena	Baterija je napunjena ili nije povezana na punjač.
Uključena	Baterija je povezana na punjač i puni se.
Treperi	Došlo je do greške pri punjenju. Punjenje odmah prekinuti.

#### Dimenzije

Dimenzije prikazane na tehničkom crtežu date su u milimetrima.

### 3.2. Dimensions

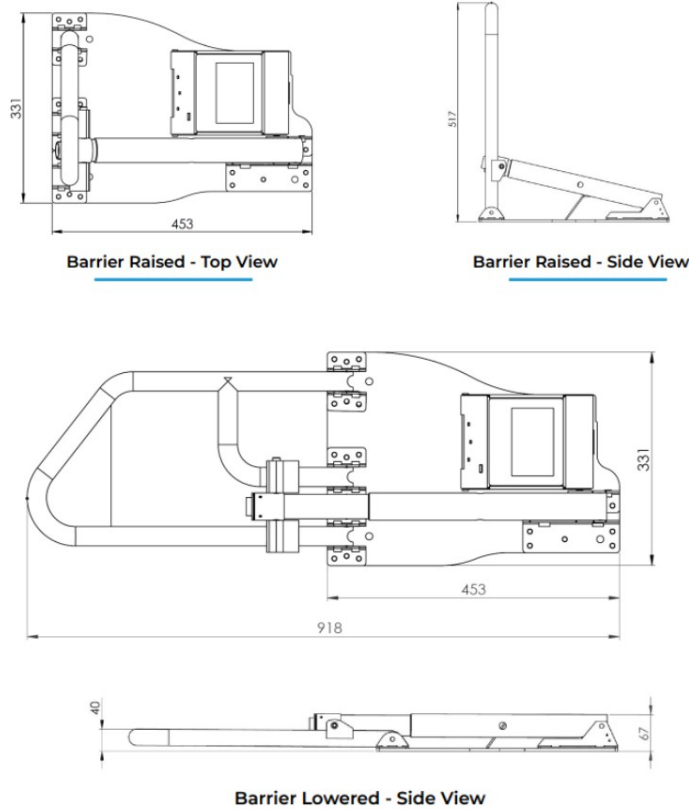

\*The dimensions depicted in the image are presented in millimeters.

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Tehnički crtež dimenzija*

### Tehnički podaci

Parametar	Vrednost
Dimenzije - otvorena barijera	918 x 331 x 70 mm
Dimenzije - zatvorena barijera	453 x 331 x 517 mm

Masa	15,2 kg
Radna temperatura	-20 °C do 60 °C
Radna vlažnost	5 % do 95 % RH, bez kondenzacije
Radna nadmorska visina	do 2000 m
Stepen zaštite	IP65
Nominalno vreme pokreta	< 5 s
Napajanje	Parklio baterijski paket, Parklio dvostruki baterijski paket ili AC/DC niskonaponsko stalno napajanje
Radni napon	6 Vdc - 11 Vdc
Potrošnja u radu	2 A kontinuirano, 8 A vršno
Potrošnja u stanju mirovanja	100 uA prosečno
Bežična veza	Bluetooth LE
OTA nadogradnje	Da
Antena	Interna 2.4 GHz antena
Senzori	Jedan magnetni senzor i jedan laser senzor klase 1
Zaštita i završna obrada	Hladno cinčano i lakirano, plastificirano, nerđajući čelik

## 4. Ugradnja i puštanje u rad

Pre konačnog ankerisanja u podlogu, preporučuje se vizuelni pregled proizvoda i probni rad. Uvek radite na ravnoj betonskoj podlozi i vodite računa da se pri podizanju sklopa ne prekorači graničnik dizanja motornog sklopa.

### Sadržaj pakovanja


- 1 x Parklio barijera
- 1 x Parklio baterijski paket (standardni model)
- 1 x adapter za punjenje baterije (standardni model)
- 1 x AC/DC napajanje (model sa stalnim napajanjem)
- 4 x anker vijka
- 2 x ključa
- 1 x sigurnosni pin
- 1 x korisničko uputstvo

### Raspakivanje i početna provera


- Proizvod se isporučuje sklopljen i zatvoren u kutiji.
- Nakon otvaranja ukloniti manju kutiju i podići luk barijere radi vađenja sigurnosnog pina.
- Barijeru iz kutije izvlačiti hvatanjem za bazu sa obe ruke - ne vući za luk barijere.
- Barijeru postaviti na ravnu betonsku podlogu i rasklopiti luk ka tlu.
- Pre ankerisanja proveriti da li postoje oštećenja i izvršiti probni rad.

### Umetanje sigurnosnog pina radi probnog rada

- 1) Otključati motorni sklop ključem tako da brava iskoči.
- 2) Podići motorni sklop do nivoa luka i provući sigurnosni pin kroz oba dela.
- 3) Podesiti pin tako da usek bude okrenut ka bravi, zatim ga potpuno gurnuti i blago rotirati dok se brava pritiska. Na kraju zatvoriti poklopac brave.

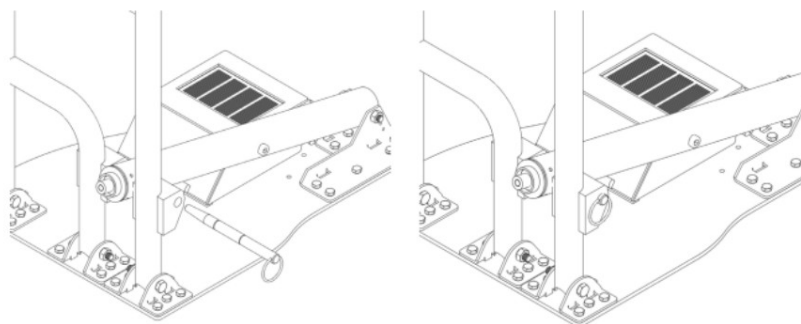

**STEP 3.** Adjust the safety pin so it is positioned in a way that the notch in the safety pin is pointing at the lock. Fully insert the safety pin and slightly rotate it while depressing the lock. Close the lock with the cover.

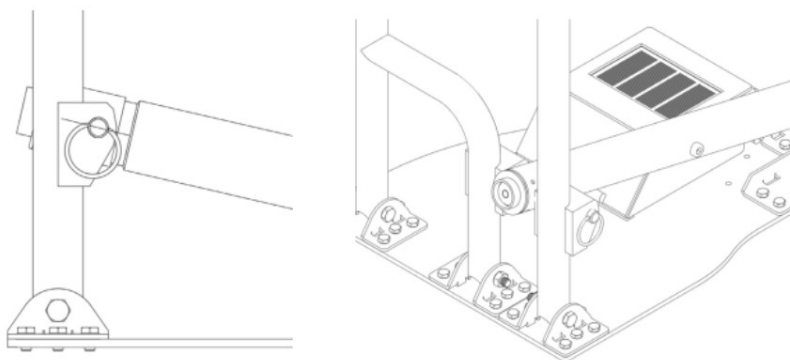

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Postupak umetanja sigurnosnog pina*


### **Predlog pozicioniranja**

Za optimalan rad preporučuje se pozicija u kojoj parkirano vozilo, kada je barijera otvorena, pokriva celu barijeru.

After that install Parklio Connect app as described in section 6 of the user manual and test the barrier by extending it and lowering it.

#### 4.4. Positioning the Barrier for Installation

The graphic below is just a suggestion on where to position the barrier. We do not condition the user's setup; however, for optimum barrier operation, we suggest positioning it in such a way that the parked car covers the whole barrier while the barrier is in the open position.

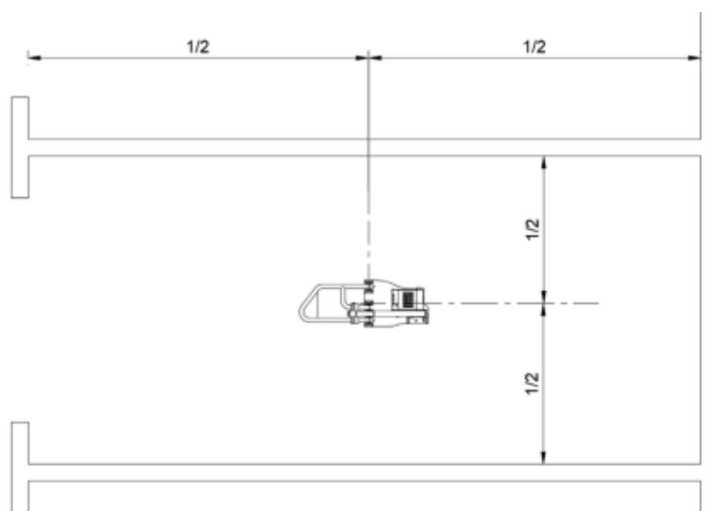

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Preporučeno pozicioniranje na parking mestu*

#### Alat za montažu

- Bušilica
- Čekić ili gumeni malj
- Karbidna burgija za beton 10 mm
- Nasadni ključ 13 mm

- Kod modela sa stalnim napajanjem: izolovani PH1 odvijač i ravni odvijač 2 mm

### **Važna napomena za pričvršćivanje**

Barijera se pričvršćuje isključivo anker vijcima u čvrstu podlogu, na način prikazan u ovom dokumentu. Ne preporučuje se zalivanje betonom ili drugi nestručni načini fiksiranja, jer mogu ometati pokretne delove.

#### **4.1. Montaža baze**


- Postaviti barijeru na željenu poziciju.
- Obeležiti četiri montažna otvora ili koristiti samu bazu kao šablon.
- Izbušiti rupe za anker vijke i očistiti prašinu.
- Poravnati bazu sa rupama, ubaciti anker vijke blagim udarcima malja.
- Zategnuti anker vijke nasadnim ključem.

#### 4.5.1 Mounting the Base

The below steps only apply if you are installing the barrier on a hard concrete surface. If installing the barrier on different surfaces, please advise the manufacturer of the best practices and tools for installation.

**STEP 1.** Position the barrier in accordance with the above instructions.

**STEP 2.** Mark the four mounting holes.

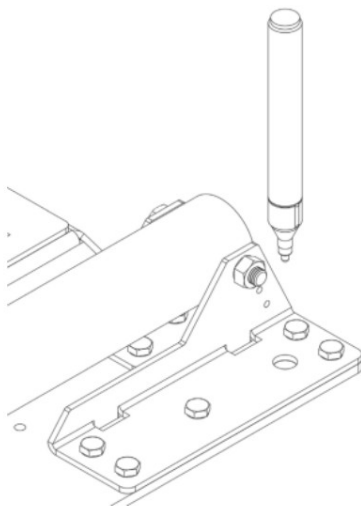

**STEP 3.** Drill the holes for the anchor screws. Clear the holes of any dust.


**Tip:** You can skip marking the holes and use the barrier base as the template. Make sure that the barrier base doesn't move while you drill, so you don't damage it.

---


[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Obeležavanje i bušenje rupa*

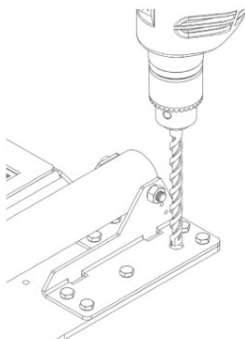

**STEP 4.** Place the barrier and align the mounting holes with the drilled spots. Insert the anchor screws by tapping them with a mallet.

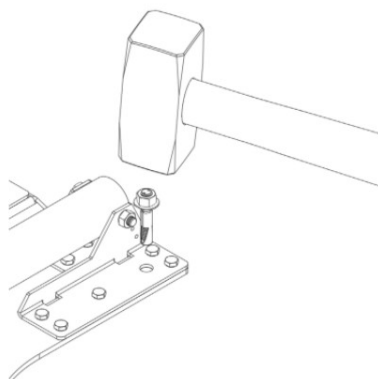

**STEP 5.** Tighten the anchor screws with a socket wrench.

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Postavljanje ankeri i finalno zatezanje*

#### 4.2. Model sa stalnim napajanjem (AC/DC)

Kod ovog modela baterijski paket se ne koristi. Svaka barijera mora imati sopstveno napajanje i zaseban kabl. Pre povezivanja izlazni napon napajanja podesiti na najnižu vrednost, približno 9,5 V.

- Minimalna dužina izlaznog kabla do barijere: 4 m.
- Maksimalna dužina izlaznog kabla: 25 m.
- Preporučeni presek kabla za napajanje: 1,5 mm.

- Kod dužih kablova može biti potrebno blago povećanje napona zbog pada napona na vodiu.
- Priključak je osetljiv na polaritet - obavezno održati isti polaritet na napajanju i konektoru.

#### 4.5. Installation of AC-Powered Barrier Model


The Parklio AC-power supply Barrier model uses an AC/DC low-output voltage supply to power the Barrier. The power supply is powered from the electric line and the supply output is fed to the barrier.

**The power supply replaces the battery pack. The battery pack and power supply cannot be used at the same time.**

To ensure safe and proper operation, please adhere to the following guidelines:

Before connecting the power supply to the barrier, **adjust the output voltage to the lowest setting (~9.5V)** using the adjustment potentiometer on the power supply.

**The output cable depicted in the image below is required to have a minimum length of 4 m. A shorter cable may lead to overvoltage at the barrier, potentially resulting in permanent damage to the control electronics.**

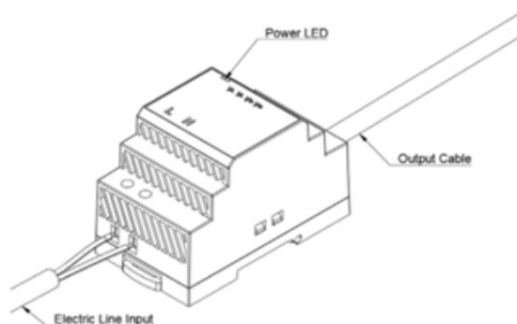

**Maximum cable length is 25 m. Use a 1.5 mm cross-section cable for power delivery to the barrier.**

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276




*Smernice za model sa stalnim napajanjem*

For longer cables, you may need to increase the voltage slightly to compensate for voltage drop and ensure proper functionality of the barrier.

Each barrier must be fed by its own power supply and by a separate cable. One supply cannot be used for multiple barriers.

Failure to follow these instructions may result in permanent damage to the device.

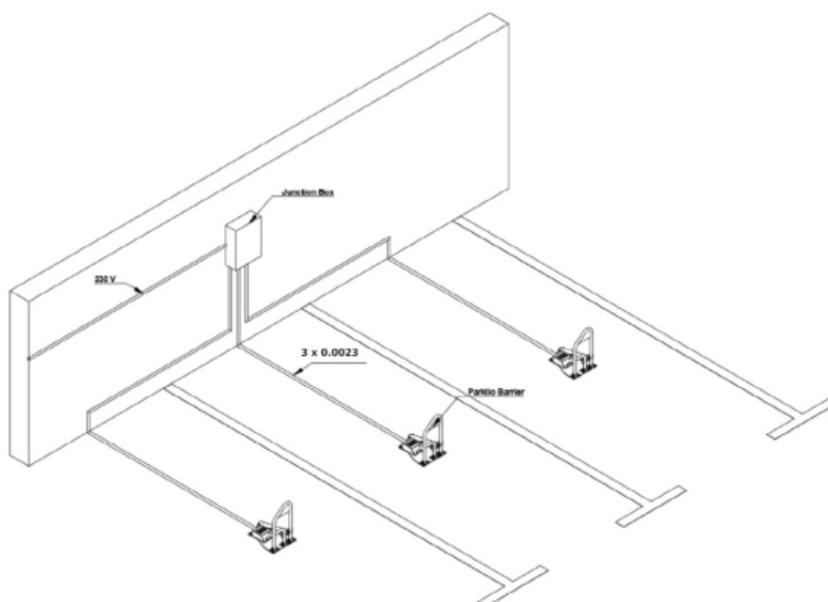

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276




*Primer rasporeda više parking mesta i napajanja*

### **Povezivanje napajanja - sažet postupak**

- Dovedi instalaciju do barijere i provući kabl kroz bazu.
- Rastaviti adapter konektor predviđen za stalno napajanje.
- Uvesti provodnik i povezati ga prema šemi, uz poštovanje polariteta.
- Sastaviti konektor i spojiti ga sa kablom ka barijeri.

- Napajanje priključiti na električnu mrežu 230 V / 50 Hz ili 120 V / 60 Hz, preko odgovarajuće zaštite.
- Nakon uključjenja proveriti LED na napajanju i spojiti DC priključak na kontrolnu jedinicu barijere.

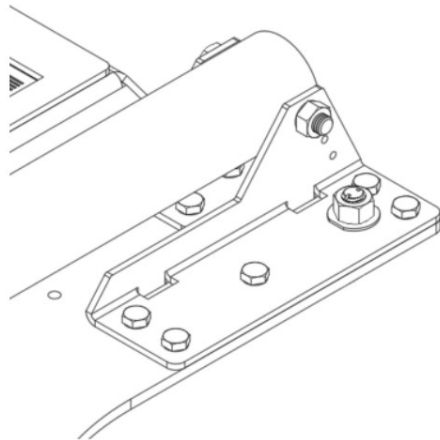

#### 4.5.2. Installing the Power Supply

The power supply must be fed by a 230 V / 50 Hz or 120 V / 60 Hz electric line, protected by a differential magnetothermal switch complying with the law provisions in force. Connect the electric line wires to terminals L and N on the power supply. Connect the power supply + and - terminals to the cable leading to the barriers.

**STEP 1.** Bring the necessary infrastructure to the barrier. Feed the supply cable through the barrier base.

**STEP 2.** The barrier is provided with an adapter cable for connecting it to the constant supply. Disassemble the adapter.



FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276




*Adapter i provlačenje kabla*

**STEP 3.** Insert the power cable and connect it as shown.

**The supply is polarity sensitive; use caution when connecting the cable to the power supply and connector.**

Maintain the same polarity on the connector and the power supply

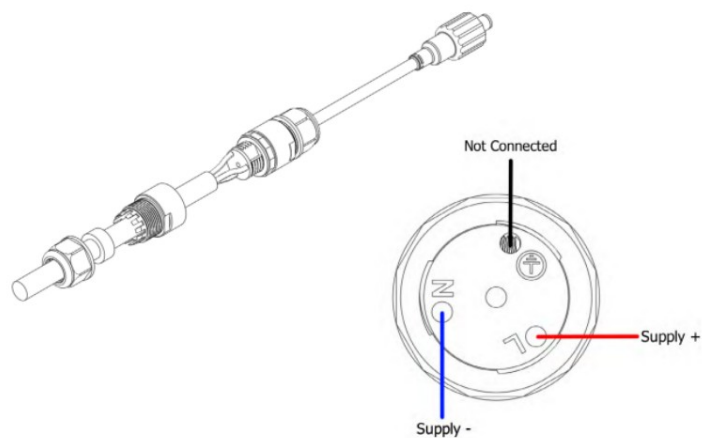


[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276




*Šema polariteta konektora*

**STEP 4.** Assemble the connector.

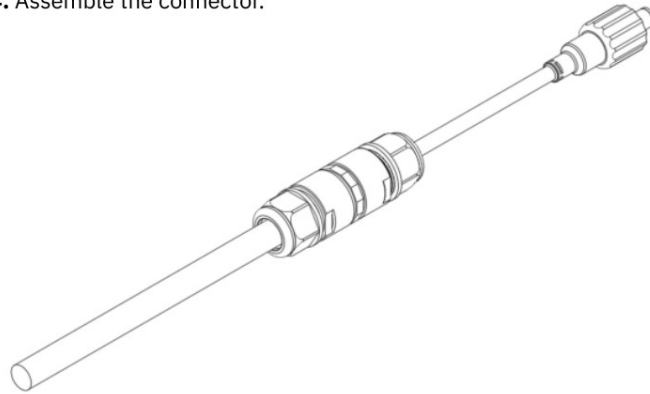

**STEP 5.** Connect the power supply to the cable running to the barrier.

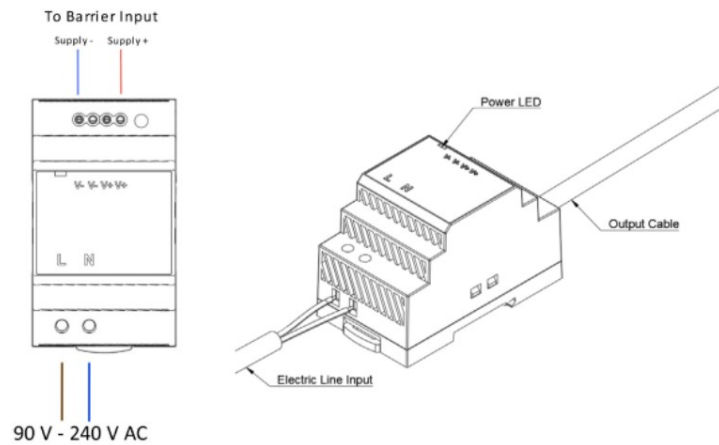

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Sastavljanje konektora i povezivanje na napajanje*

**STEP 6.** Connect the power supply to the electric line.

**Disconnect all power while installing the barrier power supply. Make sure the electric installation is adequately protected and installed according to the laws in force.**

**STEP 7.** Turn on the power. The LED on the power supply should power on indicating that the supply is functioning.


**STEP 8.** Connect the power supply jack to the barrier.

#### 4.5.3. Connecting the Power

**STEP 1.** Plug in the power supply jack to the control unit input.



**STEP 2.** Position and tighten the cap.

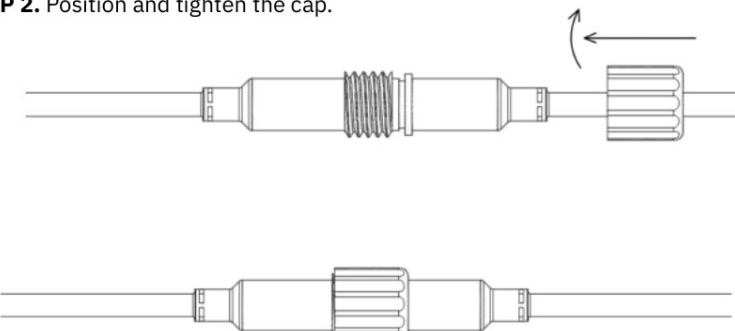

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Spajanje DC priključka na kontrolnu jedinicu*

### 4.3. Standardni model sa baterijom

Standardni model koristi Parklio baterijski paket, a solarni panel doprinosi većoj autonomiji rada.

- Nakon montaže baze poravnati baterijski paket sa kontrolnom jedinicom.
- Baterijski paket pričvrstiti na bazu pomoću čičak spoja na donjoj strani.
- Obavezno zatvoriti ulaz punjača kako bi se sprečio prodor vode.


- Nakon umetanja baterije izvršiti početno podešavanje putem aplikacije i zaključati poklopac.

#### 4.6.1 Mounting the Base

The below steps only apply if you are installing the barrier on a hard concrete surface. If installing the barrier on different surfaces, please advise the manufacturer of the best practices and tools for installation.

**STEP 1.** Position the barrier in accordance with the above instructions.

**STEP 2.** Mark the four mounting holes.

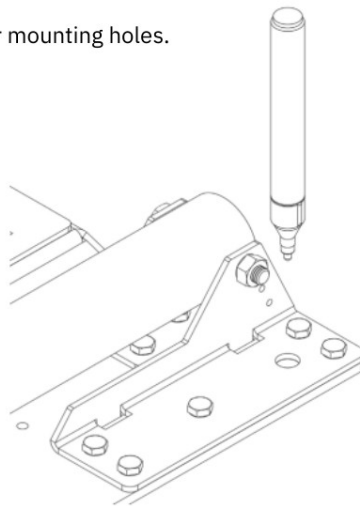


**STEP 3.** Drill the holes for the anchor screws. Clear the holes of any dust.

**Tip:** You can skip marking the holes and use the Barrier base as the template. Make sure that the Barrier base doesn't move while you drill, so you don't damage it.


[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Montaža baze - standardni model*

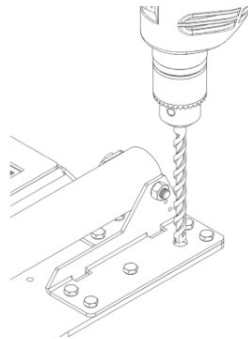

**STEP 4.** Place the barrier and align the mounting holes with the drilled spots. Insert the anchor screws by tapping them with a mallet.

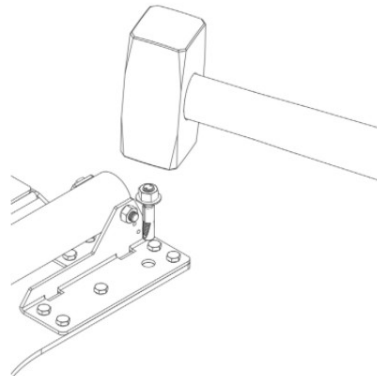


**STEP 5.** Tighten the anchor screws with a socket wrench.

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
[+385977247276](tel:+385977247276)



*Ankerisanje baze - standardni model*

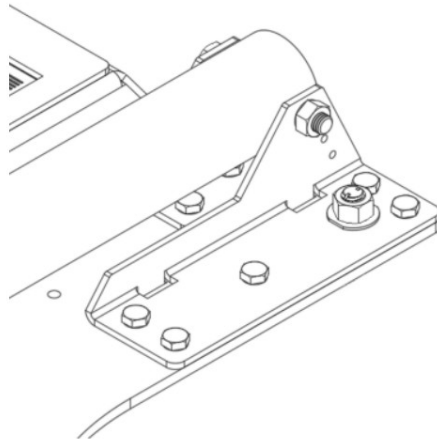

#### 4.6.2 Inserting the Battery

To install the battery pack, align the Parklio Battery Pack with the Control Unit and attach it to the Barrier base using the velcro joint on the bottom of the battery pack and on the barrier.

**Take caution to plug the charging port input to prevent water ingress.**

#### 4.6.3. Final Steps

After installing the battery pack, perform the initial setup of the Barrier through the mobile application as described in this manual (Chapter 6). Lower the barrier cover and lock it. The barrier is ready for use.

---

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Umetanje baterijskog paketa*

## 5. Upravljanje barijerom

Barijerom je moguće upravljati na više načina, u zavisnosti od odabrane opreme i sistema.

- Putem mobilne aplikacije Parklio Connect preko Bluetooth veze.
- Putem namenski predviđenog daljinskog upravljača.
- Putem centralizovanog sistema Parklio PMS za upravljanje većim brojem barijera i korisnika.

Za krajnjeg kupca najvažnije je da nakon fizičke montaže izvrši početno uparivanje uređaja sa korisničkim nalogom u aplikaciji, a zatim testira podizanje i spuštanje barijere.


### Reset digitalnog ključa

Digitalni ključ se dodeljuje kada se barijera doda na korisnički nalog. Za reset pritisnuti i držati taster Reset približno 3 sekunde, sve dok se ne upali zelena LED. Nakon resetovanja biće potrebno ponovo dodeliti vlasnički ključ i sve deljene ključeve.

To ensure you always have access to the latest features and improvements, regularly visit the [Parklio Support Page](#) for updated user manuals and additional resources. Staying informed on new access control solutions will help optimize your Parklio™ Barrier for a seamless and secure parking experience.

### 5.1. Barrier Key Reset

The Barrier digital key is set once the Barrier is added to a user account. This key can only be removed by resetting it. **The reset is done by pressing and holding the Reset button for 3 seconds until the green LED lights up.** When the Barrier is in the reset state it can be added again to a user account via the Parklio Connect application.

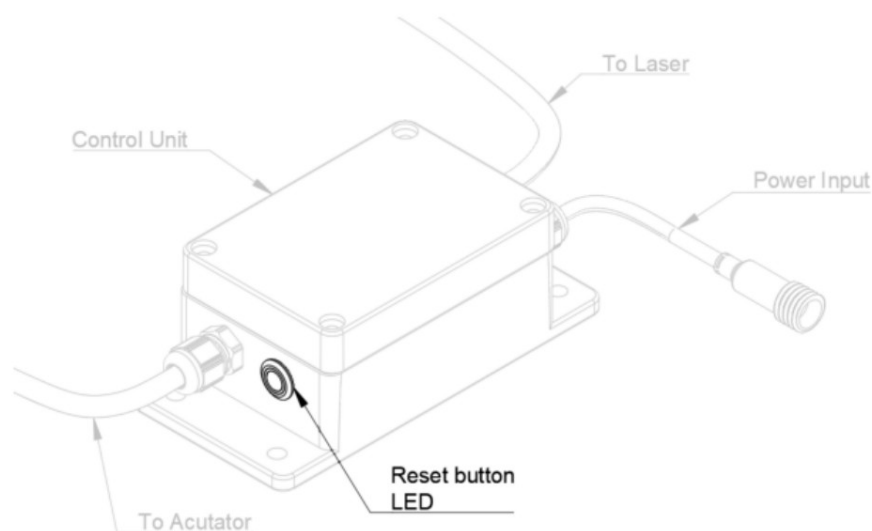

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Položaj tastera Reset na kontrolnoj jedinici*

### Ručno upravljanje


- Otključati bravu sigurnosnog pina priloženim ključem.
- Držeći luk i aktuator, izvući sigurnosni pin.
- Pažljivo spustiti aktuator i luk barijere.
- Za povratak u normalan režim rada ponovo ugraditi sigurnosni pin.

**Resetting the Barrier digital key will cause all the shared guest keys and the owner key to be unusable. It will be necessary to resend all guest keys individually.**

## 5.2. Manual Barrier Control

To manually open the barrier, unlock the safety pin lock using the provided key, afterer that remove the safety pin while holding the barrier arch and actuator in place. Gently lower the actuator and the barrier arch.

To restore normal functionality just install the safety pin back.

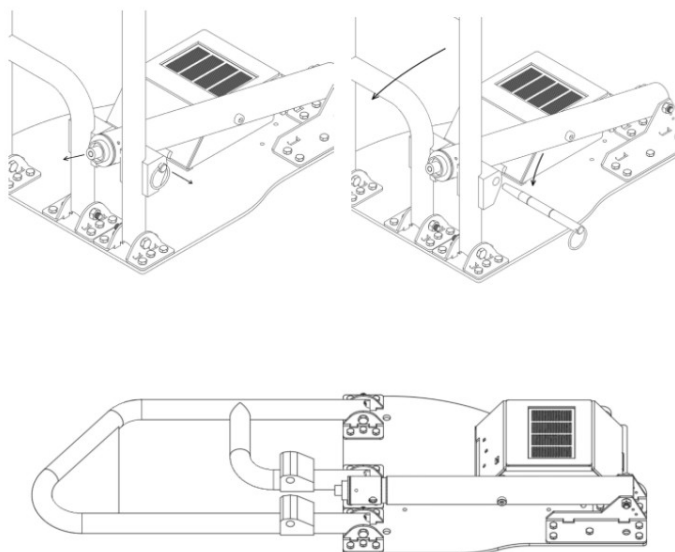

FAQ  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Ručno otvaranje i vraćanje sigurnosnog pina*

## 6. Čišćenje i održavanje

Pre bilo kakvog čišćenja ili održavanja potrebno je isključiti napajanje. Deca ne smeju čistiti niti održavati uređaj bez nadzora.

## Čišćenje laserskog senzora

Prljavština, blato, tragovi vode i druge nečistoće mogu zakloniti senzor i dovesti do nepravilnog rada. Nečistoće ukloniti ručno, a staklo senzora obrisati čistom mekom krpom. Po potrebi se može koristiti izopropil alkohol (IPA).


## 6. Cleaning and maintenance

Prior to initiating any cleaning or maintenance procedures for the device, it is essential to disconnect the power supply.

Children should not clean nor maintain the barrier without proper supervision.

### 6.1. Cleaning the Laser Sensor

Continued use of the device may result in the accumulation of dirt particles, mud, water stains, and other impurities that can obstruct the laser sensor's view. This may lead to undesired product behavior. To clean the laser sensor remove any obstructions by hand and clean the laser sensor glass cover with a clean cloth. You may use isopropyl cleaning alcohol (IPA) to clean the glass of any stains.

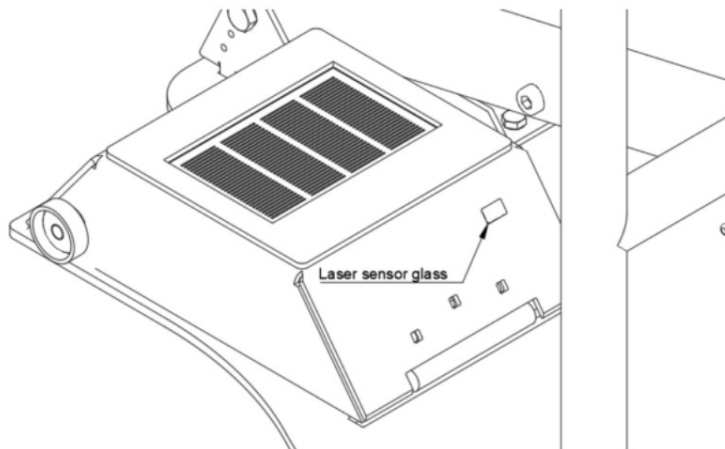

[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
+385977247276



*Položaj stakla laserskog senzora*

## Ostale smernice održavanja

- Unutrašnjost poklopca čistiti samo suvom čistom krpom i četkom za prašinu.

- Spoljašnjost se može prati vodom, a veće mrlje blagim neabrazivnim deterdžentom.
- Redovno uklanjati lišće, grančice i druge prepreke oko barijere.
- Ako sigurnosni pin pukne usled prekomerne sile, zameniti ga novim pinom prema postupku iz poglavlja o početnoj proveru.

## 7. Odlaganje uređaja

Ambalaža je izrađena od materijala koji se mogu reciklirati. Istrošenu bateriju izvaditi iz uređaja i odložiti na odgovarajuće mesto za sakupljanje baterija. Sam uređaj ne treba odlagati kao običan komunalni otpad, već ga predati ovlašćenom centru za elektronski i električni otpad.

## 8. Prilozi: slike, tehnički crteži i izjava o usaglašenosti

U originalnoj dokumentaciji nalaze se i izjave o usaglašenosti za RED, FCC i ISED. Za prodaju na našem tržištu naročito je značajna izjava o usaglašenosti proizvođača i tehnička dokumentacija koju isporučuje Parklio. Slika sertifikata iz originalnog dokumenta data je ispod radi reference.

## 8. Declaration of Conformity to RED



[FAQ](#)  
[www.parklio.com](http://www.parklio.com)  
[info@parklio.com](mailto:info@parklio.com)  
 +385977247276



*Izjava o usaglašenosti iz originalne dokumentacije*

### Kratka napomena za prodaju

Prilikom prodaje kupcu preporučujemo da uz ovaj prevedeni dokument budu dostavljeni i: predračun/račun, garantni uslovi, kontakt za tehničku podršku, kao i eventualna dodatna uputstva za aplikaciju, daljinski upravljač ili centralni PMS, ako su predmet isporuke.