

# BT-65100X

## Electrical/Watery requirements

1 Switch controlled by main power supply: Install a small circuit breaker which has electricity leakage protection and with 32A anti-water. It can be installed in a place that can be easily operated. Please cut off the power supply after every usage, to make sure the computer control system safety. (shown as following A)

2 power supply: rated voltage 220V/50Hz, 16A anti-water socket, three-core 4 mm<sup>2</sup> copper cable. The socket should be placed as out as possible, which is convient for maintenance. (shown as following B)

3 water supply: G1/2 cold-hot water hose each, both hoses should be installed with shut-off valve. (shown as following C)

4 Draining: try to focus on draining position shown in the drawing. If not, the drainer should be placed within 200mm from drainer position, and the diameter should be less than 50mm (shown as following D)

5 Maintenance area: Please leave space 500mm or more around the bathtub for future maintenance. Please do not install any fixed objects in this free area. (shown as following E)

