










INSTALLATION MANUAL

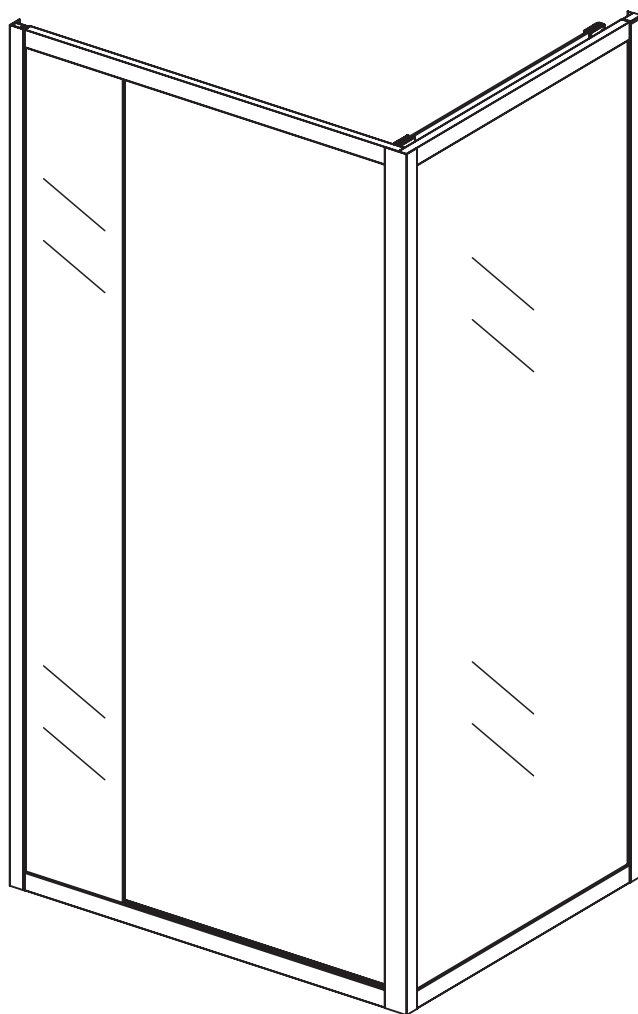



BL-059

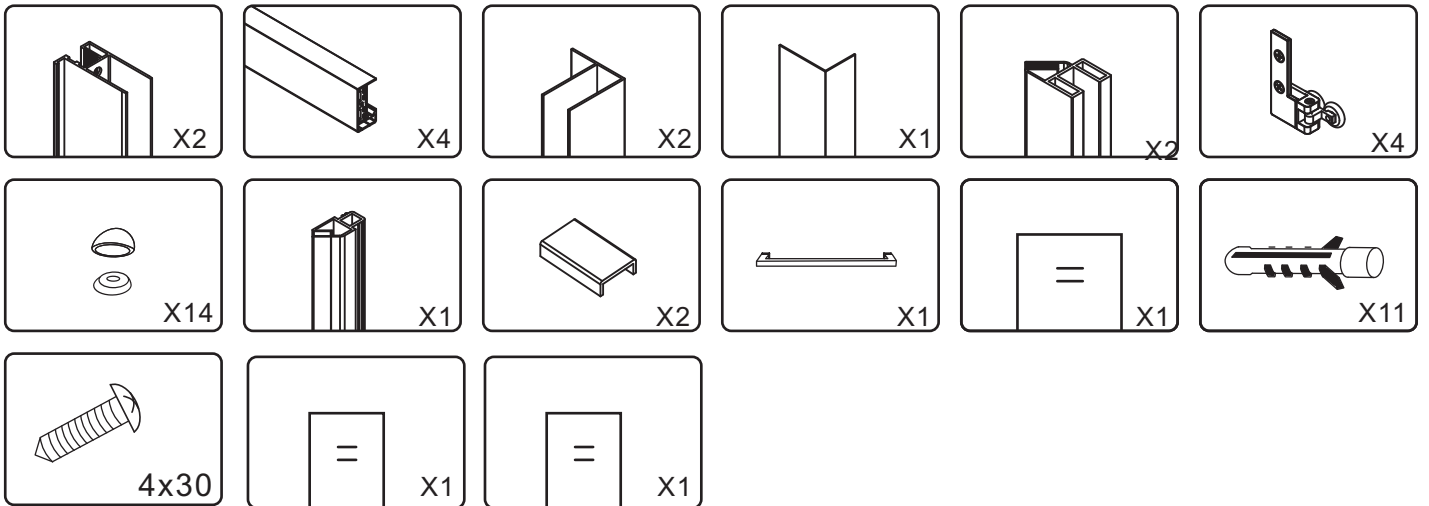

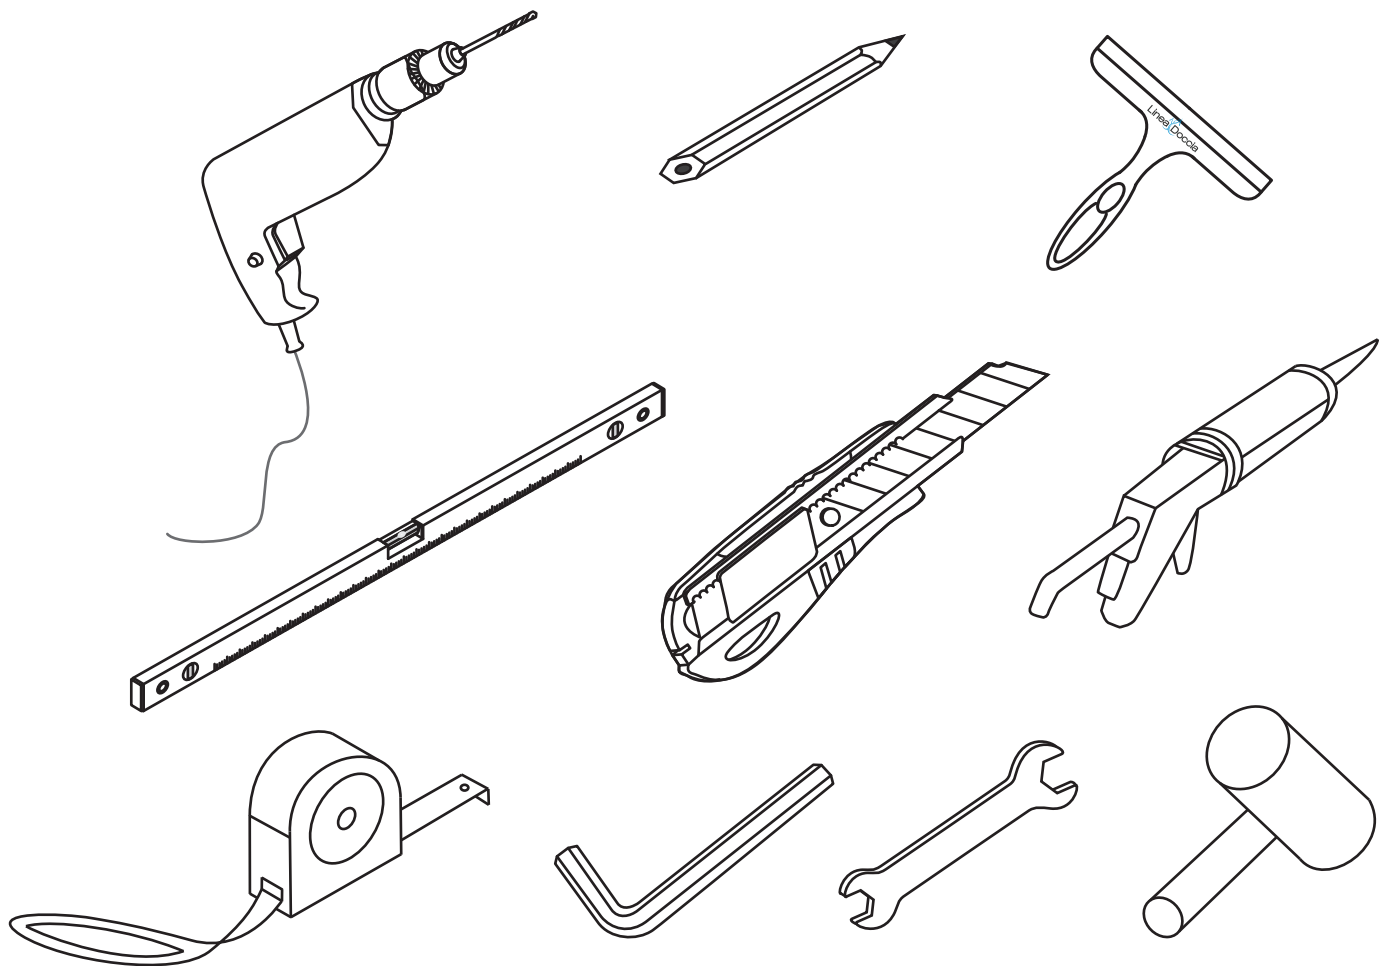


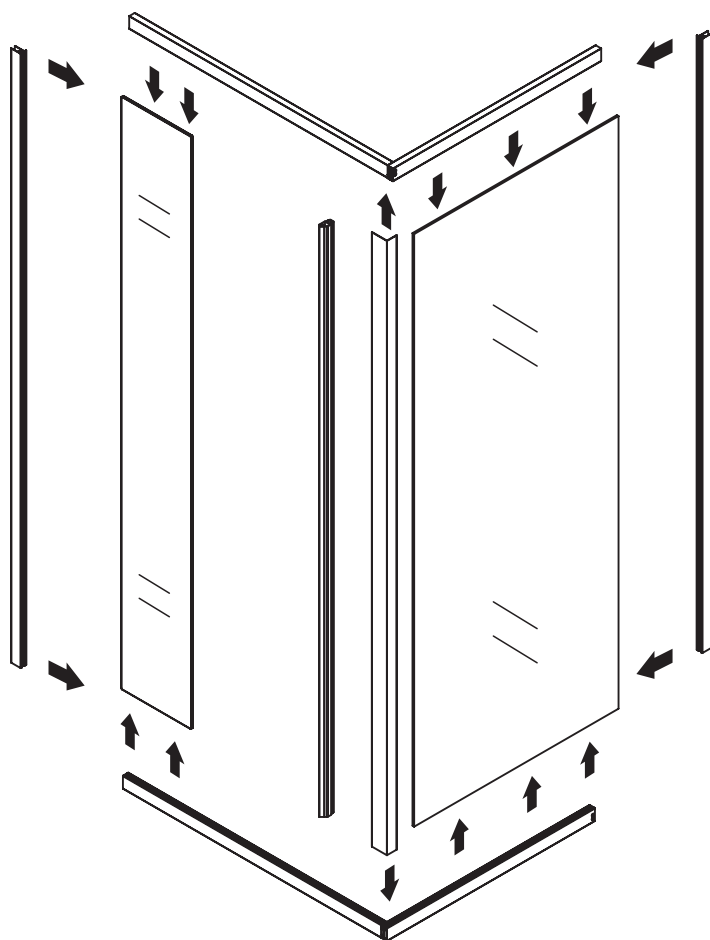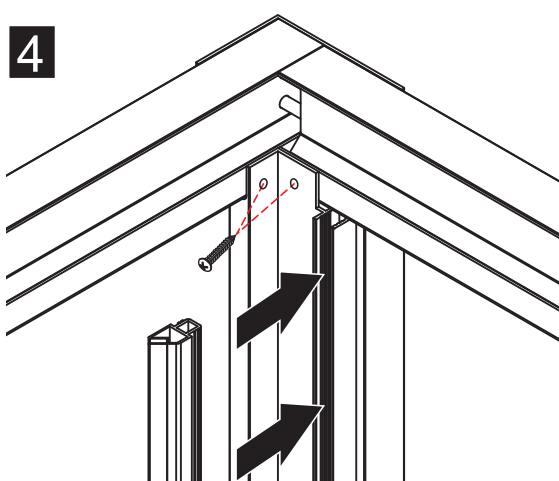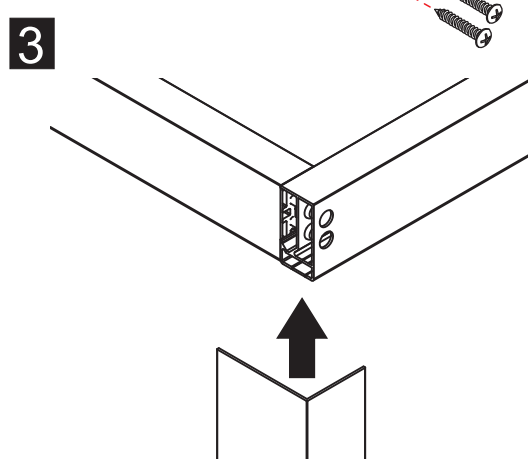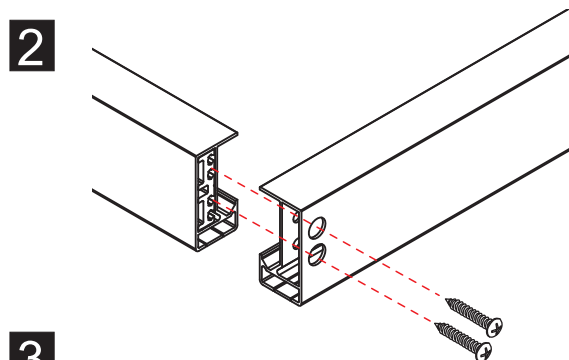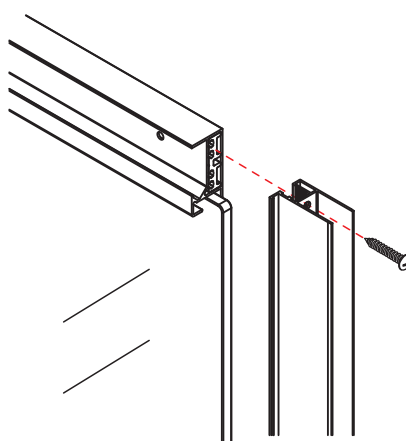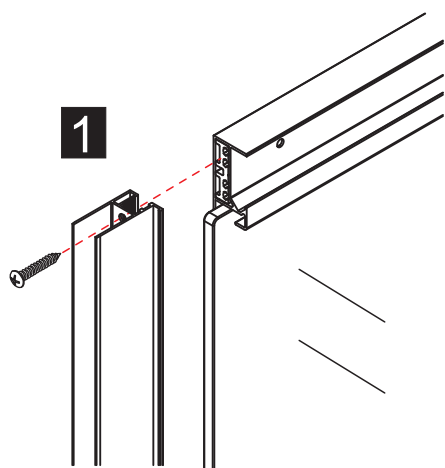



1

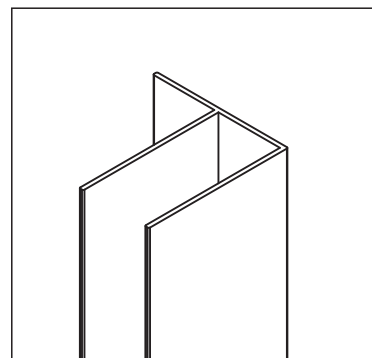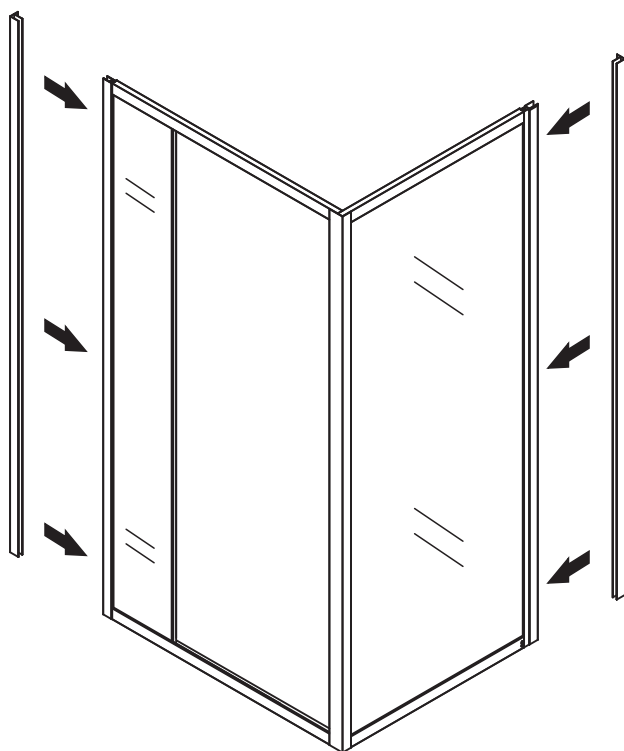


2

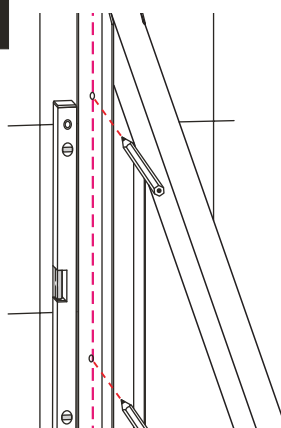


3


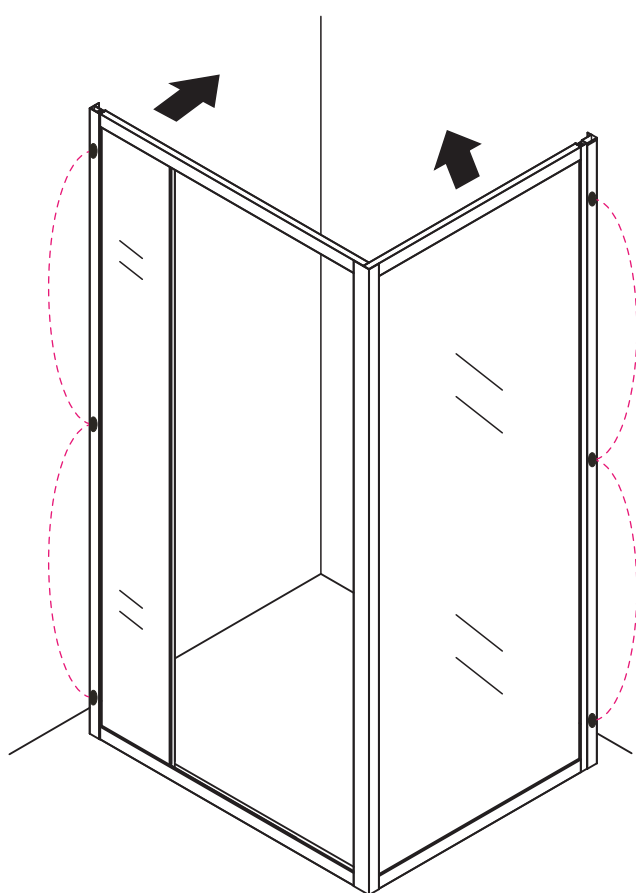
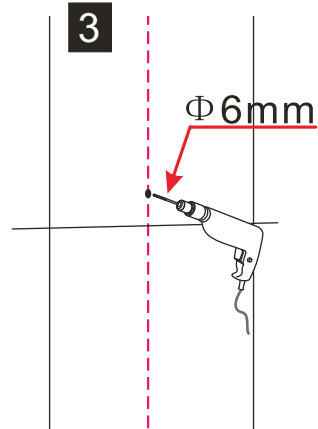







4

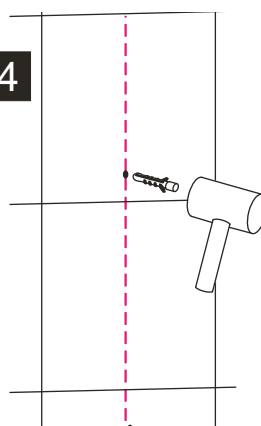


5

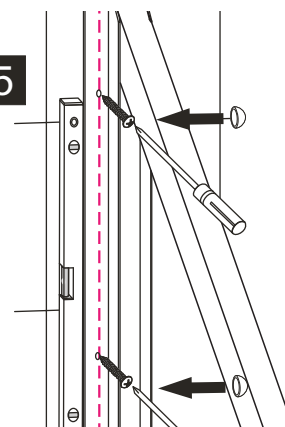

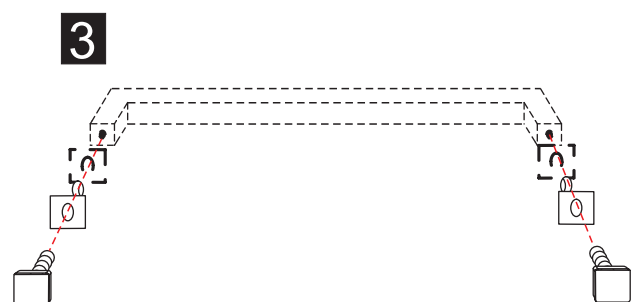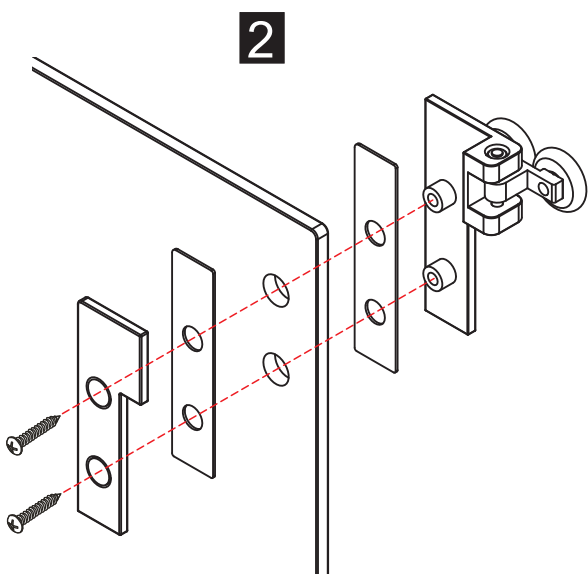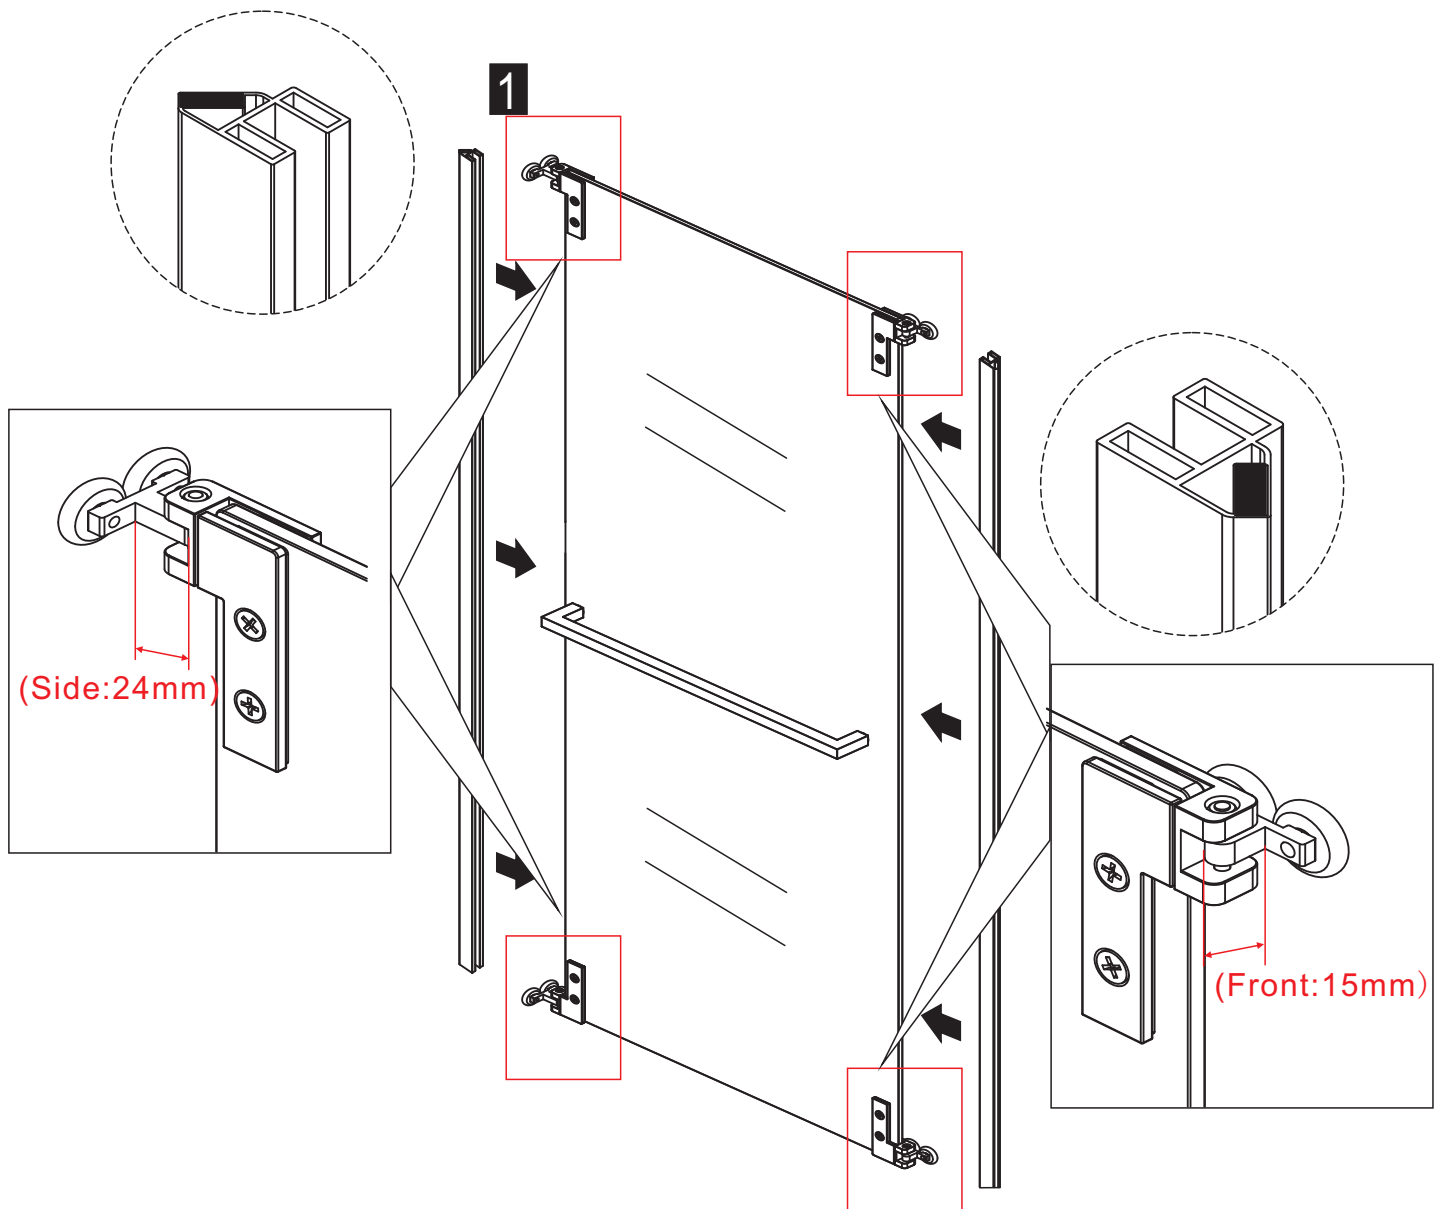


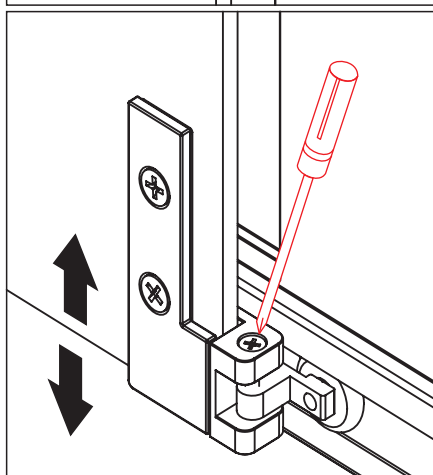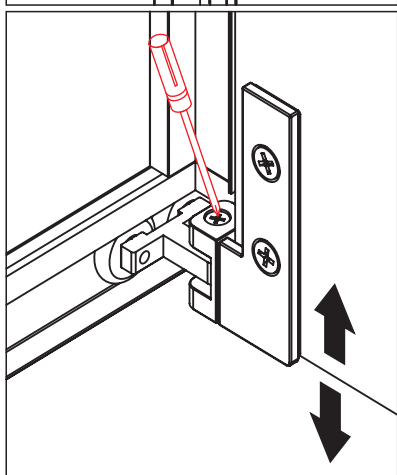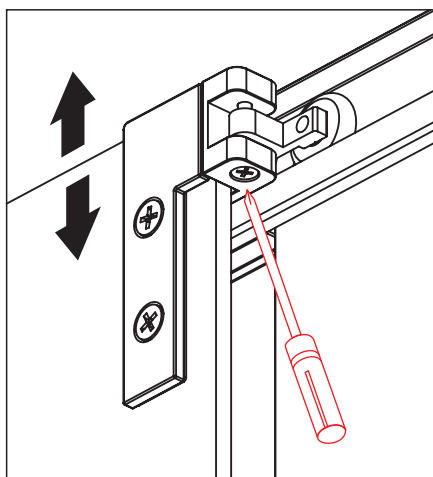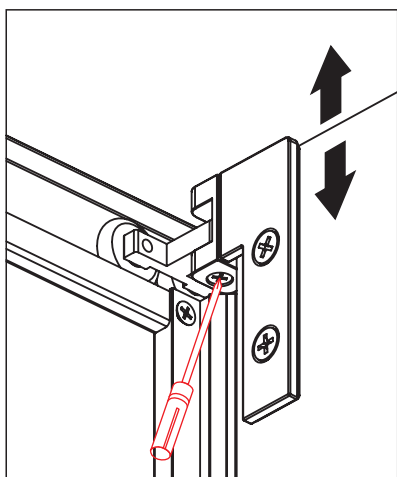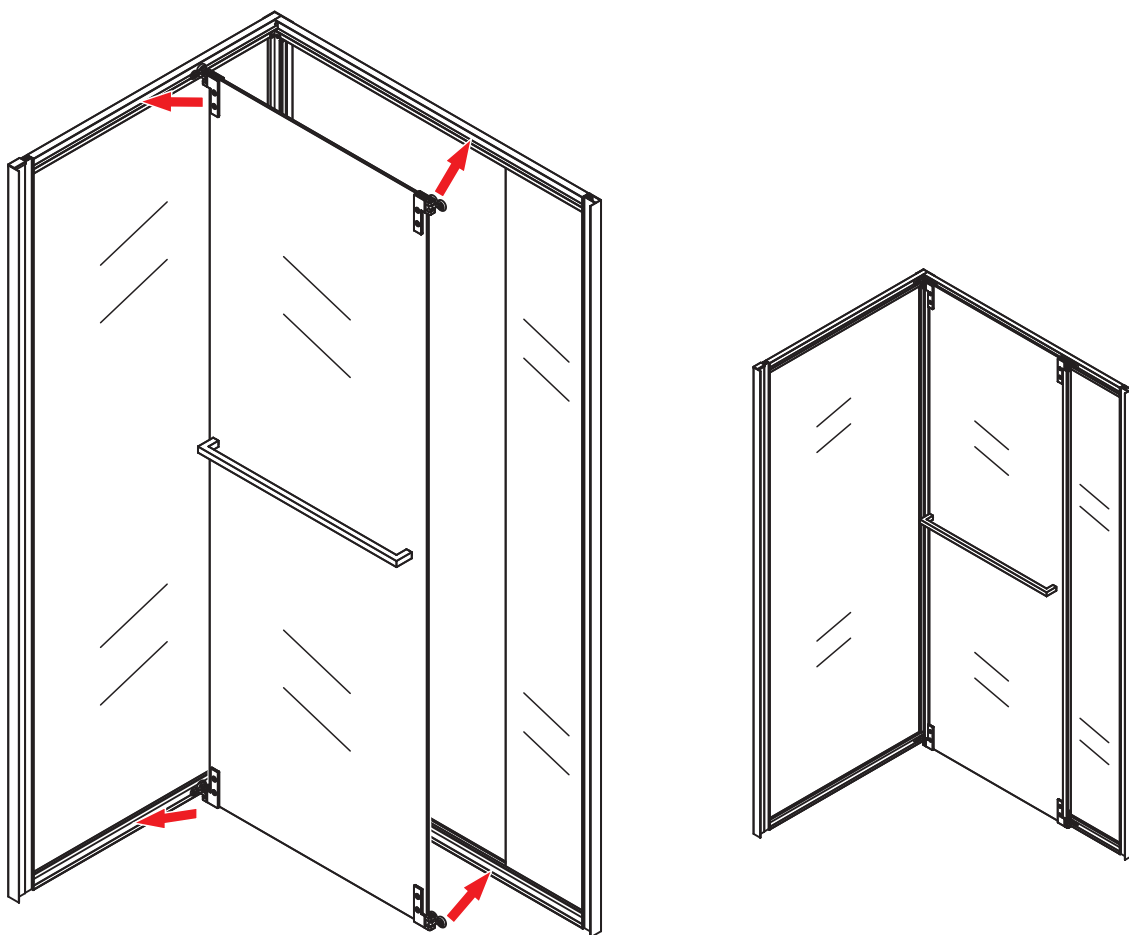

1

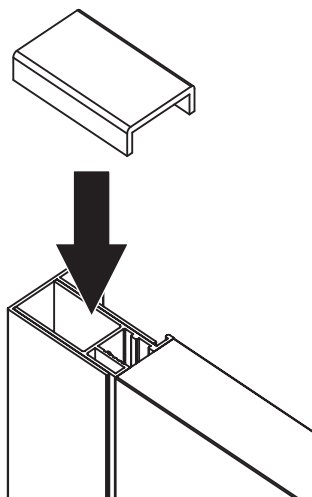

2

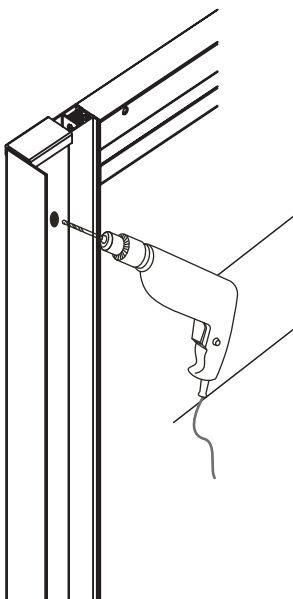

3

