


**NANLITE**

***Forza 150B***  
USER MANUAL

Guangdong NanGuang Photo&Video Systems Co., Ltd

# Forza 150B LED Bi-color Spot Light

## ■ Product Diagram

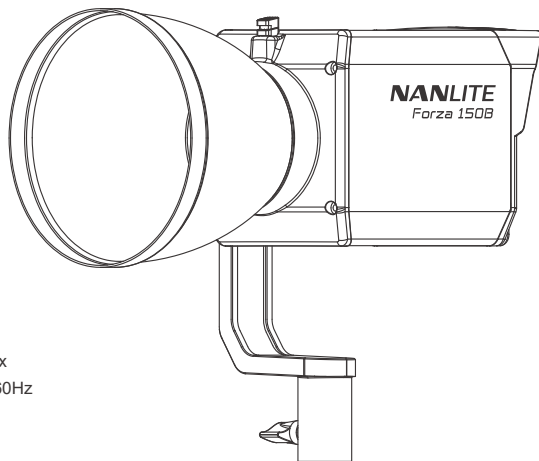

## ■ Technical Data

Rated Power: 170W

Input voltage/current: DC 24V/7.5A Max


AC100-240V 50/60Hz

Color Temperature: 2700K-6500K

CRI: Average 96

TLCI: Average 98

# Product Details

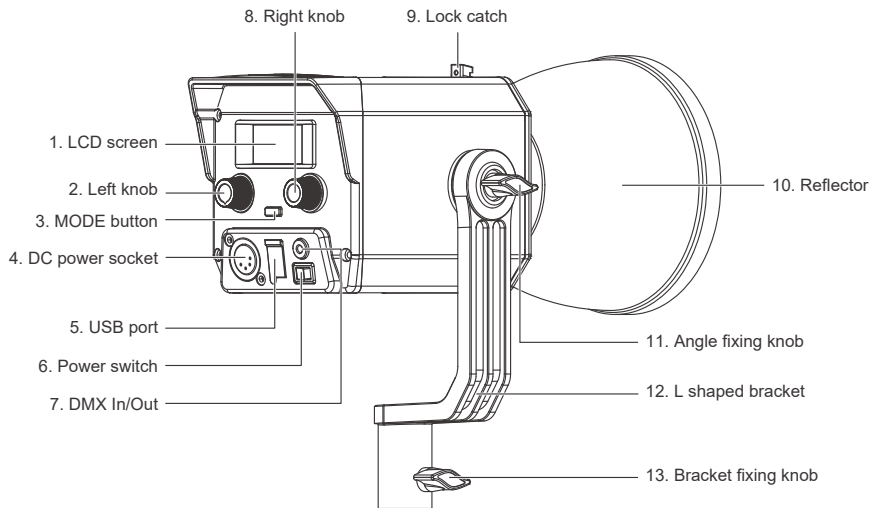


## Detailed Description

1. LCD screen: For displaying various function, operations and data.
2. Left knob: For adjusting the DIM and scrolling through different selections.
3. MODE button: For switching between CCT mode, EFFECT mode and MENU.
4. DC power socket: DC power input socket
5. USB port: For updating firmwares or connecting USB cable to external devices with maximum current of 5V/0.5A.
6. Power switch: For switching on/off the fixture.
7. DMX In/Out: Connect to CB-DMX-3.5C-1/2 DMX Adapter Cable for DMX signal input and output.  
(Note: CB-DMX-3.5C-1/2 is sold separately).
8. Right knob: For selecting various functions and adjusting the color temperature.
9. Lock catch: For mounting and dismounting reflector and other accessories.
10. Reflector: For gathering light to improve the central illumination.
11. Angle fixing knob: Allows for adjusting and fixing the direction of light in tilt.
12. L shaped bracket: Designed for connecting the light to the light stand and adjusting the direction of light.
13. Bracket fixing knob: For locking the light fixture on the stand, and adjusting the direction of light in pan.


## Usage

### 1. Installation of the Reflector

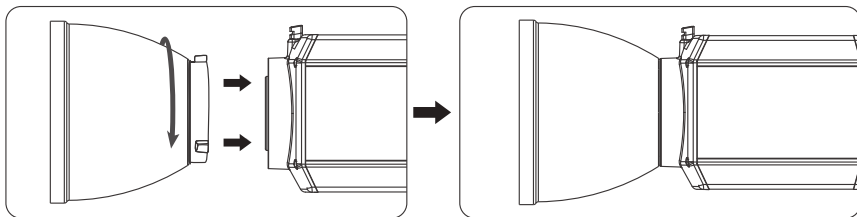


① When installing the reflector, ensure its mounting points align with the slots on the light fixture. When the mounting points and slots are aligned, push the reflector in place and rotate it in the direction shown on the light until it clicks into place.

Note: This light is with FM mount, so please use accessories with FM mount. If the accessories with Bowens mount are needed, please mount after installing the Bowens mount adapter.

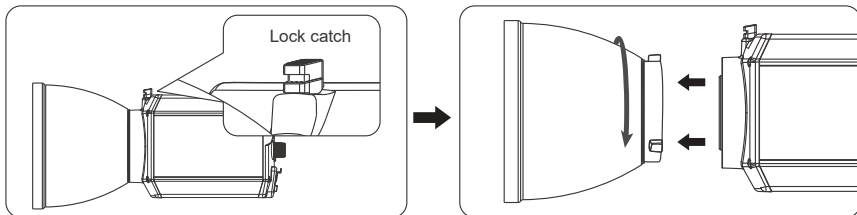


② When removing the reflector, push and hold the lock catch and rotate until the reflector is free to be removed from the fixture.


## 2. Installation of Bowens Mount Adapter

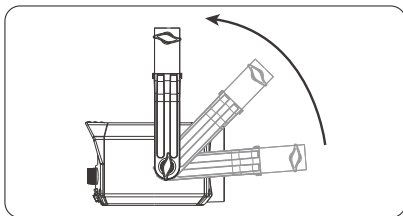


① Adjust the L bracket to the overhead position first.

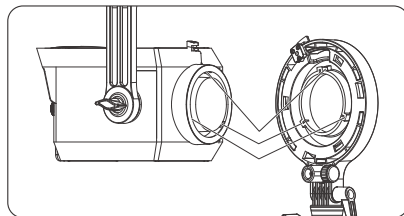


② When installing the adapter, ensure its mounting points align with the slots on the light fixture, rotate it according to the direction shown on the light until the adapter is put into place.

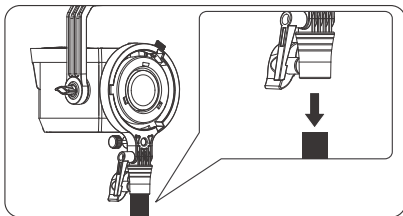


③ Mount the adapter on the light stand.

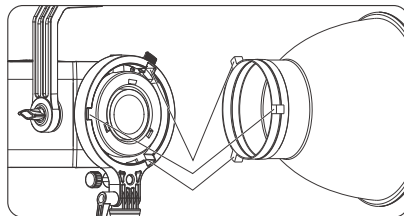

④ Ensure the Bowens mount accessories align with the slots of the Bowens mount adapter, rotate it according to the direction shown on the adapter until the accessories are put into place.

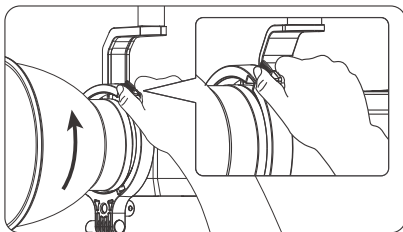

⑤ When removing the accessory, push and hold the release button on the adapter and rotate according to the direction shown on the adapter until the accessory is free to be removed from the adapter.

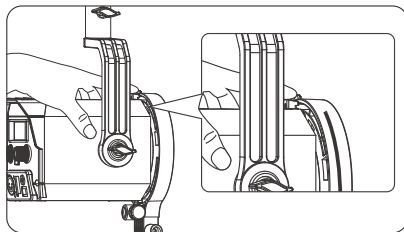


⑥ When removing the adapter, push and hold the lock catch on the fixture and rotate according to the direction shown on the light until the adapter is free to be removed from the light.


## Remote Control

 - Forza 150B supports 2.4G remote control, DMX/RDM control, and includes a built-in Bluetooth module as well.
- ▲ Address code need to be pre-set for 2.4G remote control, DMX/RDM control solutions.
- 1. Address Code and DMX Mode Setting, including CHANNEL, DMX MODE, DMX REDUCED CHANNELS, DMX DIMMING CURVE and DMX SMOOTHING settings.

### ① Address Code Setting



 Press the MODE button to enter the menu.



Rotate "Right knob" to CH.



Rotate "Left knob" to select address code.

## ②DMX Mode Setting



Press the MODE button to enter the menu.



Rotate "Right knob" to DMX MODE.




Rotate "Left knob" to select the desired DMX mode.

### ③DMX REDUCED CHANNELS



Press the MODE button to enter the MENU.

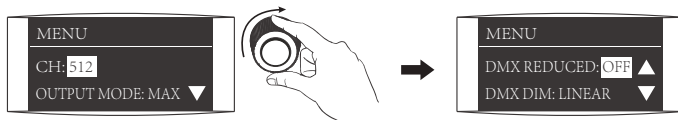

Rotate the "right knob" to DMX REDUCED CHANNEL .



Rotate the "left knob" to select ON or OFF.

#### ④DMX DIMMING CURVE



Press the MODE button to enter the MENU.



Rotate the "right knob" to DMX DIM CURVE.



Rotate the "left knob" to select LINEAR, EXPONENT, LOGARITHM, S CURVE or GAMMA 2.2.

#### ⑤DMX SMOOTHING



Press the MODE button to enter the MENU.



Press the MODE button to enter the MENU.



Rotate the “left knob” to select ON or OFF.


## 2. DMX Control

① Connect the fixture to the DMX/RDM consoles via DMX cable as shown below:




## ②DMX Terminator

In DMX control mode, the DMX output of the last light fixture should be connected with a DMX terminator (not included). The terminator is connected with a  $120\Omega$ (OHM) resistor across Pin 2 and Pin 3 (As shown below). This prevents interference caused by DMX signals in the transmitting process.

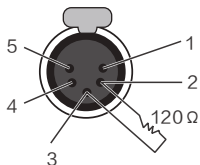

**DMX Terminator Connection**  
Connect a  $120\Omega$ (OHM) resistor across Pin 2 and Pin 3 in an XLR plug and insert into the DMX OUT socket on the last unit.

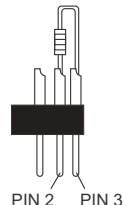

## ③Address Setting of the Light Fixture.

④Refer to the DMX reference guide and control the light via DMX/RDM console. (For detailed operation please refer to the DMX/RDM console operation manual.)


Note: DMX reference guide "Forza\_150B\_REFERENCE\_GUIDE\_EN" is downloadable from [www.nanlite.com](http://www.nanlite.com).



Please scan the QR to check and download the latest DMX reference guide.

### 3. RDM Control

- ① Connect the light fixture to the console with RDM function by using a connection cable, the connection method is the same as that with a DMX/RDM console.
- ② Control the fixture via a console with RDM function. (For specific operation methods, please refer to the RDM console operation manual.) Note: The UID format of the fixture is as follows:

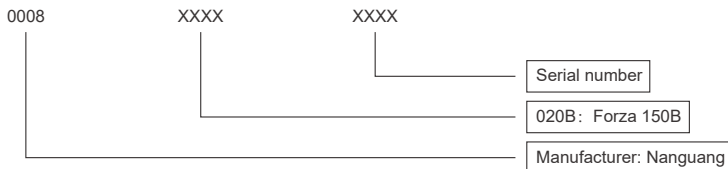

### 4. 2.4G Remote Control

- The Forza 150B can be remotely controlled by 2.4G remote controller or NANLINK transmitter box. The Forza 150B also has built-in Bluetooth connection functionality, so it can be controlled via Bluetooth module.

Note: ① 2.4G remote controller and NANLINK transmitter box are sold separately.

- ② The fixture supports the 2.4G wireless protocol V1.0 and V2.0. The fixture should be set in V2.0 while using WS-RC-C1 or WS-RC-C2 remote controller, set in V1.0 while using other remote controllers.



Press MODE button to enter the menu.



Rotate "Right knob" to WIRELESS PROTOCOL.




Rotate "Left knob" to select V1.0 or V2.0.

## Operating Instructions

### 1. Connection between fixture and power adapter.

- ① First ensure that the power switch is off. Now turn on the light, the LCD screen will display all the relevant information for the fixture.

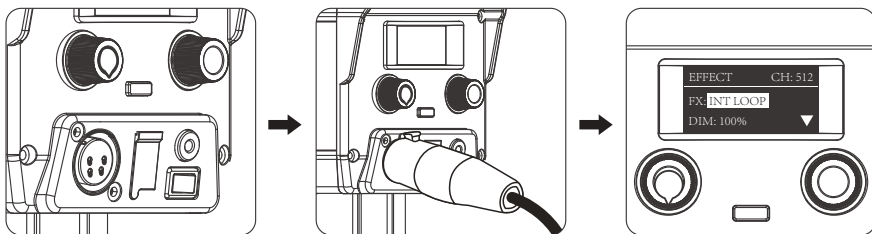


## 2. CCT Mode setting


Press MODE button to CCT mode, rotate "Left knob" to adjust the DIM (DIM range: 000%...100%), rotate "Right knob" to adjust the color temperature (CCT range: 2700K...6500K)



 Press MODE button to CCT mode.



Rotate "Left knob" to adjust the DIM.

 

Rotate "Right knob" to adjust the color temperature.

Note: 1. In effect mode, DIM range is the same as the CCT MODE.

2. In effect mode, the color temperature is not synchronized with the color temperature in CCT mode, and the CCT adjustment range is the same as that in the CCT mode.

3. When the fixture function is unlocked, in any mode, press "Left knob" to turn off the light, the brightness percentage on the screen is 000% in this case. Press again to restore the light to its previous state, and press continuously to switch between on and off.

### 3. EFFECT Mode setting

 
Press MODE button to EFFECT mode. The Forza 150B has built-in effects including CCT LOOP, INT LOOP, FLASH, PULSE, STORM, TV, PAPARAZZI, CANDLE/FIRE, BAD BULB, FIREWORK, EXPLOSION and WELDING.



Press MODE button to EFFECT mode.



Rotate "Right knob" to FX.



Rotate "Left knob" to select the desired effect.

## ①CCT LOOP

CCT LOOP setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 02S...30S), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.



Rotate "Right knob" to select from DIM, CCT and SPD.




Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

## ②INT LOOP

INT LOOP setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 02S...30S), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.



Rotate "Right knob" to select from DIM, CCT and SPD.

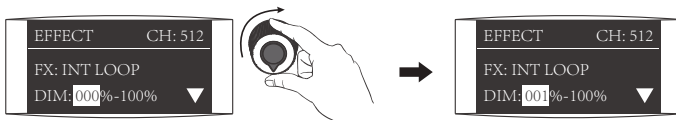

Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

### ③FLASH

FLASH setting: rotate "Right knob" to select from DIM, CCT and INTERVALS (INTERVALS: 0.1S...10S), then rotate "Left knob" to adjust the value of DIM, CCT and INTERVALS.



Rotate "Right knob" to select from DIM, CCT and INTERVALS.



Rotate "Left knob" to adjust the value of DIM, CCT and INTERVALS.

#### ④PULSE

PULSE setting: rotate "Right knob" to select from DIM, CCT and PULSES/MIN (Range: 001...240), then rotate "Left knob" to adjust the value of DIM, CCT and PULSES/MIN.



Rotate "Right knob" to select from DIM, CCT and PULSES/MIN.



Rotate "Left knob" to adjust the value of DIM, CCT and PULSES/MIN.

#### ⑤STORM

STORM setting: rotate "Right knob" to select from DIM, CCT and INTVL (Range: 1s ... 60s) , then rotate "Left knob" to adjust the value of DIM, CCT and INTVL.



Rotate "Right knob" to select from DIM, CCT and INTVL.



Rotate "Left knob" to adjust the value of DIM, CCT and INTVL.

## ⑥TV

TV setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 001...100), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.



 
Rotate "Right knob" to select from DIM, CCT and SPD.



Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

# ⑦PAPARAZZI

PAPARAZZI setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 001...100), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.



Rotate "Right knob" to select from DIM, CCT and SPD.




Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

# ⑧CANDLE/FIRE

CANDLE/FIRE setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 001...100), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.



Rotate "Right knob" to select from DIM, CCT and SPD.

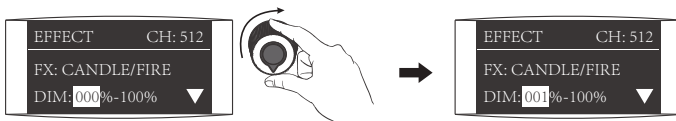

Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

### ⑨BAD BULB

BAD BULB setting: rotate "Right knob" to select from DIM, CCT and SPD (Range: 001...100), then rotate "Left knob" to adjust the value of DIM, CCT and SPD.




Rotate "Right knob" to select from DIM, CCT and SPD.



Rotate "Left knob" to adjust the value of DIM, CCT and SPD.

# ⑩ FIREWORK

FIREWORK setting: rotate "Right knob" to select from DIM ,CCT, SPD (Range: 001...100) and DECAY (Range: 001...100), then rotate "Left knob" to select from DIM ,CCT, SPD and DECAY.

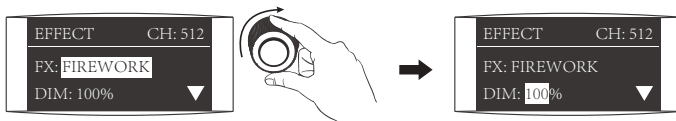


Rotate "Right knob" to select from DIM, CCT, SPD and DECAY.



Rotate "Left knob" to select from DIM, CCT, SPD and DECAY.

# ⑪ EXPLOSION

EXPLOSION setting: rotate "Right knob" to select from DIM, CCT, SPD (Range: 001...100) and DECAY (Range: 001...100), then rotate "Left knob" to select from DIM ,CCT, SPD and DECAY.

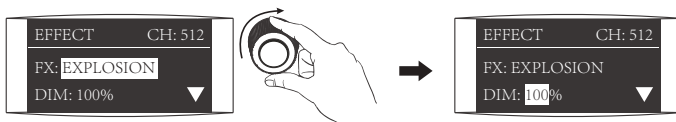

Rotate "Right knob" to select from DIM, CCT, SPD and DECAY.



Rotate "Left knob" to select from DIM, CCT, SPD and DECAY.

## ⑫WELDING

WELDING setting: rotate "Right knob" to select from DIM, CCT, SPD (Range: 001...100) and PAUSE (ON/OFF), then rotate "Left knob" to adjust the value of DIM, CCT, SPD and PAUSE.



Rotate "Right knob" to select from DIM, CCT, SPD and PAUSE.



 
Rotate "Left knob" to adjust the value of DIM, CCT, SPD and PAUSE.

- Special effects may be upgraded based on the firmware update. Please refer to the latest firmware function description for reference.

#### 4. MENU setting



Press MODE button to MENU.



Press "Right knob" to select from CHANNEL, OUTPUT MODE, BLUETOOTH, DMX MODE, DMX REDUCED CHANNELS, DMX DIMMING CURVE, DMX SMOOTHING, WIRELESS PROTOCOL, FAN, FIRMWARE UPDATE, LANGUAGE and FIRMWARE VERSION.

##### ①Channel Setting

Please refer to P6 for Channel Setting.

##### ②OUTPUT MODE



Press MODE button to MENU.



Rotate "Right knob" to OUTPUT MODE.




Rotate "Left knob" to select MAX or CONSTANT.

### ③BLUETOOTH RESET




Press MODE button to switch to the MENU.

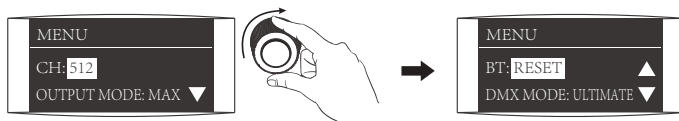

Rotate "Right knob" to BT.



Press "Right knob" to the interface of bluetooth reset.

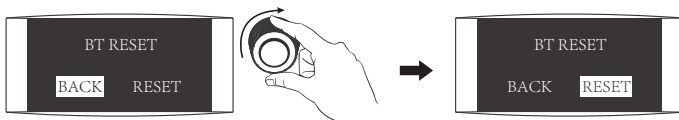

Rotate "Right knob" to select RESET.



Press "Right knob" to confirm reset and it will return to the menu after bluetooth reset.

#### ④DMX Mode Setting

Please refer to P7 for DMX Mode Setting.

#### ⑤DMX Reduced Channels Setting

Please refer to P8 for DMX Reduced Channels Setting.

#### ⑥DMX Dimming Curve Setting

Please refer to P9 for DMX Dimming Curve Setting.

### ⑦DMX Smoothing Setting

Please refer to P9 for DMX Smoothing Setting.


### ⑧Wireless Protocol Setting

Please refer to P12 for Wireless Protocol Setting.

### ⑨FAN



Press MODE button to MENU.

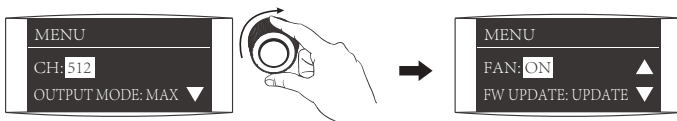

Rotate "Right knob" to FAN.




Rotate "Left knob" to select ON or OFF.

Note: (1)When the fan is turned on, the maximum output of the light will be 100%.


(2)When the fan is turned off, the maximum output of the light will be 20%.

# ⑩FIRMWARE UPDATE

 Insert the USB flash drive with the latest firmware into the light fixture.



Press MODE button to MENU.

 

Rotate "Right knob" to the FW UPDATE.



Press "Right knob" to enter the interface of firmware update.



Rotate "Right knob" to select UPDATE.



Press "Right knob" to start the update, it will show "FIRMWARE UPDATED" after the firmware update is completed.

# ⑪LANGUAGE



Press MODE button to MENU.

 


Rotate "Right knob" to LANGUAGE.





Rotate "Left knob" to select Chinese or English.

## ⑫VERSION




Press MODE button to MENU.

  

Rotate "right knob" to VERSION to check the current firmware version.

 5. Lock or Unlock Settings: long press the "Right knob" to lock the light status. The current light status cannot be changed by pressing the button or rotating the knobs. Long press the "Right knob" again to unlock.



Long press the "Right knob" to lock the light status.



Long press the "Right knob" again to unlock.

6. When the fixture is not in use, please turn it off.


## **Safety Precautions**

1. Please open the package to check for possible damage caused in transit, please do not use if damage is found and contact place of purchase or manufacturer as soon as possible.
2. Do not use a power cord with damaged insulation, do not unplug too hard or drag the power cord directly.
3. Make sure that the power supply voltage used matches the voltage designated by the light before installation.
4. Please turn the light off when it is not in use or before cleaning.
5. Keep the light safely stored and away from children.

## **Notice**

1. Please remove the COB protective cap before using the light.
2. Please do not look directly at the emitter when the light is on .
3. When the fixture is powered by a battery grip, please use 14.4V-26V/10A V-mount batteries.
4. Do not place objects on the light emitter or allow liquid to flow inside the fixture or the emitter.
5. Do not place the fixture near flammable substances like alcohol or gasoline.
6. When cleaning the light, please wipe off debris or dirt by using a cloth with clean water or neutral cleanser.
7. The fixture should be mounted in dry and ventilated place and avoid being used in damp, dusty or overheated environment, also make sure the fan and the vents are not blocked or obstructed.
8. Any attempt to repair the fixture by yourself will void warranty, disassembling and repair can only be allowed when trained professionals are involved under strict protocol regulated in this manual.
9. For optimal cooling of the fixture, the vents should not be covered when using, or might result in damaging the equipment. The temperature on the fixture surface is high when using for a long time, please caution to prevent burns and scalds.

# What's in the box? Please kindly check.
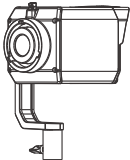
| Forza 150B×1                                                                      | AS-BA-FMM<br>Bowens mount adapter ×1                                              | AS-CAP-FMM<br>COB Protective Cap ×1                                                | RF-FMM-45<br>Reflector ×1                                                           |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |   |  |
| Power Adapter 24V/7.5A×1                                                          | Power Cable 4.5M ×1                                                               | DMX Reference Guide×1                                                              | User Manual×1                                                                       |
|  |  |  |  |
| Carrying bag×1                                                                    |                                                                                   |                                                                                    |                                                                                     |
|  |                                                                                   |                                                                                    |                                                                                     |

## General Fault Detection and Diagnosis

| Fault Detection                                                                         | Diagnosis                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The light won't boot up properly                                                        | <ol style="list-style-type: none"> <li>1. Please check whether the power supply, cable and outlet are properly connected and that the cable is not faulty or loose.</li> <li>2. Please check whether the voltage value is within the specified parameters.</li> <li>3. If the fixture is powered by batteries, please check if the batteries are into place, whether the battery voltage/current is consistent with the specified voltage/current.</li> </ol> |
| The fixture can be operated manually, but DMX control is not working.                   | <ol style="list-style-type: none"> <li>1. Please check whether the DMX address code setting of the fixture is correct.</li> <li>2. Please check that the XLR signal cable is connected correctly and that it is not faulty or damaged.</li> </ol>                                                                                                                                                                                                             |
| LCD display is on, but light cannot be operated.                                        | The COB or main board damaged.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| The fan doesn't work                                                                    | Please check if the fan is set to OFF mode.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| If the failure is not resolved after troubleshooting, please contact place of purchase. |                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

This manual has been compiled according to the rigorous testing of our company's products. Product designs are subject to change without prior notice. You can download the latest version of the manual for this particular product from [www.nanlite.com](http://www.nanlite.com).

Version: V3 2023-04-03

**NANLITE**

☎ +86-754-85751187

☎ +86-754-85300887

✉ [service@nanlite.com](mailto:service@nanlite.com)

📍 Zhanglin,324,Dongli Chenghai Shantou Guangdong China

[www.nanlite.com](http://www.nanlite.com)