

Smart Remote Control Fishing Bait Boat

Instructions

Feature Introduction:

◆Best Quality

The boat adopts the ABS which is without the poison and smell, the ABS is with the strong anti-resistant and abrasion resistance, the boat color can be kept a long time. It is easy to clean as the ABS can beat the chemical pollution.

◆Professional Digital Full Automatic FM Device

It can solve the problems: interference of different boats' frequency; short distance of remote controlling; pick up the boat when it is out of control.

◆Resistant the Strong Wind and Wave

Two motors with the waterproof design, which can stop the water through the boat, and also can run well under 3-4 level wind.

◆Long Battery Life

Simple operation, strong stability, change the speed and direction easily.

◆Carry Easily

It is easy to carry with the boat handle.

Accessories Introduction:

◆Motor

turn radius turn radius 0.8-1.0M

◆Battery

power: 7.4V , maintenance-free battery, battery life is above 2 hours
alarm: setting for low battery to ensure the boat back safely.

◆Night Light

the night light can help to distinguish the direction and lure the fish

◆Remote Controller

remote control distance above 400M-500M

◆Boat Body

direction: forward, backward, right and left turn, release the bait flexibly and precisely, can resist the wind under 3-4 level.

◆Charging fastly

Two bins design :

1. Every bait bin can be controlled independently.
 2. The night light is designed with the blue color
- Functions:

- ① can help know the direction during the night fishing
- ② lure the fish

◆ loading weight 1.5kg



Boat Body Introduction



Streamline boat body


- ◆running more stable
- ◆Resistance to the wind and wave more strong

(The battery is built in the hull.)

- ◆fast charging
- ◆long battery life




Remote Controller Details

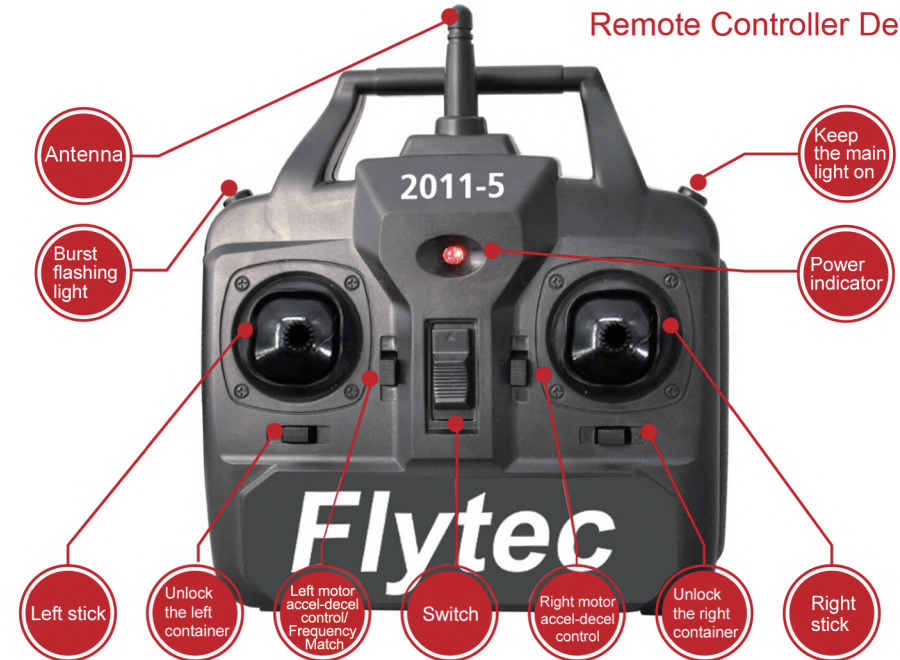

FREQUENCY MATCH METHOD:


- ◆As Picture shown below, long press the frequency button① and not unlock, open the boat power switch, then turn on the remote controller switch key ②, when controller sends a long "drop ~"sound , controller and the boat are in the frequency matching state, then it can be used. This operation step must be completed in 3 seconds.
- ◆Note: This frequency mode is suitable for the case where the remote controller does not respond when operating the boat or if the consumer replaces the boat circuit board or the controller circuit board.

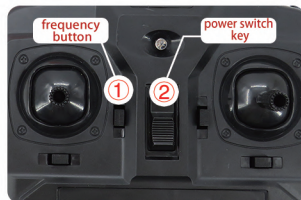

INSTRUCTIONS:

- ◆Remote controller instructions forward, backward, turn left, turn right.
- ◆Detailed description
 - ① Push both directional rods up at the same time , the boat forward.
 - ② Push both directional rods down at the same time, the boat backward.
 - ③ Push the left directional rod down and push the right directional rod up at the same time, the boat turns left.
 - ④ Push the left directional rod up and push the right directional rod down at the same time, the boat turns right.

◆Operation instruction picture

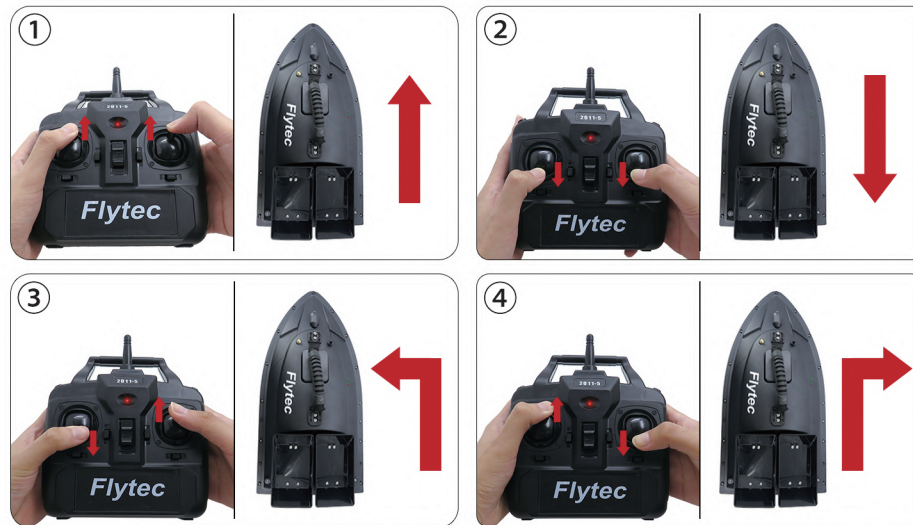

Maintenance

◆Controller

please kindly take out the battery if there is a long time for leaving unused.

◆Night Light

Turn off the night light switch when not in use for a long time.

◆Boat Body

1. please keep dry and clean for the boat after using the boat.
2. When you not use it for a long time, please cut off the power supply.
3. please do not put the boat with the corrosive liquid.
4. Don't use or leave the battery near a heat source such as fire or heater.
5. please put the boat into the bag to keep the boat from the dusty if do not use the boat.



Fault Detection and Solutions

◆ What should I do if the switch is not powered?

Analysis and solution:

1. First check the battery to see if it has power or not. If there is no power, first charge it, and then operate it after charging.(Figure 1).
2. It may be the charging port in the battery compartment is not in good contact with the connecting cable. You can touch the connector to see if this phenomenon occurs. If the connection is not good, you can tight up the connection between the charging plug and the cable, or pinch the charging port with your hand or pliers and then insert the connector.(Figure 2).
3. If there is still not worked after first two solutions, Please unscrew the cover of the boat to check the internal situation. The product may have some uncertainties happened during transportation, causing the connection line and the circuit boards are loose, which lead to the boat doesn't work. If you find that is loose, please put it in place (Figure 3), then turn on the switch to confirm the power supply is normal or not. If you still can't solve the problem, please contact local dealer or e-commerce customer service to ask for help.



Figure 1



Figure 2

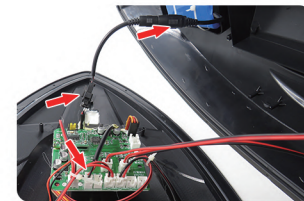


Figure 3

◆ Hopper can't work

Analysis and solution:

1. Try to turn on the switch of the bait hull (Figure 4), see if there is any sound from the steering gear. Also to check the pull-in and pop-up action of the pull rod (Figure 5). If the action is normal, then the pull-in action is not in place, you can use the diagonal pliers to cut a little bit of the front end of the pull rod (The length of cutting depends on the situation) (Figure 6).
2. If the steering gear reacts, but the pull rod does not respond. You can open the upper cover of the boat to check if the connecting chain of the steering gear and the pull rod is too long or not, or maybe it is disconnected. If it is this situation, just cut a little bit or reconnect it well (Figure 7).
3. If the steering gear does not work, you can open the upper cover of the boat and check if the connecting line between the circuit board and the steering gear is loose or not. If it is loose, connect it and that can be solved (Figure 8).



Figure 4

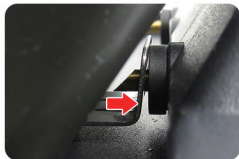


Figure 5

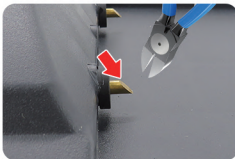


Figure 6

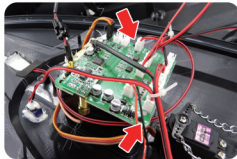


Figure 7



Figure 8

◆ Remote control rod shedding

Analysis and solution:

The joystick may be squeezed during transport, causing the assembly to be out of position. Press down slightly until the joystick automatically returns to the middle position (Figure 9).

◆ The hopper bounces automatically

Analysis and solution:

1. It can be adjusted by turn the switch on and off. The turn on process cannot be so quickly and frequently, please turn it after three seconds or more. It will be normal after repeated several times (Figure 10).
2. If the above operation method does not work, can adjust the steering gear and pendulum. The steering gear has a power-on automatic reset function. After the power is turned on, it will return to the middle position. The steering gear will rotate left and right once and the pull rod will be driven, causing the silo to be bounced. During the production process, the production personnel will debug the pendulum to the best condition, and the silo will not be bounced normally. If it is still bouncing, open the cover and loosen the pendulum screw. Move the pendulum lever to the position to solve it (Figure 11).



Figure 9



Figure 10



Figure 11

◆ Unable to charge

Analysis and solution:

1. Check if the charger is working properly (Figure 12).
2. Check if the charging port is connected correctly, and then check if the interface is poor contact (Figure 13).



Figure 12



Figure 13



Figure14

◆ If the controller and the boat are on power, controlling the remote controller, the boat does not respond. You need to match controller and boat. Long press ①, turn on the boat, and then open ② (Figure 14), the operation needs to be completed in 3 seconds. When the controller makes “beep” sound, it means the controller and boat match successful.