



V050 FISHING BAIT BOAT

ORIGINAL VERSION

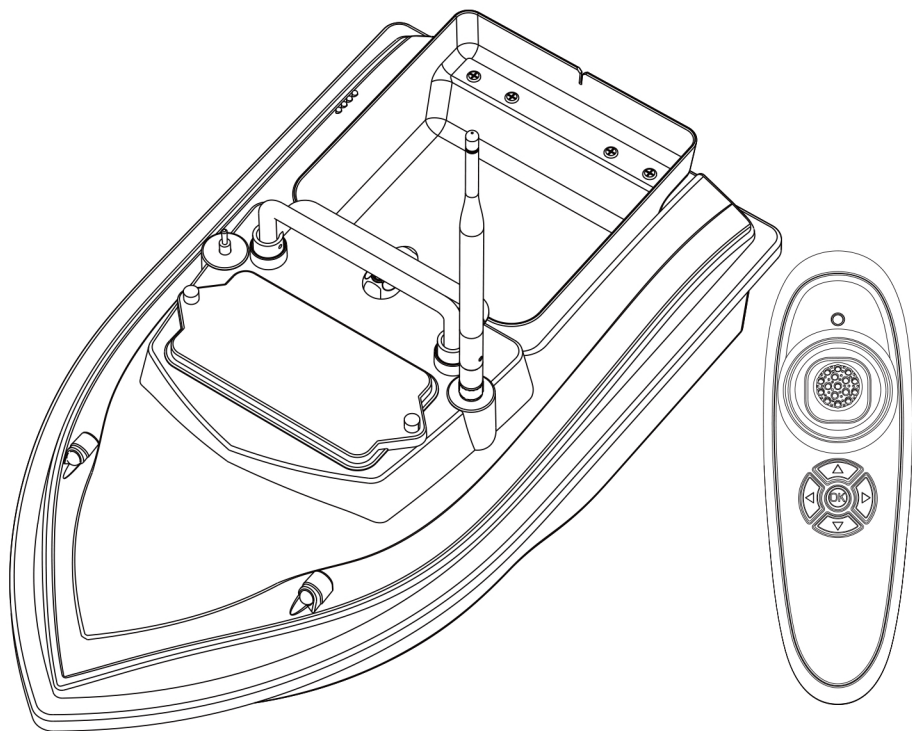

USER MANUAL

V050 FISHING BAIT BOAT

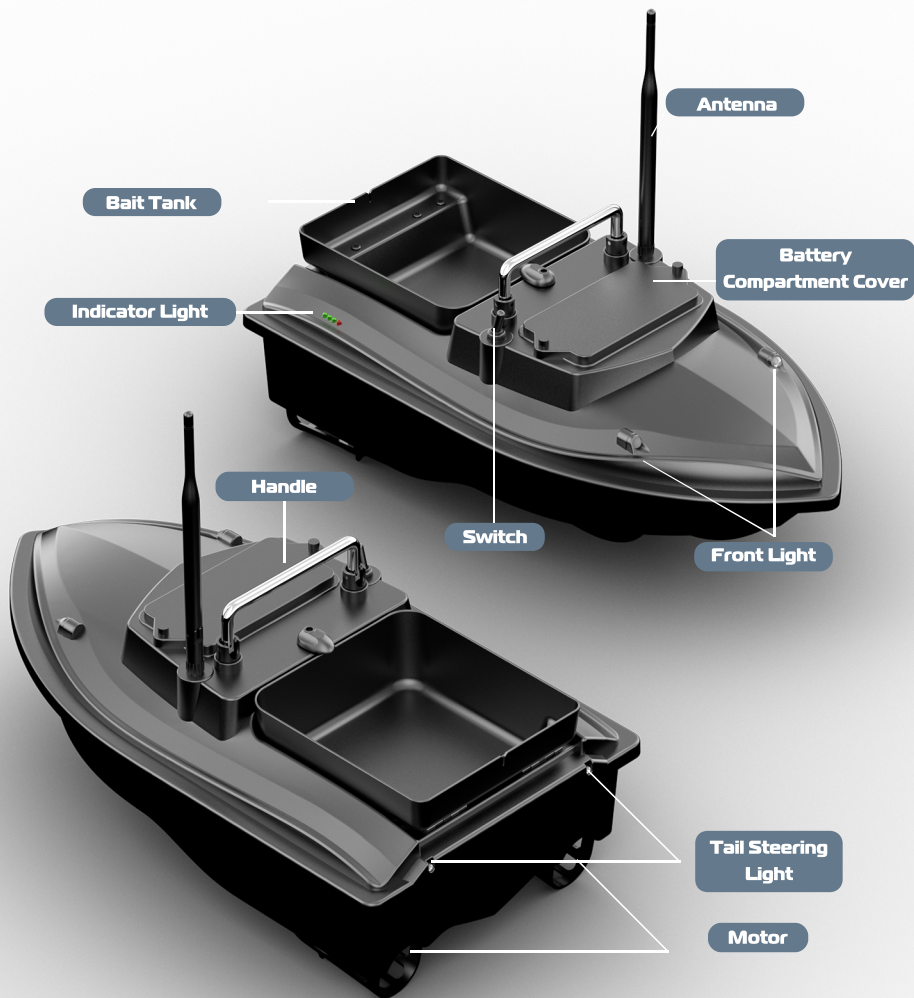

V050 FISHING BAIT BOAT



V050 FISHING BAIT BOAT

Start up

1. Place the boat on a flat road and turn on the power of the boat
2. Push the switch of the remote control, the indicator light of the remote control is always on

Note: Place it on a flat road and do the frequency pairing. Operate the left and right motors to see if they work before putting in the water

Fixed-speed cruise

1. Press the fixed-speed cruise button for 2 seconds when the boat going forward
 2. The remote control joystick can fine-tune the direction of the boat
- Remarks: After entering the fixed-speed cruise control mode, press the cruise control button again to exit the fixed-speed cruise mode

Lighting control

1. Short press the light button in sequence, the lighting status will cycle through the modes of "flashing - constantly on - off"
2. When the boat turns left, the left tail light is always on; when the boat turns right, the right tail light is always on

Low battery reminder

1. When the boat is in a low battery state, the remote controller will make a "beep" and "beep" prompt sound
2. When the remote control is in a low battery state, the indicator light of the remote control will flash

Frequency Matching

Press and hold the OK button on the remote control, then turn on the boat switch, finally turn on the remote control switch, and when you hear a "beep" sound, the frequency pairing is complete

(If the remote control cannot control the boat, please try this method to repair it)

V050 FISHING BAIT BOAT



STREAMLINED HULL

2.4G REMOTE CONTROL


7.4V LARGE CAPACITY BATTERY

Battery usage and charging instructions:

● Boat battery (standard configuration)

● Connect to the power supply

Connecting a single battery to any power cord can work, while connecting two batteries at the same time doubles the battery life.

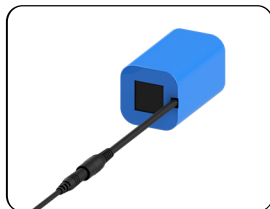

V050 FISHING BAIT BOAT

- **Remote Control**

Please remove the battery when not in use for a long time.

- **Motor**

Check the motor for debris after each use

- **Boat Hull**

1. After use, please wipe off the water to keep the hull dry and clean.
2. When the battery is not in use for a long time, please take it out and charge it for storage.
3. Do not store the boat with corrosive liquids
4. Keep away from high temperature objects.
5. When not in use, please store the boat to prevent dust.

