

Intelligent remote control bait boat




User manual

“FISH” IS A LIFE OF MY LIFE

Product Function Diagram



Remote Control Button Function

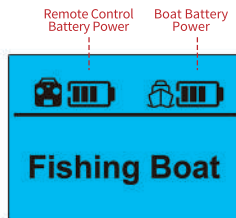

"FISH" IS A LIFE OF MY LIFE

Remote Control Function Operation Instructions

◆ **Light switching:** Press the button on the upper left corner of the remote, the searchlight starts to flash; press the light button again, the searchlight will always on; when you press it for the third time, and the searchlight will turn off.



◆ **Fixed-speed Cruise control:** When the boat keeps moving forward, long press the fixed-speed cruise control button, the boat will enter the cruise control mode and keep going forward without remote control, remote control will continuously slowly emit "di~" and "di~" sound, and then short press fixed-speed cruise control button cancels the cruise mode. (Fixed-speed cruise control function is only available when moving forward, when the boat in low power cannot enter fixed-speed cruise mode)



◆ **Motor speed fine-tuning:** Push Forward the left motor trim button, the left motor accelerates and the right motor to decelerate, push Backward the left motor fine-tuning trim button, the left motor decelerates and the right motor accelerates, the operation of the right motor fine-tuning key is the same (the fine-tuning key has 15 steps, when fine-tuning until the remote control emits a "beep", the gear position will be restored. When the remote control switch is turned off and then turned on, the gear position will also be restored.)



◆ **Baiting button:** Press the left baiting button to pop up the left silo, and press the right baiting button to pop up the right silo.



Remote Control Operation

◆ Forward, Backward, Turn Left, Turn Right

① Push both directional sticks up at the same time, and the boat forward.



② Push both directional sticks down at the same time, and the boat go backward.



③ Push the left directional stick down and the right directional stick up, the boat turn left.



④ Push the left directional stick up and the right directional stick down, the boat turn right.



"FISH" IS A LIFE OF MY LIFE

Streamline Boat Hull

- ◆ Smoother sailing
- ◆ Wind and wave stronger resistance

7.4V Battery

- ◆ Charging faster
- ◆ Longer battery life

Left Right Turning Light

- ◆ When going straight, the turning light will show white light
- ◆ When turning, the turning light will show red and white lights flash alternately



Battery usage and charging instructions:



- ◆ Boat Battery
Built-in one set battery



- ◆ Connect the battery
Connect the battery compartment interface when using



- ◆ Disconnect the battery and take out
Remove the battery, close the battery compartment cover



- ◆ Battery charging interface
Connect the battery to the charger
Red light: charging
Green light: complete

“FISH” IS A LIFE OF MY LIFE

Warning Alarm

When any of the following alarm appear, please drive back to shore as soon as possible!

- ◆ **Low battery of boat:** When the LCD screen shows that the boat battery icon is only 1 bar left, you should drive back in time to replace the battery.
- ◆ **Low battery of remote control:** When the LCD screen shows that the battery of the remote control is only 1 bar left, it should be driven back in time to replace the battery of the remote control.
- ◆ **Boat frequency disconnection:** When the boat is traveling, the LCD screen shows that the hull power icon disappears, indicating that the boat signal is disconnected.

Note: During use, please stop for a period of time, let the remote control detect the power of the boat and update it to the boat power icon.

Maintenance

◆ Remote Control

Please remove the battery when not in use for a long time.

◆ Boat Hull

1. After use, please wipe the water to keep the boat hull dry and clean.
2. When the battery is not used for a long time, please take it out and charge it for storage.
3. Do not get close to high temperature objects.
4. When not in use, please store the boat to prevent dust.

◆ Motor

Check the motor for entangled debris after using



Figure 1



Figure 2

What Should I Do If The Charging Fails:

1. First check whether the charger is it working normally (Figure 1).
2. Whether the charger is connected to the charging port in place, and the contact at the interface is it normal or not (Figure 2).



◆ What should I do if the boat and the remote control are not connected to the frequency?

◆ If the remote control and the boat are power on, but the boat is not respond. Then you need to re-pair the frequency, long press the left trim button of the remote control, turn on the power of the boat, and then turn on the power of the remote control; the remote control emits a long beep sound, when the red indicator light of the remote control is always on, the LCD screen flashes. The light of the boat switch button is always on, and the turning light is always on, that is, the frequency pairing is successful.