


V060 FISHING BAIT BOAT

GPS VERSION

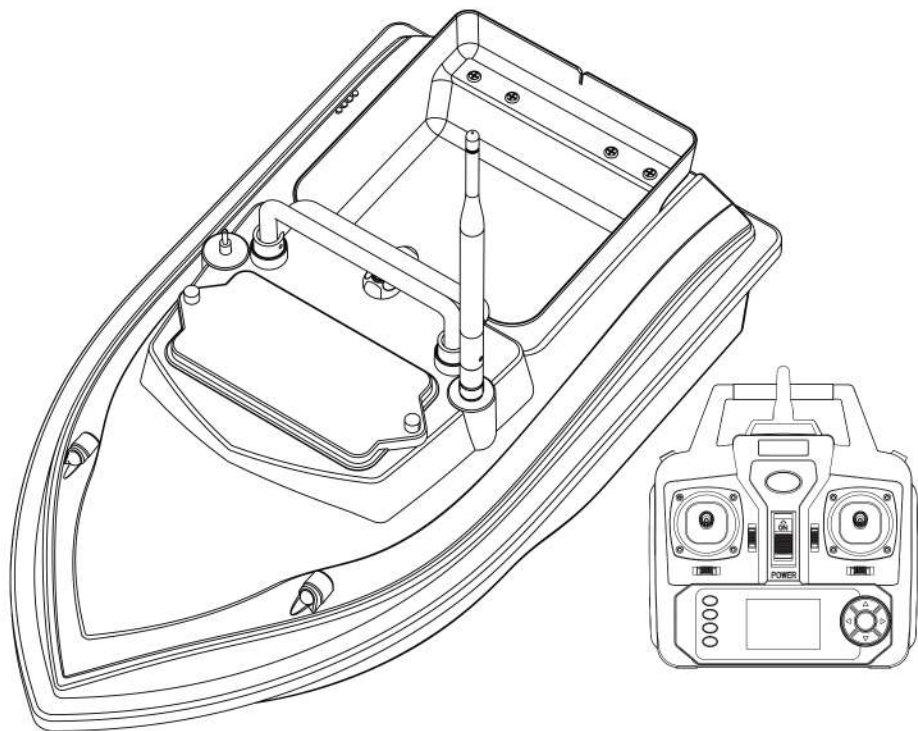

POWER SUPPLY PROMPT

You can make the boat operational by simply connecting any power cord to a battery. If you use two batteries at the same time, you can significantly prolong its working time.

ATTENTION

Dry bait is better for the baiting! If overload the bait tanks, the bait will not successfully drop out. Please decrease the loading bait.

USER MANUAL

V060 GPS FISHING BAIT BOAT

ENG



V060 GPS FISHING BAIT BOAT

ENG



LIGHTING ICON

(This icon is not displayed when the boat is powered on. When the light button is pressed to control the light of the boat, the boat light is shine on, and the icon is appear. The boat light flashes, and the icon flashes. If the boat light is off, the icon is not displayed)

COMPASS ICON

(After calibration, the compass icon points to the corresponding direction of the boat bow; when not calibrated, it points to N by default)

BOAT&RC BATTERY ICON


(The battery icon on the left represents the battery power of the boat, and the battery icon on the right represents the battery power of the remote control)

DIRECTION ICON

(This icon represents the driving direction of the boat. When moving forward or backward, the middle boat icon is shine on; when the boat turning left, the left boat icon appear; when the boat turning right, the right boat icon appear; the boat icon also lights up in the middle and flashes on both sides at the same time when cruising)

DISTANCE ICON

(The distance is not displayed before setting the positioning point, the distance from the origin is displayed after setting the original point, and the distance between the two points is displayed when starting the fixed-point cruise)

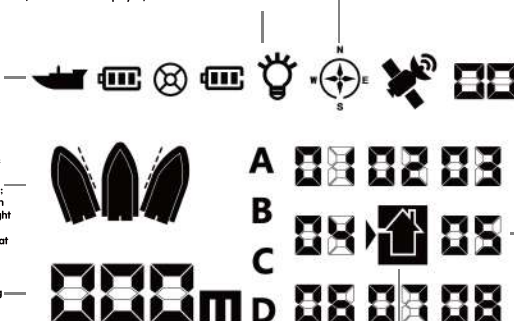

GPS SIGNAL ICON

The number next to it represents the number of satellites searched (the GPS icon is not displayed when the remote is just turned on; after a second, it will be displayed after searching for GPS signals, and the number following it represents the number of satellites searched)

POSITION POINT ICON

(The middle dot represents the original point, there are 40 positioning points in a fishing ground, a total of 5 pages, you can turn the page to set the fixed point)

FISHING GROUND ICON

(ABCD represent 4 fishing grounds respectively, you must set a fishing ground before setting the positioning point)

ORIGINAL POSITION ICON

The house icon in the middle is the original position. You need to set this original position point before setting other position point to realize the return function.

POWER ON AND PAIRING

Place the boat on flat ground, keep the remote controller at least 0.5 meters away from the boat, push the boat switch first, see the tail light flashing, then turn on the remote controller switch, when the remote controller makes a "beep" sound, the indicator light on the remote controller is always green, and the boat light is off, indicating that the remote controller and boat are connected. **At this time, the light icon on the remote controller interface is always off, and the GPS icon is flashing.**



CALIBRATION

The boat needs to be calibrated before use. When the remote controller and the boat are matched, the GPS satellite icon is displayed on the remote controller screen, and the number next to the GPS icon is more than 8, calibration can be performed. After the boat is driven a few meters from the shore, **press the calibration button, the boat will turn left and right in the water. When the boat stops after calibration, the remote controller will emit two "beep" sounds.**



FISHING GROUND SETTING

After calibration is completed, force the selection of the fishing ground before proceeding with the fixed-point setting. ABCD represents four different fishing ground, and at this time ABCD continues to flash slowly. Press the fishing ground button to select the fishing ground, and the selected fishing ground letter will flash quickly. Press the position setting button to confirm the selection of the fishing ground, and the selected fishing ground letter will flash and remain on. The other three will disappear, indicating a successful selection of the fishing ground. To switch fishing grounds, press the fishing grounds button to switch.



ORIGINAL POINT SETTING

After setting the origin, when the boat sails to the designated location, use the selection key to select another point, such as point 1, and press the position setting key to set the point. The selected fixed point flashes quickly and then stays on, and the number of the position point that has not been set disappears, it indicates that the setting is successful. Then the boat can be sailed to other places and more positioning points can be set. If the positioning points on the current page are fully set. You can page turning to set more positioning points. Each fishing ground has five pages, each displaying 8 positioning points and origin points. One single fishing ground can set up to 40 positioning points. When the boat's power is turned off, the stored positioning points will still be retained.



SET THE POSITIONING POINT

After setting the original position, when the boat is driven to the designated location, the remote controller first selects the corresponding digital number, such as point 1, and presses the position setting key to store the fixed point. When selecting the position point, the page will flash slowly, and the selected chosen point will flash quickly. After setting, the chosen point will become always on, and the number of the unset coordinate point will disappear, indicating that the setting is successful. You can drive the boat to the next place, and set a new positioning point in the order of the pages. Each fishing ground has 40 positioning points that can be set, a total of five pages, and each page displays 8 positioning points and the origin. When the positioning points of each interface are full, you can turn the page to set a new positioning point. When the boat is turned off, the stored positioning points will still be memorized.



V060 GPS FISHING BAIT BOAT

ENG

POSITIONING POINT CRUISE

When the positioning point is set, select which positioning point to be reached, press the cruise button, and the boat starts to cruise automatically. The positioning point icon on the remote control screen flashes, and it stays on when the positioning point is reached. The distance displayed on the screen is the distance between the two positioning points. When the displayed distance is shortened to 0m, the remote control emits two "beep, beep" sounds, indicating that the boat has reached the selected position and stopped driving.

Note: After the boat reaches the positioning point, the distance display on the remote control screen will return to the distance between the origin and the boat. If the boat wants to cancel the operation during the cruise, press the cancel button to cancel the cruise function.



ONE-KEY RETURN

One-key return: Press the original position button, the boat will return to the original position. During the driving process, the remote control original icon flashes and returns to normal when it reaches the origin (you need to set the original position first before this function can be realized). If you want to cancel the return function midway, press the cancel button to cancel the boat's return action.



LIGHT SWITCHING

Short press the remote control light button in sequence, and the headlight status will cycle through the modes of "Flashing-Constant on-Off". The lighting icon on the remote control display screen corresponds to the "Flashing-Constant on-Off" switch.



FIXED-SPEED CRUISE

Cruise control: When the boat is moving forward, press the cruise control button at the same time, the boat will enter the cruise control mode. At this time, there is no need to operate the remote control, and the boat will keep moving forward. If you need to cancel the fixed-speed cruise control mode, press the fixed-speed cruise button to cancel it.



CLEAR BUTTON

Press and hold the clear button to clear the coordinates of all the fishing ground stored on the remote controller. If you only want to cancel single location point, select the number corresponding to the location point on the screen and short press the clear button to clear it. After clearing, the number box corresponding to the location point disappears.



BAITING BUTTON

Press the baiting button to pop up the hopper. After baiting, the hopper needs to be manually restored.



LOST SIGNAL RETURN

When the remote controller is low on power/automatically shuts down/manually turns off, the boat automatically returns to the origin.

ORIGINAL POSITION BUTTON

After setting the original button, if you want the boat to return to the original position, press the original button and the boat will return to the original place.



CANCEL BUTTON

During the cruise function and fixed-speed cruise, if you want to cancel the boat's movement, press the cancel button to cancel the boat's movement.




PAIRING BUTTON

If the boat loses connection with the remote control, it needs to be repaired.

Pairing tutorial:

- (1) Please ensure that the power supply of the boat and remote control is turned off before frequency matching;
- (2) Place the boat in a horizontal position, press and hold the pairing button on the remote control (keep holding it down), and turn on the boat switch – remote control switch in sequence;
- (3) Upon hearing a beep sound, it indicates successful pairing.

Note: If the boat loses connection with the remote control, the GPS signal icon, lighting icon, fishing ground icon, and positioning point coordinates on the remote control display screen will not be displayed. The compass arrow points to N, the distance will display 000m, the boat lights will flash, and the remote control indicator lights will alternate between red and green lights.

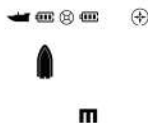

LOW BATTERY CAPACITY WARNING

When the boat is under low battery capacity, the remote controller will emit a "Beep Beep" sound; when the remote controller is low on power, the remote controller will emit a long "beeping" sound.



SELECTION BUTTON

Up/Down/Left/Right Selection button: Used it to select icons on the screen and turn pages. When you select the corresponding point, the number or letter will flash, and press left/right selection button to turn pages.



- **Remote Control**



Please remove the battery when not in use for a long time.

- **Motor**

Check the motor for debris after each use.

- **Boat Hull**

1. After use, please wipe off the water to keep the hull dry and clean.
2. When the battery is not in use for a long time, please take it out and charge it for storage.
3. Do not store the boat with corrosive liquids
4. Keep away from high temperature objects.
5. When not in use, please store the boat to prevent dust.

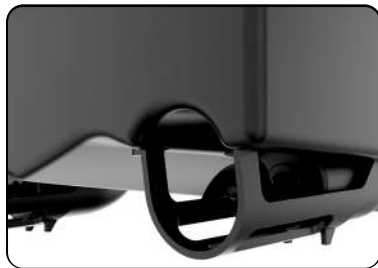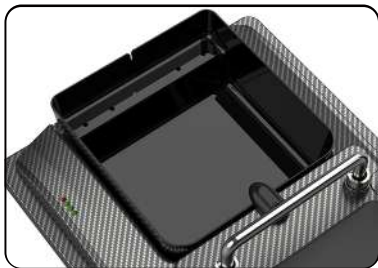

V060 GPS FISHING BAIT BOAT



STREAMLINED HULL

2.4G REMOTE CONTROL

7.4V LARGE CAPACITY BATTERY

Battery usage and charging instructions:

●Boat battery (standard configuration)

●Connect to the power supply

Connecting a single battery to any power cord can work, while connecting two batteries at the same time doubles the battery life.

