 


UD20 BAIT BOAT

 
 
GPS VERSION

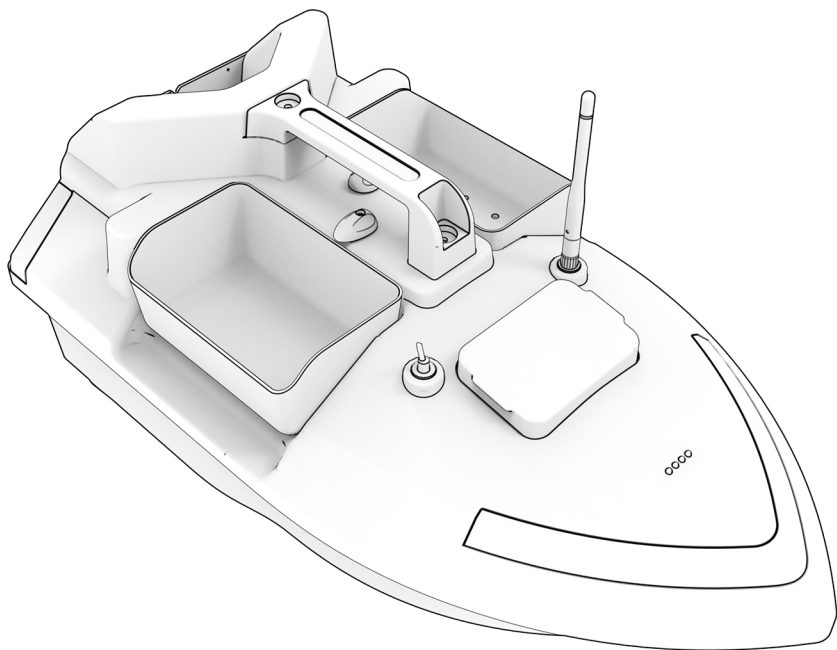


USER MANUAL

UD20 GPS BAIT BOAT

Product Details

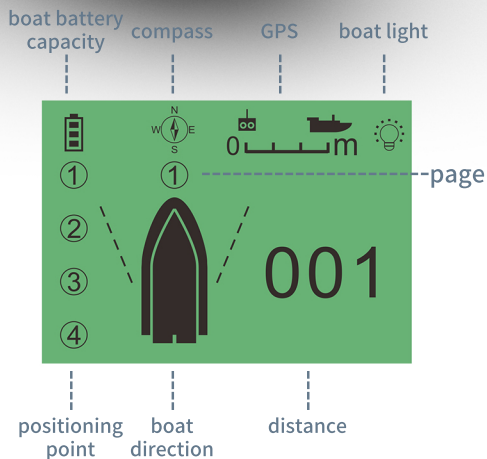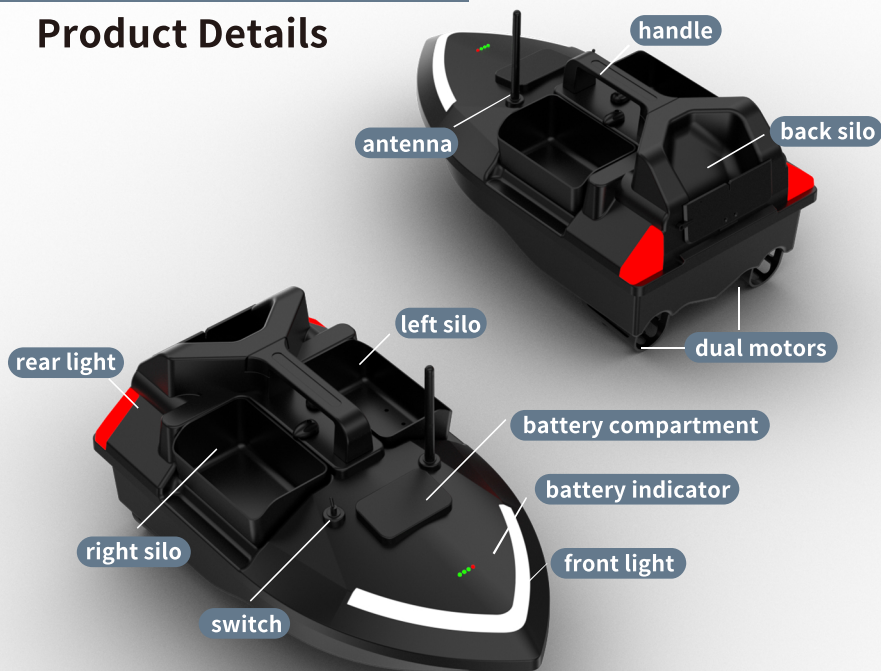

UD20 GPS BAIT BOAT

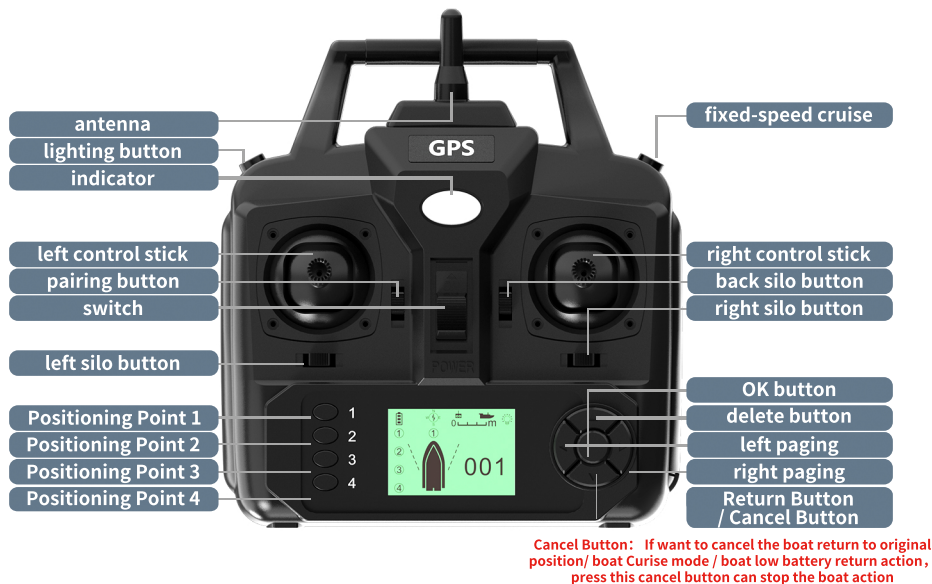 

START UP

1. Place the boat on a flat road and turn on the power of the boat
 2. Turn on the power of the remote control, the green light of the remote control indicator is always on
- Note: Do not put the boat on the slope before the boat is paired, check the left and right motors to see if they work before driving

Calibration

1. When the GPS icon is displayed, put the boat into the water and drive the boat 7 meters away from the shore to ensure that there are no obstacles around
2. Press the OK button and not release, then press the lighting button (the boat enters the automatic calibration), the boat first turns left a circle and then turns right a circle, and stops after completion, and the calibration is completed.

Positioning point storage

1. When the GPS icon is displayed, the positioning point storage can be operated
2. It is recommended to set an origin point when the boat is close to the shore, and be sure to set the "1" point on page 0 as the origin
3. When the boat reaches its destination, press and hold the OK button not release, then press positioning point 1, 2, 3, 4 button to store the location. One page can store up to 4 positioning points. After the operation is successful, the corresponding number will be displayed on the screen. If the current page is full of positioning points, you can press the page button to set the positioning points on the next page
4. Press and hold the delete button to automatically clear all stored information

UD20 GPS BAIT BOAT

Cruise operations

1. Press any button of the positioning point 1-2-3-4 on the remote control to start automatic cruise after setting all the points
 2. When reaching about 1m around the target point, the cruise ends. (There will be a distance display on the remote control screen, and the displayed distance is the distance between the anchor point and the boat.) When the boat deviates or the position of the boat is wrong, please re-calibrate
- Remarks: If you want to cancel the positioning point cruise, you need to press the cancel button or the corresponding positioning point button, and the boat will stop working

Fixed-speed cruise

1. Push the both remote control lever up at the same time to drive the boat go forward
 2. Long press the fixed-speed cruise button to enter the fixed-speed cruise control mode
 3. The remote control lever can fine-tune the direction of the boat
- Remarks: After entering the fixed-speed cruise control mode, press the fixed-speed cruise button to exit

Boat power display

1. The LCD screen displays the battery power of the boat. There are 3 levels in total. When the battery icon has only 1 grid left, it should be charged or replaced in time.
2. The boat is in a low power state, and the boat will automatically return to the origin point

Poor signal reminder

1. When the signal of the boat is poor, the red light of the remote control indicator will flash and make a "di" "di" prompt sound
2. When the boat is in a poor signal state for a long time, the boat will automatically return to the origin point

Frequency Matching

If the boat loses connection with the remote control, it needs to be re-paired. Turn off the power of the remote control and the bait boat, and re-pairing the boat and the remote control. Put the boat on the ground, first press and hold the pairing button on the remote control, then turn on the boat switch, and then turn on the remote control switch, when the remote control makes a "beep" sound, the green indicator light on the remote control always on, indicating that the remote control and the boat have been connected.

UD20 GPS BAIT BOAT



STREAMLINED HULL

2.4G GPS REMOTE CONTROL

 
7.4V LARGE CAPACITY BATTERY

Battery usage and charging instructions:

● Boat battery (standard configuration)

● Connect to the power supply

This boat has a built-in battery, just connect the battery connector when using

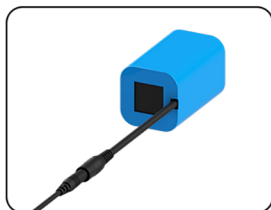

UD20 GPS BAIT BOAT

Maintenance

- **remote control**

Please remove the battery when not in use for a long time.

- **motor**

Check the motor for debris after each use

- **Boat Hull**

1. After use, please wipe off the water to keep the hull dry and clean.
2. When the battery is not in use for a long time, please take it out and charge it for storage.
3. Do not store corrosive liquids and items together
4. Keep away from high temperature objects.
5. When not in use, please store the boat to prevent dust.

- **Self-Illuminating Instrution (Only For Yellow Colour Self-Illuminating Version)**

The luminous version will spontaneously fluoresce in dark environments after absorbing sunlight / light during the day; The stronger the light, the better the luminous effect. It is recommended to absorb light for at least 2 hours, and the boat will luminous for at least 30 minutes. Gradually darkening is a normal phenomenon, and it can be reilluminated after absorbing light again.

Warning: The boat can self replenish light under sufficient lighting conditions, don't need to long exposure to sunlight outdoor. Before absorbing light, please disconnect the power and the take out the battery.

