 


V802 BAIT BOAT

BASIC VERSION USER MANUAL

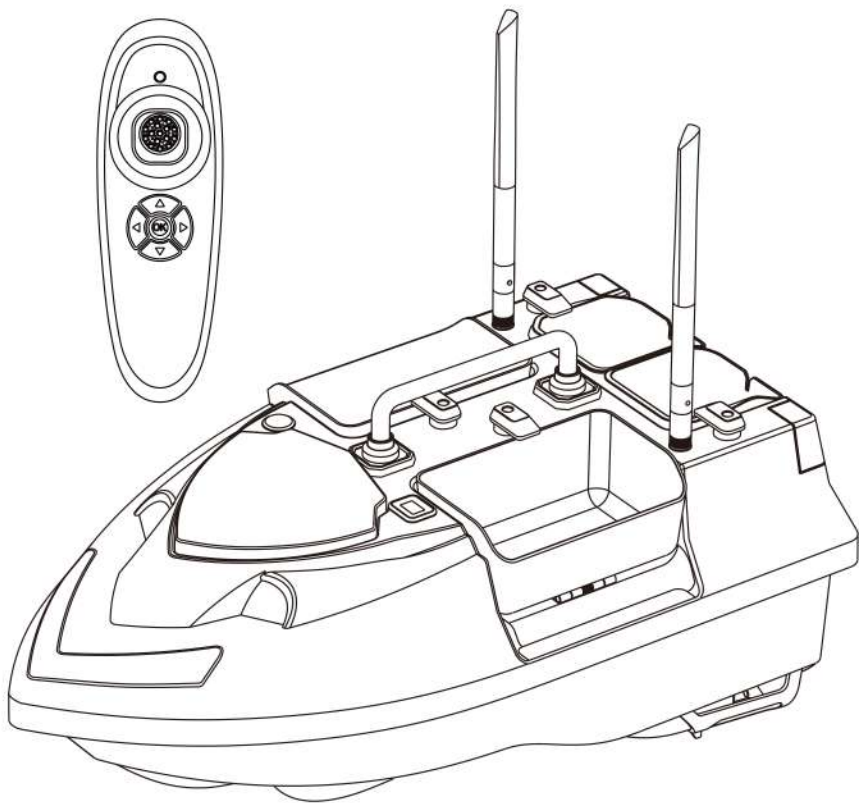

POWER SUPPLY PROMPT

You can make the boat operational by simply connecting any power cord to a battery. If you use two batteries at the same time, you can significantly prolong its working time.

Power on

1. Place the boat on a flat surface and turn on the power of the boat
 2. Push the remote control power button. After the frequency is matched, the remote control indicator light is always on, the front light is always on, and the tail light is always blue
- Note:** Do not place the boat on a slope before matching. Operate the left and right motors before launching to see if they work.

Fixed-speed Cruise control

1. Push the remote control stick upwards
 2. Push forward for 5 seconds to turn on fixed-speed cruise control, push back to turn off fixed-speed cruise control
 3. The remote control stick can adjust the direction of the boat
- Note:** After entering fixed-speed cruise control mode, push the joystick backward to exit fixed-speed cruise control

 
Light control

The front light button controls the front light, the ok button controls the tail light, short press the button, the light switches between constant "on-flashing-off", the boat light is constant on after the frequency is completed; the front light is constant white, the rear light is constant blue, the tail light flashes red in low battery state; if the frequency is not successfully linked or the frequency is disconnected, the tail light flashes red and blue alternately; the front light flashes

 
Low battery reminder

1. When the boat is in low battery state, the remote control will make a "beep" "beep" reminder sound
2. When the remote control is in low battery state, the remote control indicator light will flash

Silo button Feature

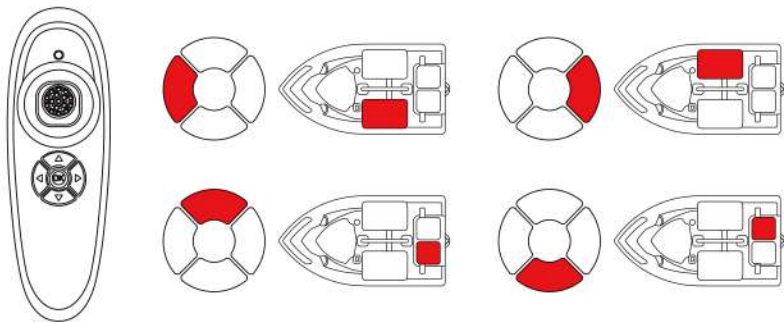



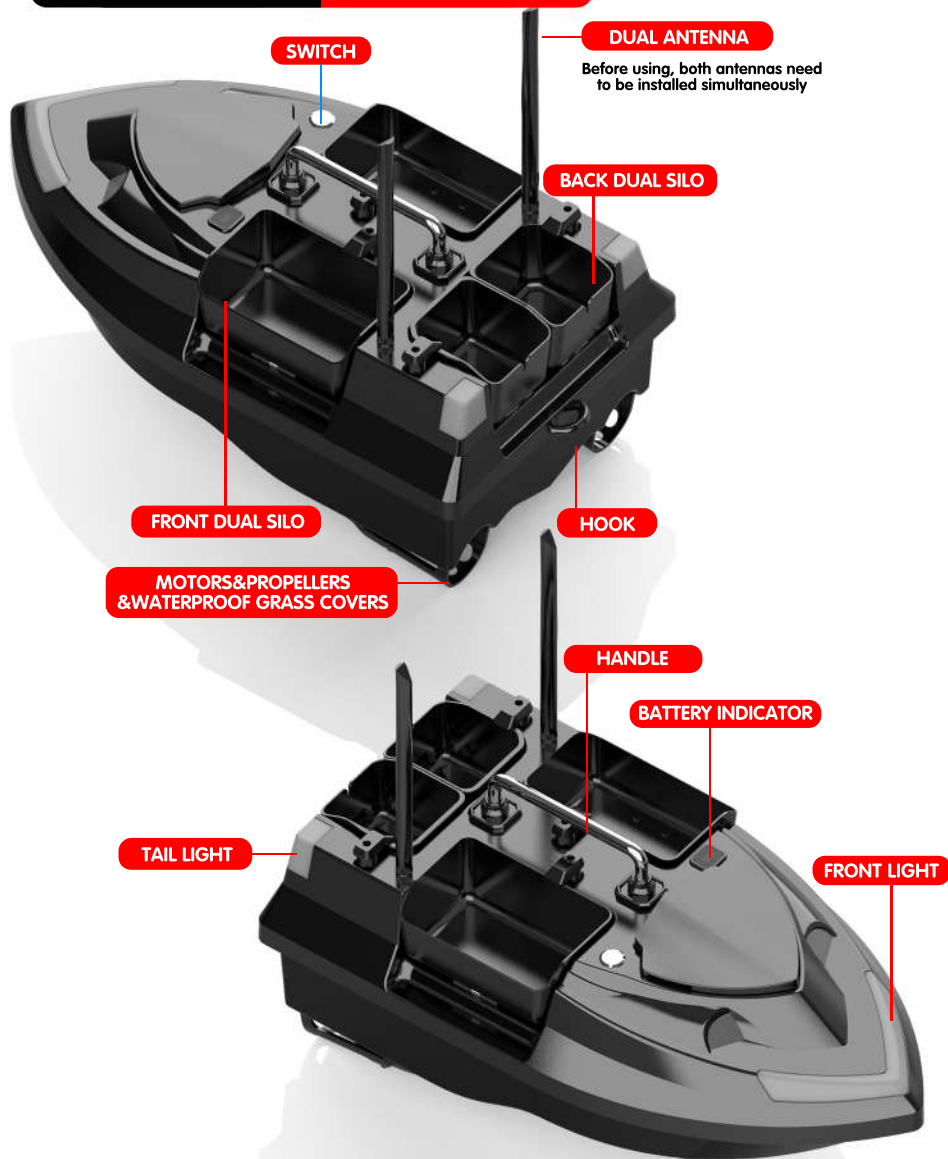

STREAMLINED HULL**2.4G REMOTE CONTROL****7.4V LARGE CAPACITY BATTERY****Battery usage and charging instructions:****●Boat battery (standard configuration)****●Connect to the power supply**

This boat has a built-in battery, just connect the battery connector when using



- **Remote control**

Please remove the batteries when not in use for a long time.

- **Motor**

Check the motor for any entanglements after each use.

- **Boat Hull**

1. After use, please wipe off the moisture to keep the hull dry and clean.
2. When the battery is not used for a long time, please remove it and charge it for storage.
3. Do not store corrosive liquids and items together
4. Do not get close to high-temperature objects.
5. When not in use, please store the nesting boat to prevent it from getting dusty.

