


**INTERFACE PRODUIT / PRODUCT INTERFACE / BEDIENFELD / INTERFAZ DEL PRODUCTO /
ИНТЕРФЕЙС АППАРАТА / BEDIENING VAN HET APPARAAT / INTERFACCIA PRODOTTO**

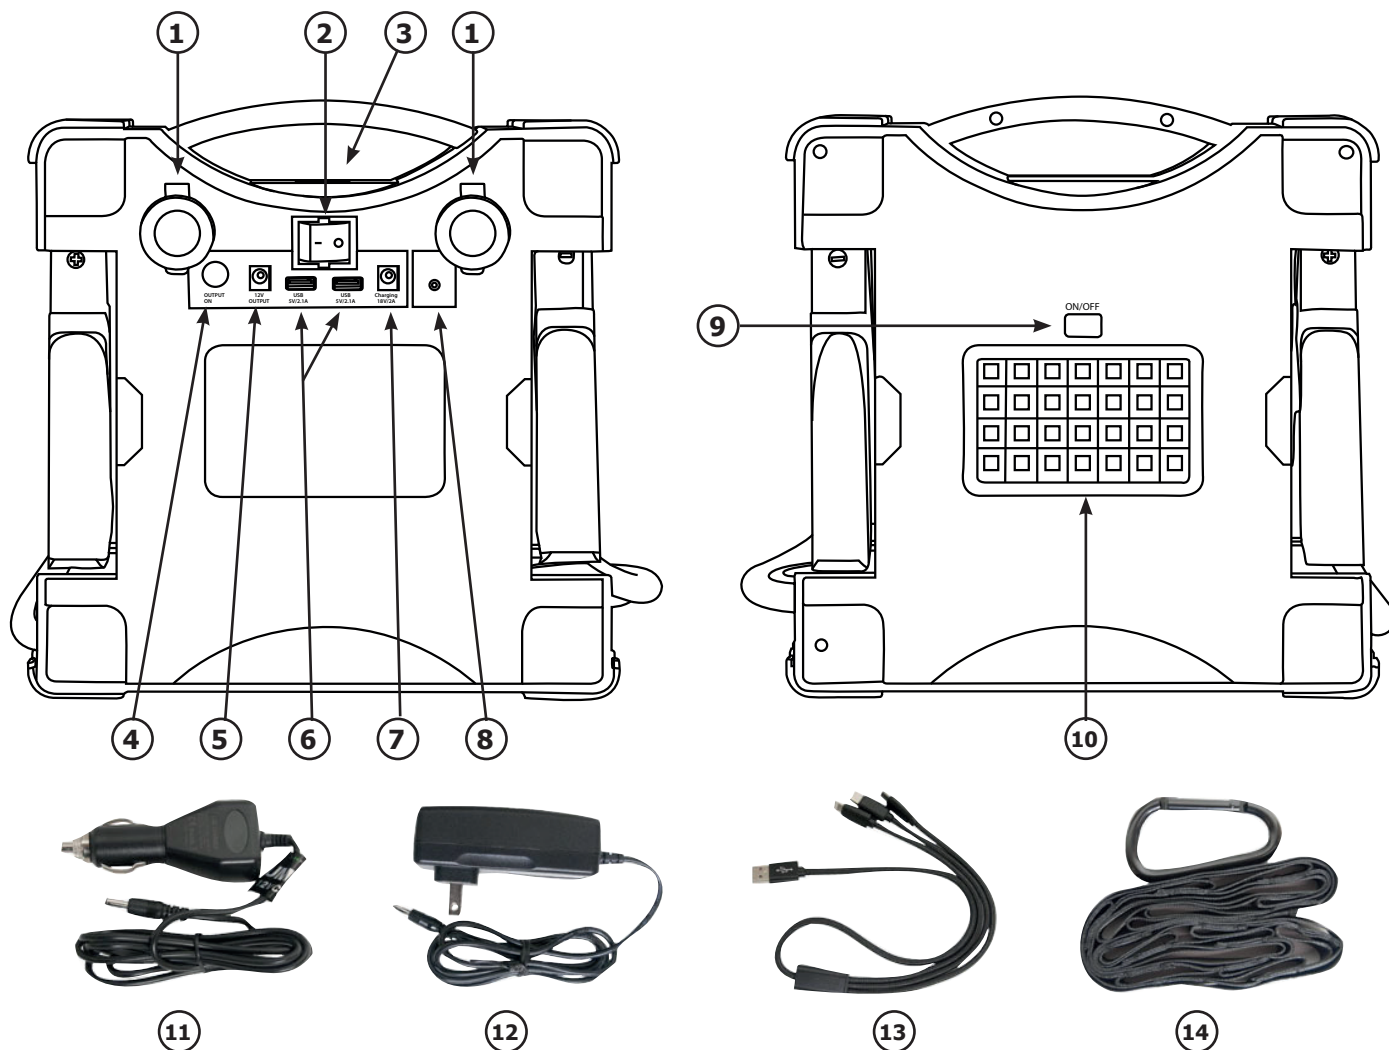

1	Port allume-cigare 12 V / 12 V cigarette lighter port / Zigarettenanzünderanschluss 12 V / Puerto encendedor 12 V / Порт прикуривателя 12 В / Aansluiting voor sigarettenaansteker 12 V / Porta accendi-sigari 12 V
2	Interrupteur principal / Main switch / Hauptschalter / Interruptor principal / Главный переключатель / Hoofdschakelaar / Interruttore principale
3	Affichage LED / LED display / LED-Anzeige / Indicador LED / Светодиодный дисплей / LED display / Schermo LED
4	Bouton de sortie ON / Output ON button / Taste ON / Botón de salida ON / Кнопка выхода ON / Knop uitgang ON / Pulsante di uscita ON
5	Port de sortie 12 V - 5 A / 12 V - 5 A output port / Ausgang 12 V - 5 A / Puerto de salida 12 V - 5 A / Выходной порт 12 В - 5 А / Uitgang 12 V - 5 A / Porta di uscita 12 V - 5 A
6	Ports USB - 5 V - 2.1 A / USB port - 5 V - 2.1 A / USB-Ports - 5 V - 2.1 A / Puertos USB 5 V 2.1 A / Порт USB - 5 В - 2.1 А / USB uitgangen 5 V - 2.1 A / Porte USB - 5 V - 2.1 A
7	Port de charge 18 V - 2 A / 18 V - 2 A Load port / Lade-Eingang 18 V - 2 A / Puerto de carga 18 V - 2 A / Порт для зарядки 18 В - 2 А / Aansluiting laden 18 V - 2 A / Porta di carica 18 V - 2 A
8	LED d'erreur / error LED / Fehler-LED / LED de error / Индикатор ошибки / LED die error aangeeft / LED di errore
9	Bouton lampe de travail / Work lamp button / Schalter für LED-Feld / Botón de lámpara de trabajo / Кнопка рабочей лампы / Knop werkklamp / Pulsante lampada di lavoro
10	Lampe de travail LED / LED work lamp / LED-Feld / Lámpara de trabajo LED / LED Лампа работы / LED werkklamp / Lampada di lavoro LED
11	Chargeur 18 V DC (câble allume-cigare) / 18 V DC charger (cigarette lighter cable) / Adapter 18 V DC (an Zigarettenanzünder) / Cargador 18 V DC (cable encendedor) / Зарядное устройство 18 В постоянного тока (кабель от прикуривателя) / Lader 18 V DC (kabel sigarettenaansteker) / Caricabatterie 18 V DC (cavo accendi-sigari)
12	Chargeur mural 18 V 100-240 VAC / 18 V 100-240 VAC wall mounted charger / Ladegerät zum Anschluss an Steckdose 18 V 100-240 VAC / Cargador 18 V 100-240 VAC / Настенное зарядное устройство 18 В, 100-240 В переменного тока / Netaansluiting 18 V 100-240 VAC / Caricabatterie a muro 18 V 100-240 VAC
13	Câble USB 3 en 1 / 3-in-1 USB cable / 3-fach USB-Kabel / Cable USB 3 en 1 / Кабель USB 3 в 1 / USB-kabel 3 in 1 / Cavo USB 3 in 1
14	Sangle / Strap / Tragegurt / Cinta / Стяжная лента / Riem / Cinturino

SAFETY INSTRUCTIONS



This manual includes guidelines on the operation of your device and the precautions to follow for your own safety. Ensure it is read carefully before first use and keep it handy for future reference.

This device should only be used for start-up or power supply within the limits indicated on the device and in the manual. The safety instructions must be followed. In case of improper or unsafe use, the manufacturer cannot be held responsible.



Device suitable for indoor use only. Do not expose to rain or excessive moisture.

This device may be used by children from age 8 and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they are under supervision or have been told how to use the device safely and are aware of the potential risks. Children must not use the device as a plaything. Cleaning and servicing tasks may not be carried out by children unless they are supervised.

Do not use for charging non-rechargeable batteries

Do not use any charger other than the one supplied with the machine to charge the batteries.

Do not use the device if the charging cable appears to be damaged or assembled incorrectly in order to avoid any risk of short circuiting the battery (NOMAD POWER charger).

Never charge a frozen or damaged battery.

Do not cover the device

Do not place the device near a fire or subject it to heat or to longterm temperatures exceeding 50°C

Risk of explosion or acid projection if the clamps are short-circuited or if the 12V booster is connected to a 24V vehicle or vice versa.

The automatic mode of operation and usage restrictions are explained below in these operating instructions.



Risk of explosion and fire!

A battery being charged can emit explosive gas.



- Avoid flames and sparks. Do not smoke.
- Protect the electrical contacts of the battery against short-circuiting.



Acid projection hazard!



- Wear safety goggles and protective gloves



- If your eyes or skin come into contact with battery acid, rinse the affected part of the body with plenty of water and seek immediate medical assistance.



Connection / disconnection:

- Disconnect the power supply before connecting/disconnecting the device to/from the battery.



Class II device (NOMAD POWER charger)



Class III device (NOMAD POWER).



Maintenance:

- The power supply cable cannot be replaced. If the cable is damaged, the device should not be used (NOMAD POWER charger).
- Service should be performed by a qualified person
- Warning! Always remove the power plug from the wall socket before carrying out any work on the device.
- Under no circumstances should solvents or other aggressive cleaning agents be used.
- Clean the device's surfaces with a soft, dry cloth.



Regulations



- The device complies with European Directive.
- The certificate of compliance is available on our website.



- EAC conformity mark (Eurasian Economic Commission)



- Equipment in compliance with British requirements. The British Declaration of Conformity is available on our website (see home page).



- Equipment in conformity with Moroccan standards.
- The declaration C_M (CMIM) of conformity is available on our website (see cover page).



Disposal:

- This product should be disposed of at an appropriate recycling facility. Do not dispose of in domestic waste.
- The battery must be removed from the device before the latter is discarded.
- The device must absolutely be disconnected from the power supply network before removing the battery.

PRODUCT DESCRIPTION

Thanks to their high-performance lithium-ion battery (**PRO 12 XL**: 118.4 Wh - **PRO 24 XL**: 236.8 Wh), the NOMAD POWER PRO 12XL / PRO provides 3 functions:

- Instant starts of vehicles:
- **PRO 12 XL** : equipped with a 12 V battery (6 cells of 2V), such as cars, commercial vehicles, camper vans, boats, agricultural vehicles etc.
- **PRO 24 XL** : equipped with a 24 V (12 cells of 2V), such as buses, trucks, plants, etc.



Do not start a Lithium LiFePO4 battery with this booster as it is equipped with a Lithium NMC battery whose voltage is not compatible.


- 12V power supply of all electronic devices via their USB ports and/or cigarette lighter ports. Most of mobile phones, smartphones, portable gaming devices, electric cool box, etc. can be charged with the included accessories.
- Service lighting

	Start function													
NP PRO 12XL														
NP PRO 24XL														



Extreme outside temperatures or mechanical problems on the vehicle (poor starter, no fuel or engine problems) can limit the booster's capacity.

LCD SCREEN DESCRIPTION

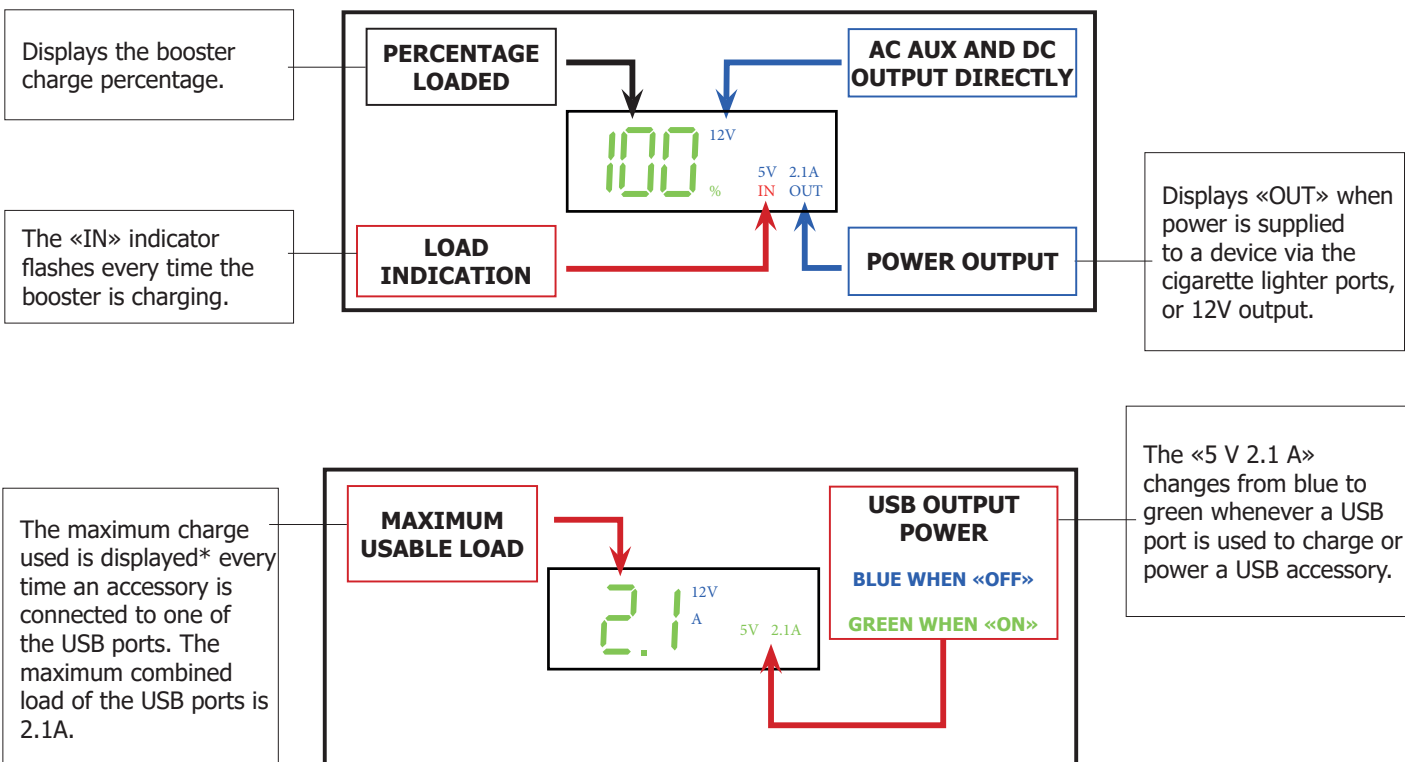

* The USB amps will only be displayed for 2 seconds before the LEDs return to the percentage charge display.

INTERNAL BATTERY CHARGING




It is best to charge the Nomad Power at a temperature > 10°C. If the temperature is below 0°C, do not charge the Nomad Power. Place the Nomad Power in a temperate room for 1 hour before charging.

Before storing a NOMAD POWER for an indefinite period of time :


- Do not charge it to 100%, but rather between 60 and 80%.
- Every 6 months, perform a 100% charge to keep its performance intact.

For an optimal charging comfort in all circumstances (at home, at work or on the road), the NOMAD POWER is equipped with a wall mounted charger and a cigarette lighter cable.

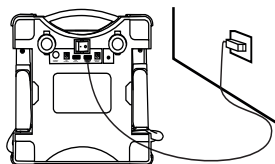


- 1 - Plug the wall mounted charger (12) into a mains socket.
- 2- Connect the end of the cable to the 18 V/2 A charging port (7) of the NOMAD POWER)

 OR



 - 1 - Plug the car adaptor (11) to the vehicle's cigarette lighter socket.



- 2 - Connect the other end of the adapter to the 18 V/2 A charging port (7) of the NOMAD POWER to start charging.

STRAP FASTENING



Put the NOMAD POWER on a flat surface. Secure it by inserting the safety strap into the handle and attaching it securely to the vehicle using the carabine hook provided.

USE AS A BOOSTER

 


RECHARGE THE NOMAD POWER before first use and after each use.




Before use, make sure that the NOMAD POWER is charged to at least 50% of its load capacity. A charged booster guarantees vehicle starting and allows the 118.4 Wh (PRO 12 XL) / 236.8 Wh (PRO 24 XL) to be used to charge a wide range of accessories.

1



Switch on the booster by pressing the main switch (2), it becomes illuminated and the display lights up.


2

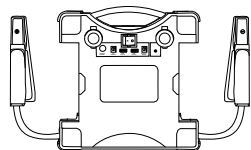

Disconnect the red and black clamps from the booster. A flashing red and green «8» appears on the display. It indicates that the charger is looking for a battery.



3

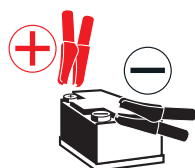

- 1- Connect the red clamp to the (+) of the battery.
- 2- Connect the black clamp as far as possible from a fuel hose or fitting and as close as possible to the starter ground.

The LED indicator shows a green «8» to indicate that the battery is detected and properly connected.




If the LED (8) lights up and a red «8» appears on the display, it means that there is an error that needs to be corrected. Refer to the fault codes (PRO 12 XL) or the table «Troubleshooting» (PRO 24 XL) of this manual.

5



Turn the ignition key to the on position and start the engine.

6

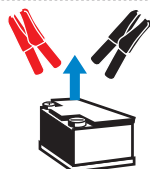


After starting, disconnect the battery clamps from the battery and replace the clamps on the booster.



Leave the vehicle running.

 7



Turn the unit off.

USE OF THE BOOSTER'S INTERNAL BATTERY

When the vehicle battery is too discharged, the booster battery can be used as a power source for starting. Proceed as follows:


1. Disconnect the engine block terminals from the vehicle battery.
2. Connect the terminals of the engine block to the clamps of the nomad power. The booster does not detect a battery, a flashing red and green «8» appears on the display.
3. Press the on button (4) for 3 seconds. The led indicator displays a green «8» to indicate that the nomad power's lithium battery is becoming the vehicle's primary power source.
4. Performing a start. The engine uses the power from the nomad power pro xl's lithium battery for starting.
5. Reconnect the terminals of the engine block to the vehicle battery.



Once the vehicle is started, the engine block must always be powered by a battery. The connection of the engine block terminals to the vehicle battery must be made before disconnecting the NOMAD POWER clamps from the terminals.


CHARGING MOBILE PHONES

The NOMAD POWER is equipped with two USB ports (6) and a 3-in-1 (USB-C, Micro USB connections) (13) offering flexibility for most phones or tablets. Additional standard USB accessories can also be used (not included).

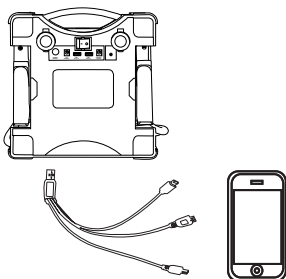


- 1 - Turn the main switch (2) to the «ON» position.
- 2 - Connect the supplied 3-in-1 USB cable.
- 3 - Connect it to the electronic device to be recharged: tablet, mobile phone...

POWER SUPPLY

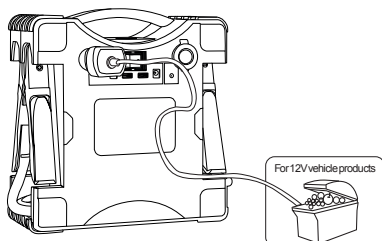


- 1- Connect the supplied 12 V cigarette lighter cable to one of the two 12 V cigarette lighter ports (1).
- 2 - Link the power supply cable to the power socket of your 12 V electrical device.

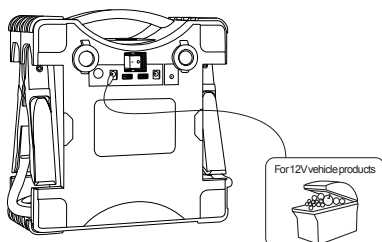

- 1 - Connect a 12 V power supply cable (not supplied) to the 12 V / 3.5 A output port (5).
- 2 - Link the power supply cable to the power socket of your 12 V electrical device.

FLASHLIGHT FUNCTION

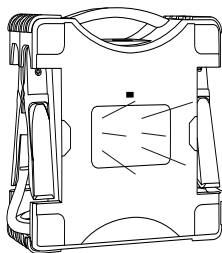

Press the ON/OFF button on the LED (9) to activate the lighting.
Each new press changes the lighting mode (3 available modes: normal, strobe light, SOS) until the light goes out.

FAULT CODES (PRO 12 XL)

E1	Reverse polarity	E2	Timed out	E3	High temperature	E4	Low temperature
E5	High current	E6	Low current	E7	Short circuit	E8	Unit is not activating
E0* Low voltage				E9* Over Voltage			
- The voltage of one of the battery cells is between 1.1 V and 2.4 V. - The battery voltage is below 13.5 V. Connect the charger and press the ON/OFF switch until E0 disappears from the display. After this operation, the charging of the product should be monitored.				Due to an imbalance in one of the battery cells, the voltage of one of the cells is higher than 4.35 V. Stop charging and contact your dealer.			

* Products with S/N greater than "S2206..."

PROBLEM SOLVING (PRO 24 XL)

Troubleshooting	Causes	Solutions
The screen is black and shows nothing.	Sleep mode is on.	Press the ON/OFF button or toggle the main switch to the OFF then ON position. The screen lights up again.
Each connection causes a flashing red and green "8" to appear on the display.	The booster doesn't detect a battery.	Turn on the lights or the radio so that the NOMAD POWER detects a current load and activates.
A fixed red "8" appears on the LCD screen when the clamps are connected and an alarm sounds.	The device detects a polarity reversal.	Check the battery polarity. Red clamp to the positive battery terminal (+) and the black clamp to the negative (-).
	Thermal protection of the booster.	The charger is overheated because the ambient temperature is high. Wait a few minutes for the booster to cool down before trying to start again.
	Short circuit.	Damaged battery. Change the battery.
A fixed red "8" appears on the LCD screen as soon as the booster switches on.**	The battery is heavily discharged (<4V).	Replace the vehicle battery.

** Products with S/N less than "S2206..."

WARRANTY

The warranty covers faulty workmanship for 1 year from the date of purchase (parts and labour).

The warranty does not cover:

- Transit damage.
- Normal wear of parts (eg. : cables, clamps, etc..).
- Damages due to misuse (power supply error, dropping of equipment, disassembling).
- Environment related failures (pollution, rust, dust).

In case of failure, return the unit to your distributor together with:

- The proof of purchase (receipt etc ...)
- A description of the fault reported

CARACTÉRISTIQUES TECHNIQUES / TECHNICAL FEATURES / TECHNISCHE DATEN / CARACTERÍSTICAS TÉCNICAS / ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ / TECHNISCHE EIGENSCHAPPEN / CARATTERISTICHE TECNICHE

NOMAD POWER	PRO 12 XL	PRO 24 XL
Dimensions / Dimensions / Abmessungen / Dimensiones / Afmetingen / Dimensioni	278 x 110 x 274 mm	
Poids / Weight / Gewicht / Peso / Gewicht / Peso	5.6 kg	
Type et capacité de batterie / Battery type and capacity / Typ und Kapazität der Batterie / Tipo y capacidad de batería / Type en capaciteit van de accu / Tipo e capacità della batteria	LiFe PO ₄	
	12 V (4 cellules de 3,7 V)	24 V (8 cellules de 3,7 V)
	118.4 Wh - 8 Ah	236.8 Wh - 8 Ah
Courant de démarrage / Starting current / Startstrom / Corriente de arranque / Startstroom / Corrente di avvio	1000 A	1400 A
Courant de pointe / Peak current / Spitzenstrom / Corriente de punta / Pieks-troom / Corrente di punta	1800 A	2400 A
Pic batterie / Battery peak / Spitzenwert der Batterie / Pico batería / Piek accu / Picco batteria	3000 A	3000 A
Image de la puissance de démarrage sur 3 s / Image of the starting power over 3 s / Startenergie über 3 s / Imagen de la potencia de arranque sobre 3 s / Weergave startvermogen over 3 s. / Immagine della potenza di avviamento su 3 sec.	22000 J	60000 J
Port d'entrée (chargement) / Input (loading) / Eingang (Ladevorgang) / Puerto de entrada (cargamento) / Ingang (laden) / Porta d'entrata (carica)	18 V - 2 A	
Ports de sortie (Câbles de démarrage intégrés) / Output ports (Built-in Jumper Cables) / Ausgänge (Starthilfekabel inbegriffen) / Puertos de salida (Cables de arranque integrados) / Uitgangen Geïntegreerde startkabels) Porte di uscita (Cavi di avviamento integrati)	5 V - 2.1 A (x2) 12 V - 3.5 A	5 V - 2.1 A (x2) 12 V - 3.5 A
Température de fonctionnement / Operating temperature / Betriebstemperatur / Temperatura de funcionamiento / Bedrijfstemperatuur / Temperatura di funziona-mento	0°C / 40°C	
Température de recharge / Recharging temperature / Temperatur bei Wiederaufladung / Temperatura de recarga / Temperatuur opladen / Temperatura di ricarica	10°C / 40°C	

PICTOGRAMMES / PICTOGRAMS / ZEICHENERKLÄRUNG / ICONOS / СИМВОЛЫ / PICTOGRAMMEN / PITTGRAMMI

	- Appareil(s) conforme(s) aux directives européennes. - Device(s) compliant with European directives. - Das Gerät entspricht den europäischen Richtlinien und Normen. - Aparato (s) conforme (s) a las directivas europeas. - Аппарат(ы) соответствует(ют) европейским директивам. - Het apparaat is in overeenstemming met met de Europese richtlijnen. - Dispositivo(i) conforme(i) alle direttive europee.
	- Matériel conforme aux normes Marocaines. - Equipment in conformity with Moroccan standards. - Das Gerät entspricht den marokkanischen Richtlinien und Normen. - Equipamiento conforme a las normas marroquíes. - Товар соответствует нормам Марокко. - Dit materiaal voldoet aan de Marokkaanse normen. - Materiale conforme alle norme Marocchine.
	- Appareil conforme aux limites d'interférences électromagnétiques approuvées par la « Federal Communications Commission ». - Device complies with: electromagnetic interference limits approved by the «Federal Communications Commission». - Das Gerät ist konform mit den Grenzwerten für elektromagnetische Interferenz der « Federal Communications Commission ».. - Aparato conforme a los límites de interferencias electromagnéticas aprobados por la Federal Communications Commission. - Аппарат соответствует пределам электромагнитных помех, одобренным Федеральной комиссией по Связи « Federal Communications Commission ». - Het apparaat voldoet aan de richtlijnen voor beperkingen van electromagnetische storingen, zoals opgesteld door de «Federal Communications Commission». - Dispositivo in conformità con i limiti di interferenza elettromagnetica approvati dalla «Federal Communications Commission».

 RoHS	- Appareil conforme à la directive RoHS. - Device complies with RoHS directive. - Das Gerät ist konform mit der Richtlinie RoHS. - Aparato conforme a las directiva RoHS. - Аппарат соответствует директиве RoHS. - Het apparaat is in overeenstemming met de RoHS richtlijn. - Apparecchio conforme alla direttiva RoHS.
  	- Produit faisant l'objet d'une collecte sélective - Ne pas jeter dans une poubelle domestique. - This product should be disposed of at an appropriate recycling facility. Do not dispose of in domestic waste. - Dieses Gerät entspricht der EU-Richtlinie über Elektronik- und Elektro-Altgeräte (Altgeräteverordnung) und darf daher nicht im Hausmüll entsorgt werden. - Este producto es objeto de una recogida selectiva. No se debe tirar a la basura doméstica. - Это устройство подлежит утилизации - Не выбрасывайте его в домашний мусоропровод. - Afzonderlijke inzameling vereist. Niet bij het huishoudelijk afval gooien. - Prodotto soggetto alla raccolta differenziata - non gettare nei rifiuti domestici.



GYS SAS

1, rue de la Croix des Landes
CS 54159
53941 SAINT-BERTHEVIN Cedex
FRANCE