


V805 FISHING BAIT BOAT

GPS VERSION

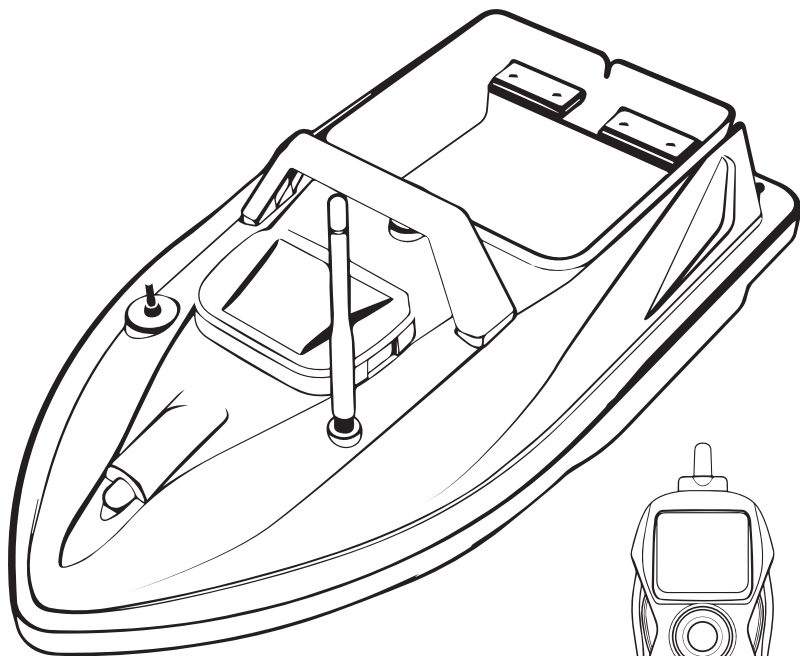

USER MANUAL

V805 GPS USER MANUAL



Push the joystick to the left and the boat turns to the left.



Push the joystick to the right and the boat turns to the right.




Push up on the joystick and the boat moves forward.



Push the joystick down and the boat moves backwards.

V805 GPS USER MANUAL

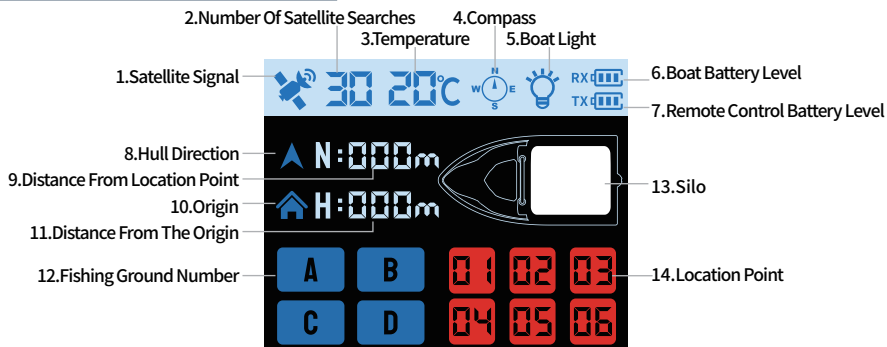

1.Satellite Signal: The icon is not displayed when power on, when the frequency pairing is completed and the GPS signal is searched, the icon will automatically light up.

2.Number Of Satellite Searches: The icon displays '00' at power on and will change in real time when the signal is searched and the number of satellites searched is greater than or equal to 8.

3.Temperature: Upon power-up frequency matching, the ambient atmospheric temperature of the current environment is displayed.

4.Compass: The direction of the compass icon corresponds to the direction of the ship's bow.

5.Boat Light: The display state of the icon corresponds to the 'always on - blinking - off' state of the boat lights.

6.Boat Battery Level: This icon displays the current battery level after frequency pairing.

7.Remote Control Battery Level: This icon shows the current battery level after switching on.

8.Hull Direction: The icon lights up blue after frequency pairing, and the direction of the icon represents the vessel's current travelling status, including left turn, right turn, straight ahead and reverse.This icon flashes red when fixed-speed cruise control is on.

9.Distance From Location Point: The distance is displayed to change only after the fixed point is set. Displays the remaining distance to the target fixed point. When the target fixing point is reached, the distance is 0.

10.Origin: When the origin position is not set, the icon is not displayed; only when the origin position is set, the blue icon is displayed, and when the boat returns to the origin position, the icon flashes.

11.Distance From The Origin: Real-time display of the boat's distance from the origin.

12.Fishing Ground Number: The four letters A, B, C and D stand for 4 fishing grounds and you need to select a fishing ground before you can set a fixed point.

13.Silo: Press once briefly to eject the silo. The silo icon on the screen will flash red. After 5 seconds, the screen's hopper backlight will automatically resume.


14.Location Point: An unset point has a red color background, and the number flashes when a point is selected. An already setting point has a yellow background. After entering the electronic anchor mode, the electronic anchor point has a blue background.

V805 GPS USER MANUAL


POWER-ON PAIRING

Before using, install the antenna, place the boat on the flat ground, keep the remote control more than 0.5 metres from the boat, open the hull switch first, and then long press the power button of the remote control for 3 seconds (long press again for 3 seconds to turn off the power of the remote control). When the frequency pairing is not completed, the red tail lights flash alternately left and right; after pairing, the white front light remain steadily illuminated and the tail lights remain off.

Note: If the frequency pairing is unsuccessful or the remote control is disconnected from the boat, you need to turn off the power of the boat and the remote control, and reopen the frequency pairing operation.

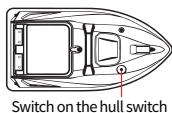

Press and hold the remote control power button for 3 seconds

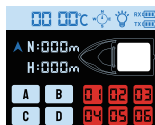

REMOTE CONTROL PUSHBUTTON LIGHTING

Short press the remote control power button to turn on the remote control button light. Tap the remote control power button again to switch off the light. When the remote control is switched on, the backlighting of the buttons is switched on by default.

Short press the power button of the remote control



CALIBRATION

The boat needs to be calibrated before use. Calibration can only be carried out when the frequency pairing operation between the boat and the remote controller is completed, the remote controller displays the satellite signal icon and the number of searching stars is more than 8. Short press the calibration key to enter the geomagnetic automatic calibration. Sail the boat away from the shore 5-6 metres, press the calibration key, the boat will turn around to the left and then to the right on the water surface, and stop rotating when the boat calibration is completed.

Short press to enter geomagnetic auto-calibration



FISHING GROUND SETUP

After the calibration is completed, you are forced to enter the fishing field selection, short press the fishing ground key to select the four fishing grounds A, B, C, D back and forth. When selecting A,B,C,D, the background of the letters is grey and always bright, the background of the fishing grounds selected by the fishing grounds key is always bright blue and the letters are always blinking, the background of the unselected fishing grounds is grey and the letters are always bright. After selecting the fishing ground, press ok key to confirm, the selected letters do not flash and the background blue light is always on, that is, the selection is successful.

Select fishing grounds



Fishing ground confirmation



ORIGIN SETTING AND ONE-TOUCH RETURN

When the boat calibration is completed and the current fishing ground is set, only then can the origin position setting operation be carried out. Sail the boat to the shore as the starting point, short press the origin key to set the origin positioning and record the current point as the origin. When the origin position is set, the origin position icon on the screen lights up in blue. Press and hold for 3 seconds to return to the origin position, return to the origin position set in the current fishing spot. When returning to the origin, the start point icon blinks blue. When the boat stops at the origin, the icon stops blinking.

Long press to clear the current fishing ground origin



The icon is blue when the origin position is successfully set. The icon blinks blue when returning to the origin position.

Short press to set origin position
Long press to return to origin position



V805 GPS USER MANUAL

SETTING THE POSITIONING POINT

After setting the origin point, navigate the boat to the target positioning point. Press any cursor key once to enter the positioning point selection mode, where all digits remain illuminated. Upon first entry, the default is Point 1 of this fishing ground; the selected positioning point's number will flash. Once a point is set, its background turns yellow. Unset positioning points display a red background. Press the left or right cursor key briefly to switch between positioning points. After selecting the positioning point, press the OK key to confirm. Subsequent entries into the waypoint selection mode will automatically recall the previous cursor position. Each fishing ground can store six waypoints, arranged in two rows of three columns.





Selected fixed-point digits blinking



The fixed point that has been set is a yellow background

FIXED-POINT CRUISE

After the fixing point is set, select the fixing point by moving the cursor, short press the fixed-point cruise key, the boat will go to the fixing point automatically. Long press the key to cancel the cruise. When cruising, the corresponding numeric icon flashes and the distance to the fixed point and origin point is displayed simultaneously. When the boat reaches the cruise point, the distance to the fixed point is displayed as 0m, and the remote control emits a short beep 'di-di' and stops travelling.

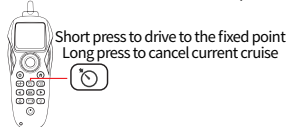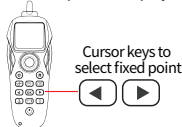

Corresponding positioning point digit blinking

CLEAR BUTTON

When the cursor selects a positioning point, a short press on the clear key will clear the corresponding positioning point. Press and hold the Clear button for more than 3 seconds to clear all points in the current fishing ground.



The number of points selected by the cursor blinks




Delete the point



Delete all points

FIXED-SPEED CRUISE CONTROL

When moving forward, push the rocker forward for more than 5 seconds to automatically open fixed-speed cruise control, push the rocker back to exit cruise control; When the fixed-speed cruise control is on, the cursor blinks red. When driving without fixed-speed cruise control, the cursor always on.

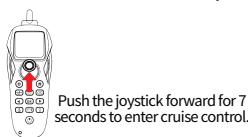

LIGHTING SWITCH

After pairing, the default lighting configuration is: front lights remain steadily illuminated in white, while rear lights remain off. A short press cycles the boat light through the sequence: steady on - flashing - off. The lighting icon on the remote control displays the corresponding status: steady on - flashing - off. During low battery, the rear lights flash red. When unpaired or disconnected, the rear lights alternate flashing red between left and right sides.



V805 GPS USER MANUAL

SILLO BUTTON

Press once briefly to eject the silo. The silo icon on the screen will flash red. After 5 seconds, the screen's hopper backlight will automatically resume.



Silo ejection (red light)



Backlight resumes after 5 seconds

BUZZER BEEPING

Low battery condition: When the vessel's battery is low, it emits a continuous 'di-di' (one long, one short). The remote control emits a continuous 'di-di-di' (short beeps) when its battery is low.

Frequency loss condition: The remote control emits a 'di-di' (short beep) every 10 seconds.

Successful operation: The remote control emits a 'di' (short beep).


Arrive at the designated cruise point: The remote control emits a 'di-di' (short beep).

LOST CONTACT AND RETURN

When the remote control power is low/auto switch off/manually switch off the remote control, the boat will automatically return to the home point where the current fishing ground is located. (To realise this function, you need to set the origin point in advance)

ELECTRONIC ANCHOR MODE

1. Electronic Anchor Function Description

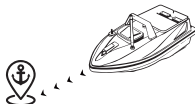

After the electronic anchor point is activated, the boat resists the interference of water flow and wind and is fixed at the electronic anchor point.

2. Setting Up Electronic Anchor Points

① When a pre-set electronic anchor point has been designated as a positioning point, select that point and press and hold the electronic anchor key. The point will turn blue, indicating the electronic anchor point has been successfully set.



(1) Short press to switch between any positioning points.



The selected point's digits flash.



(2) Long press to select this point as an electronic anchor point.




Electronic anchor point turns blue background

② When the pre-set electronic anchor point has not been designated as a positioning point, first navigate the boat to the preset electronic anchor point location. Then, using the cursor keys, select any unassigned positioning point. Press and hold the electronic anchor key until the selected point displays a blue background, indicating the electronic anchor point has been successfully set.



(1) Navigate the boat to the location where the electronic anchor point is to be set.

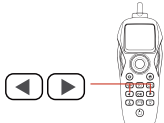

(2) Short press to switch to any unassigned positioning point



The selected point's digits flash (e.g. 04).



(3) Long press to select this point as an electronic anchor point.



Electronic anchor point turns blue background

Note: After the electronic anchor point is set, the cursor lock cannot be moved left or right, the clear key has no function, and long pressing the joystick cannot activate cruise control. Only the light key, OK key, and hopper selection key functions remain.

V805 GPS USER MANUAL

3.Exit electronic anchor mode

Press and hold the electronic anchor key for three seconds to exit electronic anchor mode, restoring the positioning interface.



Press and hold the electronic anchor key to exit electronic anchor mode.



Fixed-point interface restoration

PAIRING

Press and hold the remote control's OK button without releasing. After powering on the boat, switch on the remote control's power switch. Pairing is complete upon hearing a 'beep' sound.

(Should the boat and remote control fail to connect, repeat this pairing procedure.)

Boat Battery Use and Charging Instructions:

● Main unit battery (one as standard)



● Connecting the power supply



Remote control charging instructions:

● Built-in rechargeable battery

When the remote control is low on battery, the remote control makes a ticking sound and needs to be recharged.



● Motors

Check for tangled debris after each use.

● Boat hull

1. After use, please wipe the water to keep the boat dry and clean.
2. When the battery is not used for a long time, please take it out and charge it for storage.
3. Do not store corrosive liquids and items together
4. Please do not close to high temperature objects
5. When not in use, please store the boat to prevent dusting.