

MANUAL DE USUARIO


CÁMARA WIFI V387

Procedimiento


Descargue la APP del producto:

- Busque la aplicación “V380” en iPhone App Store, o en Android Play Store.
- Descargue e instale la aplicación.
- Agregar y ver:
 - Modo WIFI Smartlink:

La configuración predeterminada de otros dispositivos como cámaras de exterior “AP Hotspot Mode” y puede ser configurado con “AP Quick Configuration” o usando “Hotspot Configuration”

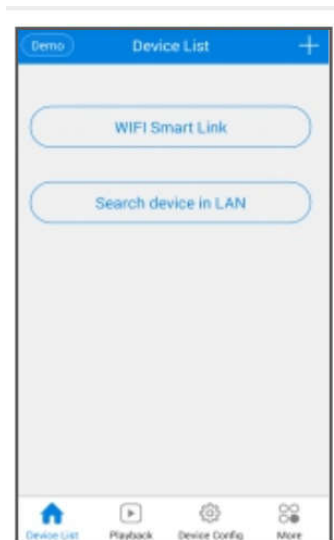


El usuario asegurarse que el teléfono móvil ya esté conectado a la red WIFI.
Se hace click en “WIFI Smart Link” aparecerá una imagen como la siguiente:

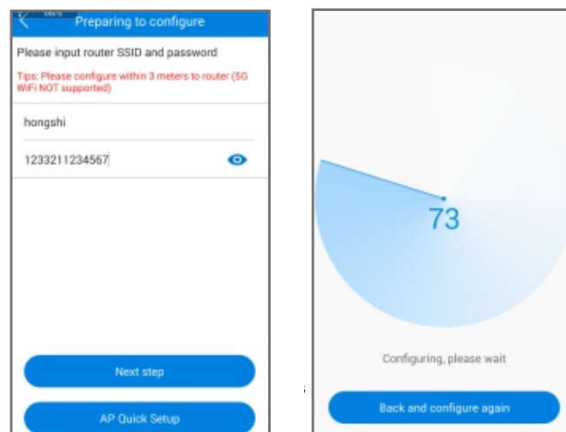


Introduzca la clave de acceso del Router (asegúrese de que el SSID sea correcto), luego haga click en “Next”.

Después de haber ingresado a la red WIFI, la cámara se intentará conectar con el Router con el SSID y la clave que usted haya suministrado anteriormente. Este proceso puede tardar unos 30 – 60 segundos, luego, la cámara WIFI estará conectada con el router y la ID de la cámara será añadida a la lista de dispositivos. Por último, puede hacer click en item de la lista de dispositivos para poder visualizar el vídeo en vivo.

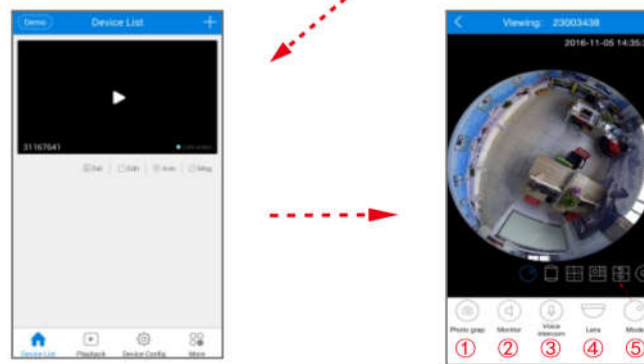

- Cómo configurar la cámara WIFI como un punto de acceso (Hotspot):
 - Pulse el botón “reset” de la cámara.
 - Espere 1 o 2 segundos.
 - Agregue la cámara en la lista de dispositivos mediante la opción “Search Device”.

- Registro de vídeos

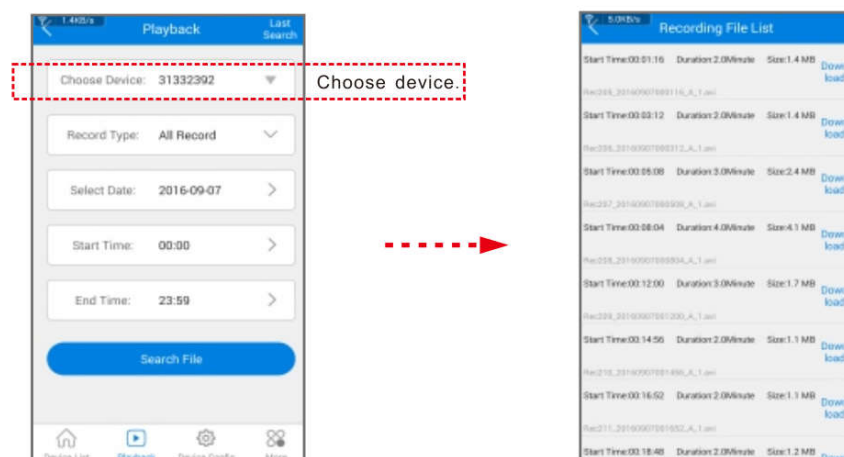

USER MANUAL

WIFI CAMERA V387

Procedure

Software download and installation:


- Search “V380 in the App Store in Iphone, or in Google Play Store in Android.
- Download and install the APP.
- Add and watch:
 - WIFI Smartlink mode::

Devices which support Smartlink configuration can issue a voice prompt “waiting for wifi smartlink configuration”. The default setting of other devices like outdoor cameras is AP Hotspot Mode and it can be configured according to “AP Quick Configuration” or “Hotspot Configuration”.

-The wifi camera default mode is WIFI smart Link.


-If you want to change the WIFI router, you need to reset the WIFI Camera: Push the WIFI Camera “Reset” button for 10 seconds (Some model PTZ camera’s reset button at the bottom of the camera), then the camera will restore the default setting.

-You can set the camera to work as the independent access point (Hotspot) by push the “reset” button on the camera for 1 to 2 seconds if the camera smartlink mode or change the mode by APP’s “Network setting”.

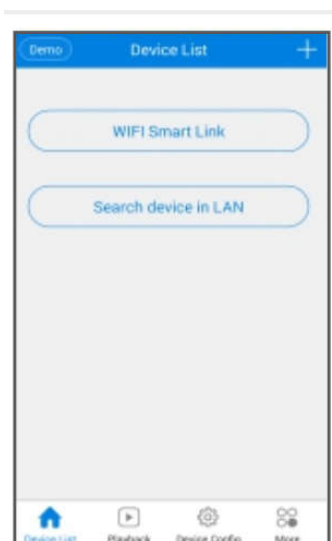

First, user should make sure that the mobile phone has already connected to the proper wifi router Access point.


Click the “WIFI Smart Link” menu. The UI show as below picture:

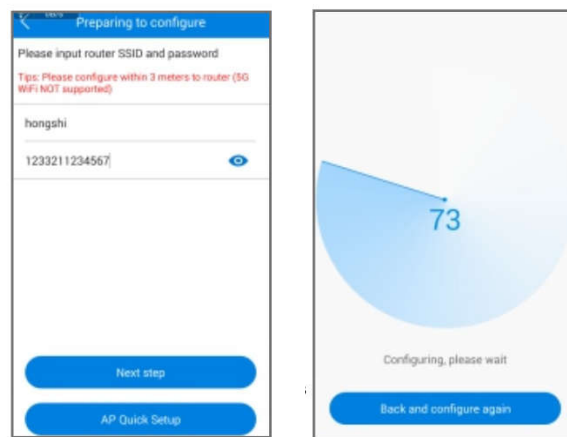

Input the access point router’s password (make sure that its SSID is correct), and click the “Next” button.

After you done that, the WIFI Camera will try to connect the Access Point Router with the SSID and password you have inputed. The process will take 30 – 60 seconds, after the WIFI camera connect the WIFI access point router successfully. The WIFI camera ID

will be added to the device list. Last, you can click the item on the device list, then you can see the live video.

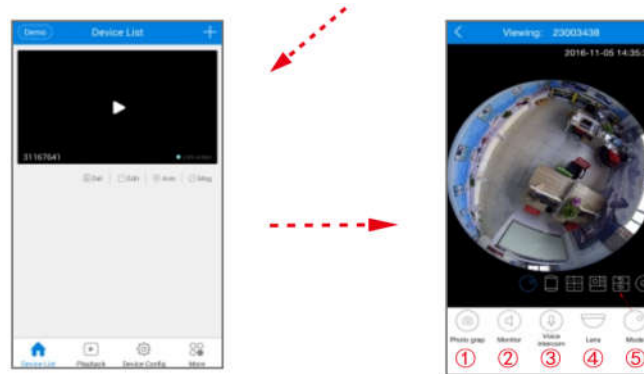

- How to set WIFI camera as Access Point (Hotspot):
 - Push the Camera's "reset" button (Some at the bottom) for 1 to 2 seconds, or set it by app's "Network Setting".
 - Add the Camera into the "device list" by "Search Device".

- Video Playback

