

WX 6200 ES [CONN]



FEATURES

- OHV engine provides consistent power for multiple applications
- Fuel: Petrol
- Starting Systems: Electric (with battery)
- Low-oil level shutdown automatically safeguards engine from damage
- Engine oil for the first startup supplied in a bottle
- Digital multi meter tracks engine runtime for maintenance intervals
- Fuel gauge allows user to track gasoline levels
- Practical quick user's Starting Instruction (decal)
- AVR Automatic Voltage Regulator
- Kit wheels integrated for easy transportation
- CONNector for AMF
- Optional: Automatic Main Failure (AMF)



Caracteristici principale

Frecvență	Hz	50
Tensiune	V	230
Faze		1
Putere pasivă	watt	5800
Putere continuă	watt	5300



Motor		
Marca	Pramac	
Tip	OHV	
Emisii de eșapament optimizate	Stage V	
Viteză nominală de funcționare	rpm	3000
Combustibil	Benzină	
Sistem de pornire	Electric (+Pornire la sfoara)	
Capacitate ulei	l	1.1
Protecție ulei	✓	

Alternator		
Sistem de regulare tensiune	AVR	

Date dimensionale		
Lungime	(L) mm	800
Lățime	(W) mm	698
Înălțime	(H) mm	620
Greutate fără combustibil	kg	89
Dimensiuni cutie carton lungime/lățime/înălțime	mm	810x625x607

Autonomia		
Capacitate rezervor combustibil	26	
Consum combustibil la 50%	l/h	2.17
Timp de funcționare la 50%	h	12

Nivel zgomot		
Nivelul de zgomot garantat (LWA)	dBA	97

GENSET CONTROL PANELS

Mounted on the genset and complete of: instrumentation, control, protection of the generating set and sockets.

COMMANDS

- Start selector switch with key: OFF - ON - START
- Selector switch for external control connector (AMF)
- Choke Lever

INSTRUMENTATION

- Voltmeter
- Frequency meter
- Hourmeter
- Fuel gauge

PROTECTIONS


- Thermal Magnetic protection
- Oil Guard

OUTLET:

- CONNector for AMF

PRIZE

SCHUKO 230V 16A IP44	2
2P+T CEE 230V 32A IP44	1

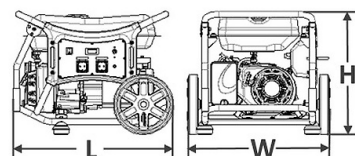

ACCESSORIES CONTROL PANEL

ATS - Automatic Transfer Switch

With the Powermate Automatic Transfer Switch, you can easily connect your generator to the power grid and continue to supply your domestic appliances in case of a power outage.

Equipment:

- Control unit
- Contactor with interblock
- Selector Switch: AUTO / MANUAL
Manual option it is used to decouple the machine from the generator.
The generator can start independently from the panel.
- Emergency Button: Stop the generator once pressed.
- Battery charged
- 5 meters control wiring (with connector)



Status indicators:

- Utility Power lamp: Detects the external grid.
- Generator lamp: The load switch to the generator the warning light turns on.
- Load lamp: ATS is powered by the load, it comes from the grid or from the generator.
- Battery lamp: It keeps charged the generator starter Battery, so it is always ready to go.
- Failure lamp: Indication of anomalies. The generator fails to start.

It is strongly recommended that your ATS need to be installed by a professional.

DIMENSIONS PANEL

Lățime	(W) mm	410
Înălțime	(H) mm	310
Adâncime	(D) mm	180
Greutate	kg	7

