

FR	02-06 / 37-40
EN	07-11 / 37-40
DE	12-16 / 37-40
ES	17-21 / 37-40
RU	22-26 / 37-40
NL	27-31 / 37-40
IT	32-36 / 37-40

NOMAD AIR

SAFETY INSTRUCTIONS



This user manual includes operation instructions, and the safety precautions to be followed by the user. Please read it carefully before first use and keep it for future reference. These instructions must be read and fully understood before use. Do not carry out any alterations or maintenance work that is not directly specified in this manual. The manufacturer shall not be liable for any damage to persons or property resulting from use not in accordance with the instructions in this manual. In the event of any problems or concerns, please seek advice from a suitably qualified person to ensure that the product is being operated correctly. This unit must be used for inflation only, within the limits indicated on the unit and in the manual. The safety instructions must be followed. In the event of improper or dangerous use, the manufacturer cannot be held responsible.



The device is destined to be used indoors. Must not be exposed to the rain.

This unit can be used by children aged eight or over, by people with reduced physical, sensory or mental capabilities as well as by those with a lack of experience or knowledge. However, these aforementioned persons must be properly supervised and they must have read and understood the user instructions, alongside having been made aware of the risks. Children must not play with the product. Cleaning and maintenance should not be performed by an unsupervised child.

In order to avoid short-circuiting the battery, do not use the appliance if the charging cable is damaged or has an assembly defect.

Do not cover the device.

Do not place the charger near a source of heat, or in permanently high temperatures (above 60°C).






Maintenance:

- Never use solvents or other aggressive cleaning agents.
- Clean the surfaces of the unit with a dry cloth.



Regulations:

- Equipment complies with European directives
 - The Declaration of Conformity is available on our website.
- 
- The Eurasian Economic Community (EAEC) mark of conformity.
- 
- This equipment conforms to UK requirements.
 - The UK Declaration of Conformity is available on our website (see cover page).
- 
- This device complies with Moroccan standards.
 - The C_m (CMIM) declaration of conformity is available on our website.



 
- Equipment compliant with Chinese requirements on the restricted use of hazardous substances in electrical and electronic products.

 


Disposal:


- This product should be disposed of in an appropriate recycling facility. Do not dispose of in domestic waste.
- The battery must be removed from the unit before it is disposed of.
- The battery must be disposed of at an appropriate recycling facility.

PRODUCT INTERFACE


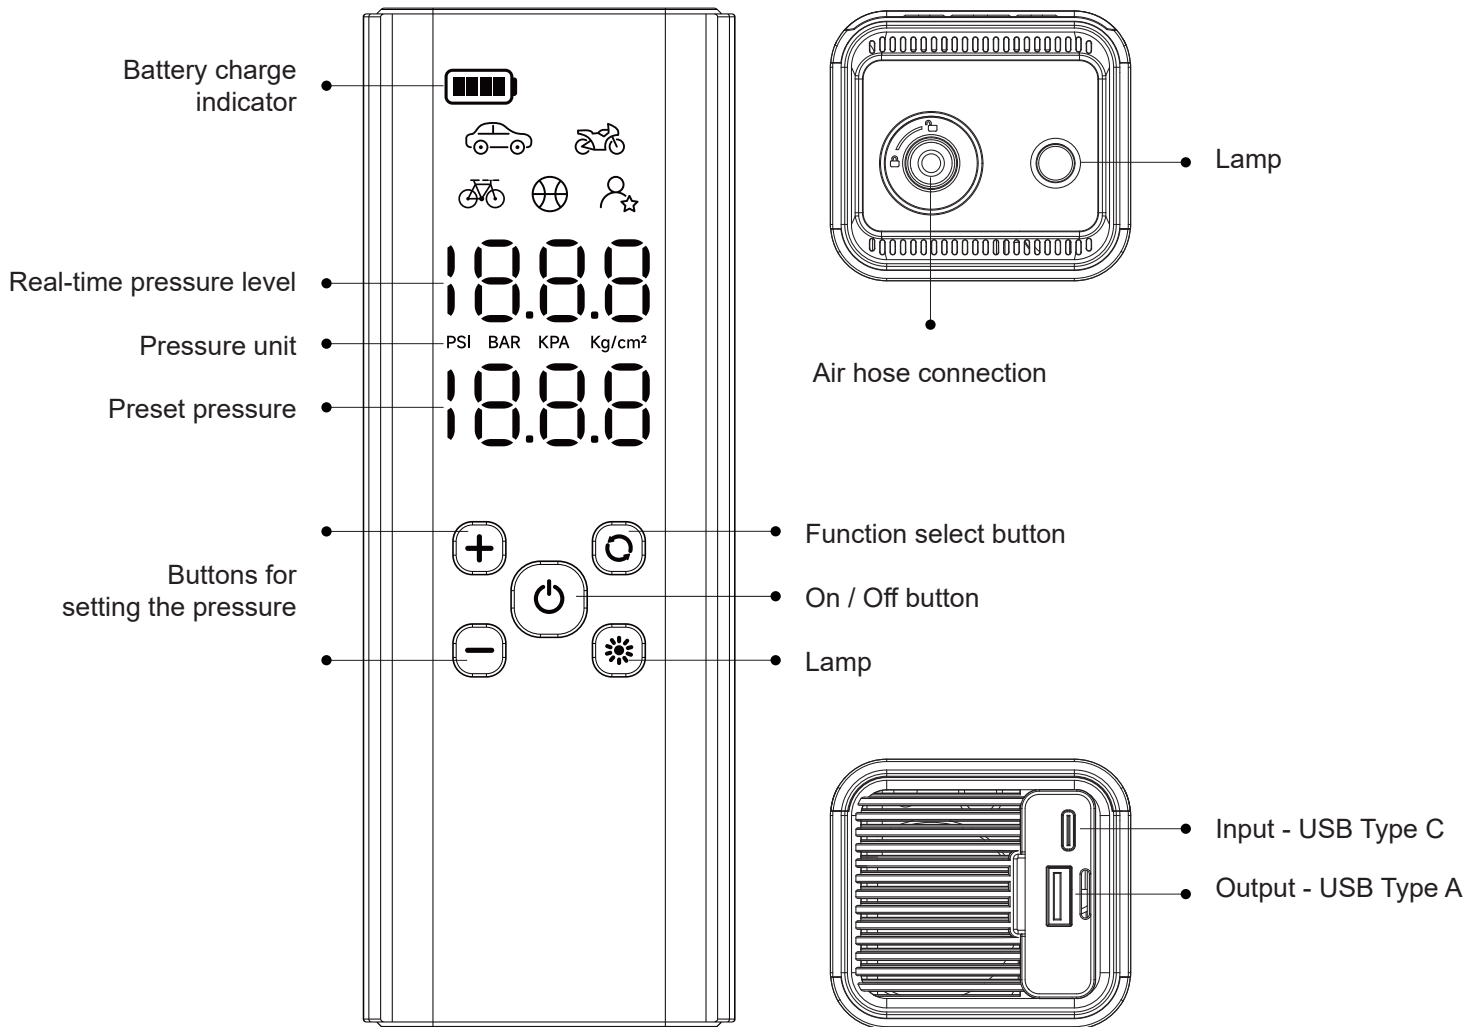


Accessories

 
Air hose



Inflation needle

  Nozzle adapters
for inflation (x2)Inflation nozzles
(French x2)

 Charging cable

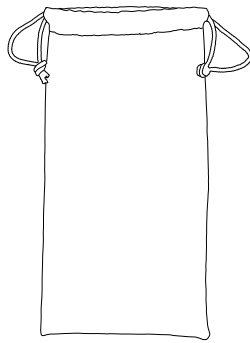


Carrying case

TECHNICAL SPECIFICATIONS

		NOMAD AIR <i>088795</i>
Battery	Technology	LiCoO2
	Capacity	2.5 Ah — 27.75 Wh
	Charge time	2h15 max
Compressor	Flow rate	30 L/min
	Max. pressure	10.35 bars
	Cylinder diameter	22 mm
	Power	120 W
	Noise level	≤ 85 dB
Operating temperature		0°C > 35 °C
USB Type C input		5 V $\overline{=}$ 2 A
USB-A output		5 V $\overline{=}$ 2.1 A
Dimensions		6.4 x 5.65 x 17.55 cm
Weight		0.61 kg

 
INTERNAL BATTERY CHARGING

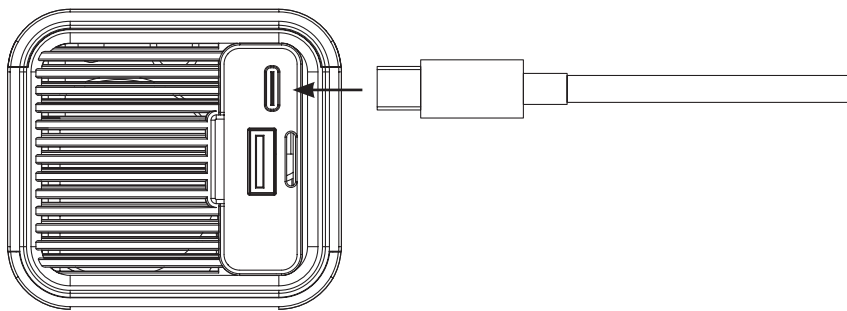

Connect the USB type-C charging cable to the USB-C output socket, then to a charger (optional) to recharge the NOMAD AIR.

LED Indicator		Meaning
	flashing	The battery level is less than 5%.
	flashing	The battery is charging: the 4 battery cells flash, then become fixed as the charge progresses.
	fixed	The NOMAD AIR is fully charged.

 Optional

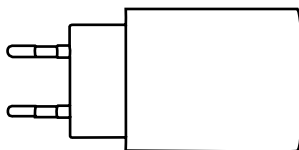

Ref. 087101
15W USB charger

Ref. 087354
15W USB charger - UK

INFLATOR FUNCTION

On / Off / Inflate:



1. Connect the air hose to the unit and, if necessary, fit the inflation nozzle that is compatible with the object you are inflating.
1. Press and hold the On/Off button for > 2 seconds to switch the NOMAD AIR on.
2. Adjust the unit by selecting the inflation mode using the function selector button, and the desired pressure using the + and - adjustment buttons.
3. Press the On/Off button again to start inflating.
4. The device stops inflating when it reaches the target pressure, or if you press the On/Off button.
5. Press and hold again (> 2 seconds) to switch off the unit.

Functions

- When the unit is switched on, briefly pressing the function selection button navigates through the different inflation modes available, depending on the object to be inflated.

Function	Voltage range	Original preset
car	1 › 3.5 bar	2.50 bar
motorbike	1 › 3 bar	2.40 bar
bicycle	1.35 › 10.35 bar	4.10 bar
ball	0.30 › 1.10 bar	0.55 bar
favourite	0.25 › 10.35 bar	1.40 bar

- Holding down the function selector button for > 2 seconds enables you to select the unit of pressure. Then press briefly to select the desired unit from: *PSI*, *BAR*, *KPA*; *KG/CM²*.

Note: the NOMAD AIR memorizes the last pressure setting for each function. You can return the unit to the original preset pressure setting by changing the unit of measurement.

LAMP FUNCTION**Functions**

- Press and hold (> 2 sec) the Lamp button to switch on the Lamp function.
- Briefly press it again to change the lighting mode: standard › SOS › strobe.
- Press and hold (> 2 sec) the Lamp button to switch it off.

Note: the Lamp function works even when the device is switched off.

POWER BANK FUNCTION

- Switch on the NOMAD AIR by pressing the On/Off button.
- Connect the device you wish to recharge to the NOMAD AIR USB A output port.

WARRANTY CONDITIONS

The warranty covers all defects or manufacturing faults for a period of two years starting from the date of purchase (parts and labour).

The warranty does not cover:

- Any other damage caused during transport.
- The general wear and tear of parts (i.e. : cables, clamps, etc.).
- Incidents caused by misuse (incorrect power supply, dropping or dismantling).
- Environment-related faults (such as pollution, rust and dust).

In the event of a breakdown, please return the item to your distributor, along with:

- a dated proof of purchase (receipt or invoice etc.).
- a note explaining the malfunction.