

600W Single Output Battery Charger

PB-600 series



Features :

- 2/8 stage charging
- Universal AC input / Full range
- Built-in active PFC function PF>0.95
- Protection: Reverse Polarity / Short circuit / Over voltage / Over temperature
- Charger for lead-acid batteries
- 3 color LED loading indicator
- Built-in remote ON-OFF control
- Built-in fan speed control(Depends on charging current)




SPECIFICATION

MODEL		PB-600-12	PB-600-24	PB-600-48	
	BOOST CHARGE VOLTAGE	14.4V	28.8V	57.6V	
	FLOAT CHARGE VOLTAGE	13.6V	27.2V	54.4V	
	RECOMMENDED BATTERY	405 400411	70 040411	25 405411	
OUTPUT	CAPACITY(AMP HOURS)(Note 3)	135 ~ 400AH	70 ~ 210AH	35 ~ 105AH	
	BATTERY TYPE	Open & Sealed Lead Acid			
	OUTPUT CURRENT	40A	21A	10.5A	
	VOLTAGE RANGE	90 ~ 264VAC 127 ~ 370VDC			
	FREQUENCY RANGE	47 ~ 63Hz			
	EFFICIENCY (Typ.)	86%	87%	89%	
NPUT	POWER FACTOR (Typ.)	0.95/230VAC 0.98/115VAC at full load			
	AC CURRENT (Typ.)	6.8A/115VAC 3.4A/230VAC			
	INRUSH CURRENT (Typ.)	25A/115VAC 50A/230VAC			
	LEAKAGE CURRENT	<3.5mA/240VAC			
		16 ~ 18V	32~35V	64.5~69.5V	
PROTECTION	OVER VOLTAGE	Protection type : Shut down o/p voltage, re-power on to recover			
	OVER TEMPERATURE	Protection type : Automatically derate charge current until zero, recovers automatically after temperature goes down			
	REMOTE CONTROL	Open: Normal work Short: Stop Cha	rging		
	LEAKAGE CURRENT FROM BATTERY (Typ.)	1mA			
FUNCTION	FAST CHARGE	2/8 stage select			
ONCTION	CHARGING OK	Relay contacts (RY15)			
	ΟυΤΡυΤ ΟΚ	Relay contacts (RY13)			
	TEMPERATURE SENSE (OPTIONAL)	ByNTC			
	WORKING TEMP.	-20 ~ +60 $^{\circ}$ C (Refer to output load derating curve)			
	WORKING HUMIDITY	20~90% RH non-condensing			
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH			
	TEMP. COEFFICIENT	±0.05%/°C (0~50°C)			
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes			
	SAFETY STANDARDS	UL1012, TUV EN60335-1, EN60335-2-29 (except for 48V) approved			
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:1.5KVAC O/P-FG:0.5KVAC			
SAFETY &	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C/ 70% RH			
EMC (Note 2)	EMI CONDUCTION & RADIATION	Compliance to EN55022 (CISPR22)			
(NOLE 2)	HARMONIC CURRENT	Compliance to EN61000-3-2,-3			
	EMS IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11; ENV50204, EN55024; light industry level, criteria A			
	MTBF	135.6Khrs min. MIL-HDBK-217F (25℃)			
OTHERS	DIMENSION	230*158*67mm(L*W*H)			
	PACKING	2.2Kg; 6pcs/14.2Kg/1.76CUFT			
NOTE	The power supply is conside EMC directives.	specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation.			



PB-600 series

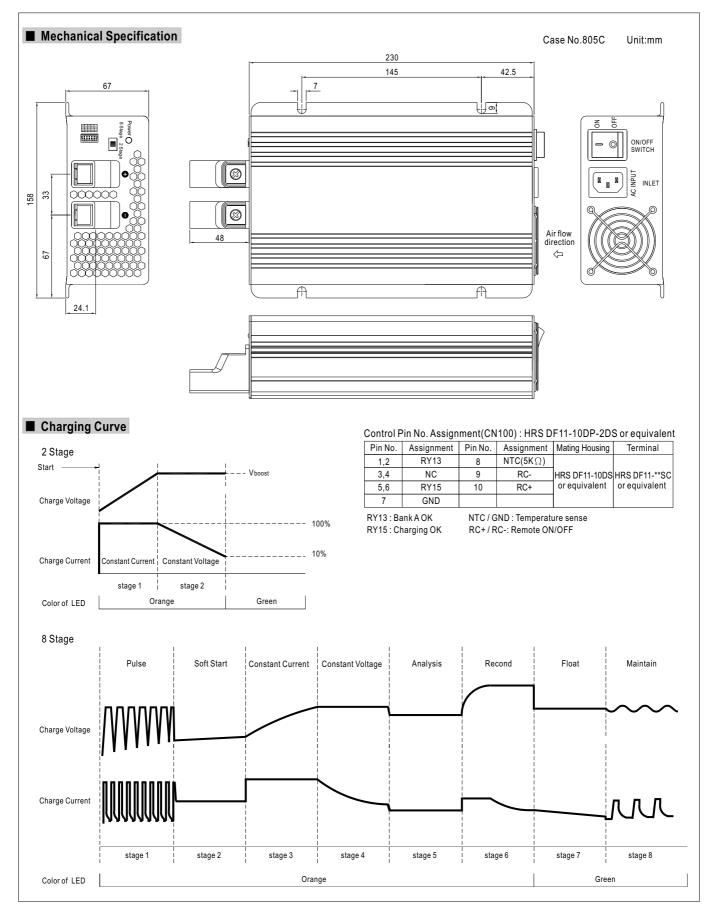


File Name:PB-600-SPEC 2009-02-17



600W Single Output Battery Charger

PB-600 series

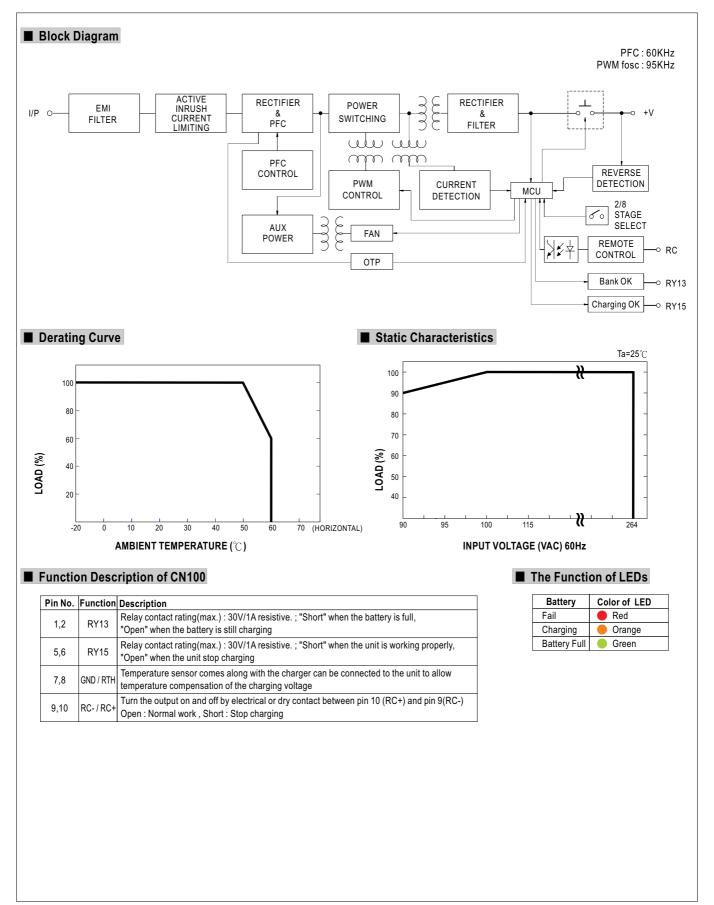




PB-600 series


Function Manual

1.Remote Control

The charger can be turned ON/OFF by using the "Remote Control" function.

Between RC+(pin10) and RC-(pin9)	Charging	
SW Open	ON	
SW Short	OFF	

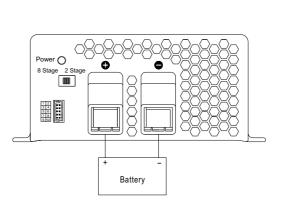


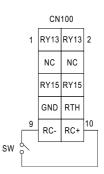

2. 2 or 8 stage charging select

The charger features user selectable 2 or 8 stage charging. The charging profile is selected by moving the slide switch on the back panel.


Switch	Charging mode	
Turn right	2 stage charging	
Turn left	8 stage charging	

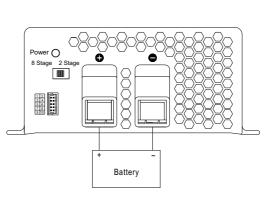


CN100 1 RY13 RY13 2 NC NC RY15 RY15 GND RTH 9 RC- RC+ 10

3.Charging OK (RY15)

Charger	Between pin5 and pin6(RY15)	
Normal work	ON (Short)	
Stop charging	OFF (Open)	

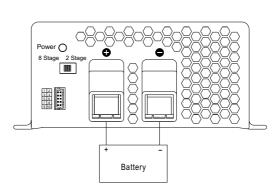

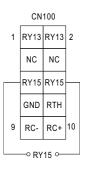

File Name:PB-600-SPEC 2009-02-17





600W Single Output Battery Charger

PB-600 series

4.Output OK (RY13)

1.Bank OK (RY13)				
Bank	ank Between pin1 and pin2(RY13)			
Battery Full	ON (Short)	Green		
Charging	OFF (Open)	Orange		

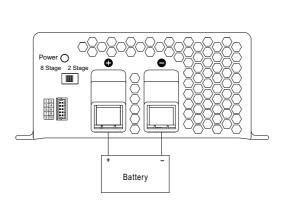

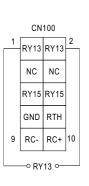

5. Temperature compensation

Temperature sensor comes along with the charger can be connected to the unit to allow temperature compensation of the charging voltage.

If the sensor is not used, the charger still works normally.

