ACTIVESHOP®

USER MANUAL

Black Aluminum Folding Makeup Chair D046



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/08/2026

Scan for different languages

Thank you for choosing our product.
Please read the user manual before first use and keep it for future reference.

This foldable aluminum chair is perfect for makeup, styling, or special effects makeup. It's a great addition to beauty salons, as well as photo shoots, film sets, and
makeup rooms. Its stable, lightweight design makes it easy to carry, making it indispensable for mobile services.

Package Contents



1 2 3 4 5 6 7




8 9 10 11 12 13

1. Washer 16*1 (14 pcs.)
2. Plastic sleeves 12*20*4 (4 pcs.)
3. Plastic sleeves 12*20*2 (4 pcs.)
4. M6 nuts (6 pcs.)
5. M6 knurled nuts (star-shaped) (2 pcs.)
6. Hinges (2 pcs.)
7. M6*38 screws (4 pcs.)
8. M6 x 62 screws (2 pcs.)
9. Footrest bracket (1 pc.)
10. Seat fabric (1 pc.)
11. Backrest fabric (1 pc.)
12. Headrest (1 pc.)
13. Footrest (1 pc.)


Assembly

Step 1 - Assembling the chair

A. Use M6*62 screws, M6 nuts, and 18*9 washers to assemble the chair frame.

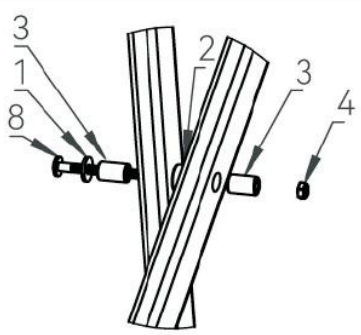


B. Use hinges to connect the left and right sides of the chair frame. Then reinforce them with **M6*38** screws, **M6** nuts, and **16*2** washers**.**

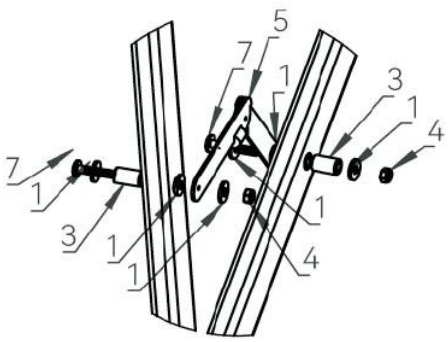


Step 2 - Assembling the Seat and Backrest

A. The seat fabric has round rods (known as stiffening rods) sewn into the edges. Slide these round rods into the special longitudinal grooves/recesses located on the left and right sides of the chair frame (at seat level).
B. Place the backrest fabric over the two vertical top rails of the chair frame. Spread the chair frame apart to the sides, then press down on the center metal hinge of the frame to lock the structure in place.

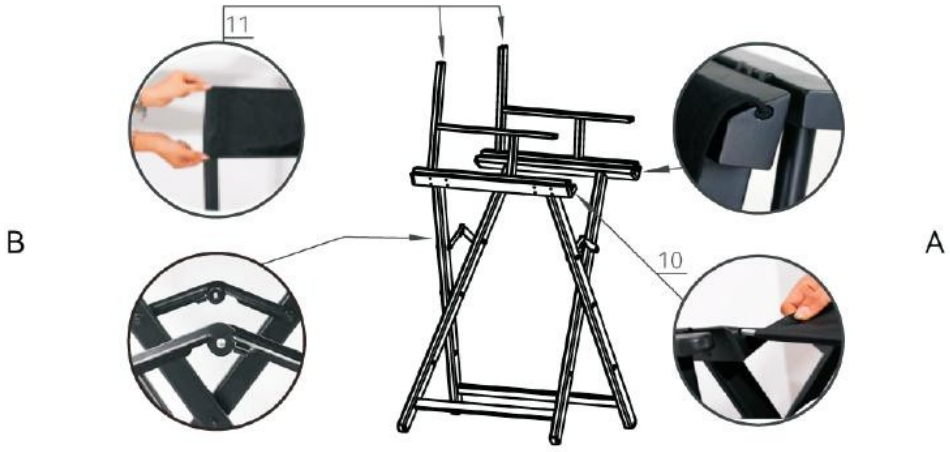

Step 3 - Assembling the Footrest

A. Insert the M6*62 screws through the round hole on the left side of the footrest and the round hole on the left side of the chair frame, then secure them from the back using M6 knurled nuts.
B. Insert the threaded end of the footrest bracket through the round hole on the right side of the chair frame. Secure it from the outside with an M6 star-knob nut.
Once both sides are tightened, the assembly of the entire chair is complete.

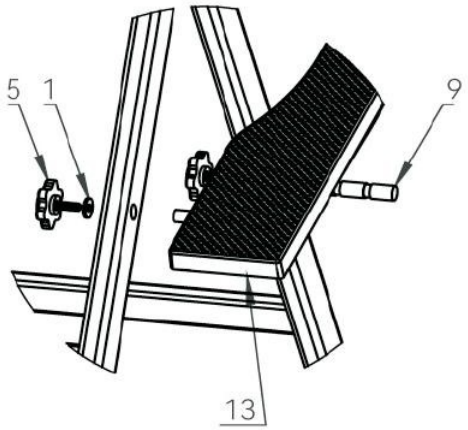


Cleaning, Care, and Maintenance

1. Wipe down the chair with a soft, slightly damp cloth. You may use a mild cleaning solution.
2. Check all fasteners every 2 months to ensure that every nut, bolt, and connector is tight. If you detect any looseness, tighten them immediately.
3. Store the equipment in a dry, clean, and safe place.

Recommendations

1. The maximum load is 200 kg. Do not jump on the device or place heavy objects on the tabletop.
2. During electric height adjustment, keep your hands, feet, and foreign objects away from the lifting frame.
3. Before the patient gets onto the table, make sure all casters are locked. Casters may only be unlocked while moving the table.
4. The wired handheld remote control may only be operated by trained personnel. Children should not be left unattended near the device.
5. Do not spray water or liquid disinfectants directly onto the electric motor, wiring, or lifting mechanism.
6. Stop use immediately if you hear unusual noises, experience jamming, or notice structural deformation. Do not disassemble the motor, gas spring, or without the manufacturer's authorization.
7. This device is intended for indoor use. Prolonged, direct exposure of the upholstery to sunlight is prohibited.

Dimensions

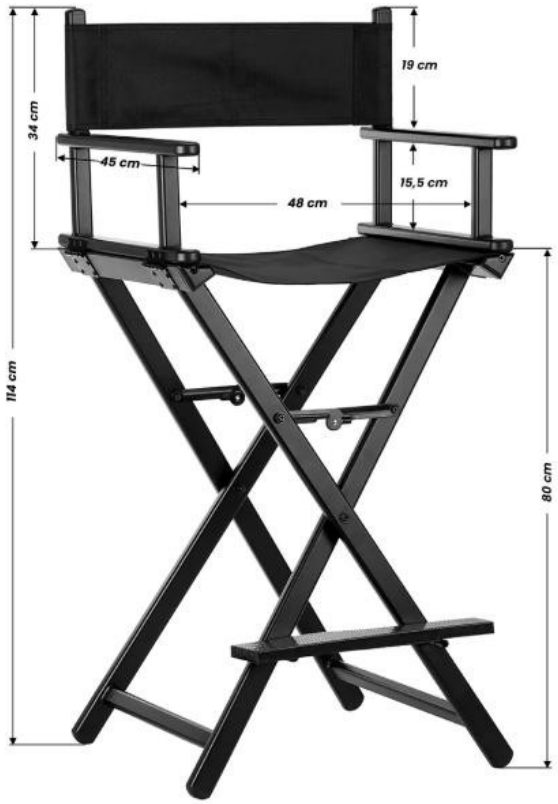

Recommendations

1. Make sure you install the device on a flat, stable surface to reduce the risk of it falling and being damaged.
2. Never leave the device plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
6. Do not pull directly on the cord to unplug the device from the outlet.
7. This product is for indoor use only. Do not expose it to direct

the elements.

8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals helps prevent adverse effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device,
   b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place any foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children at least 8 years of age, by persons with reduced physical or mental capabilities, as well as by persons unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or people who lack sufficient knowledge of how to use the device are nearby.
4. This device is not intended for use by children as a toy. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this
type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively
in its original packaging. Store it in a well-ventilated room with a relative humidity of no more than 90%. Operating temperature range: from (+)10°C to (+)40°C. During
storage and transport, the device must not be thrown or dropped, nor should it be exposed to mechanical shocks or the elements.