


ROLLBAR LIGHT


Go to Index 

RAM 6211

**AQM
X10**



MOUNTING INSTRUCTION COMPATIBLE FOR ALL THREE PRODUCTS

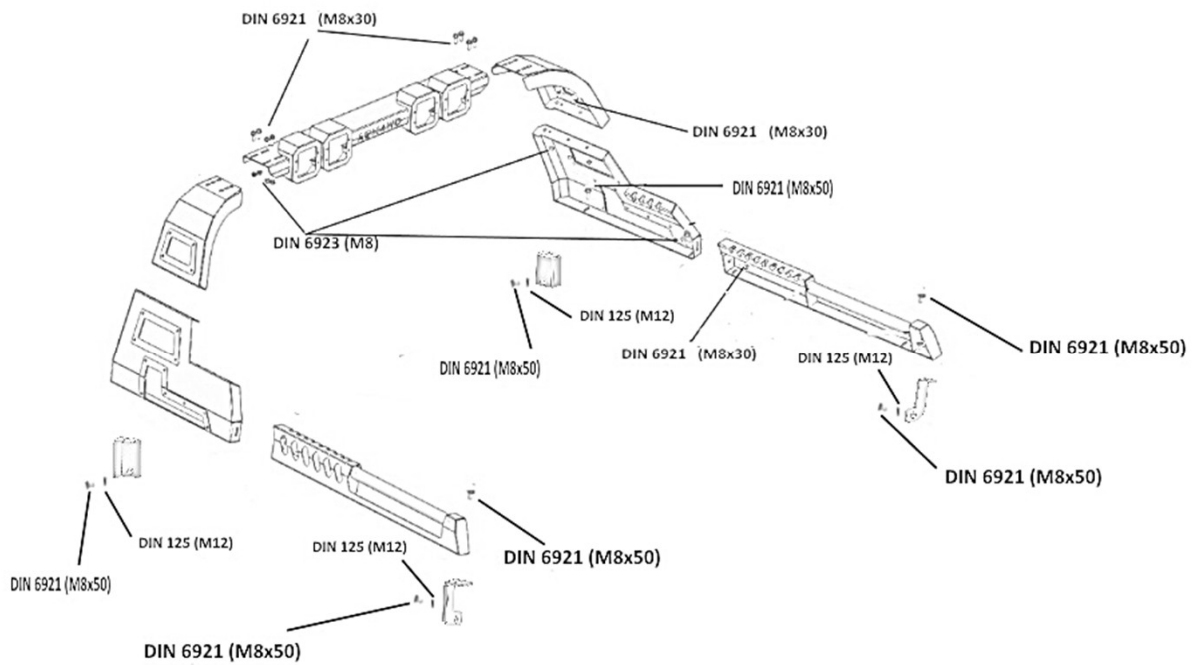


**VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION.
REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE
PARTS LIST**

2201TR - 01

[Go to Index](#)



1. Mount Installation

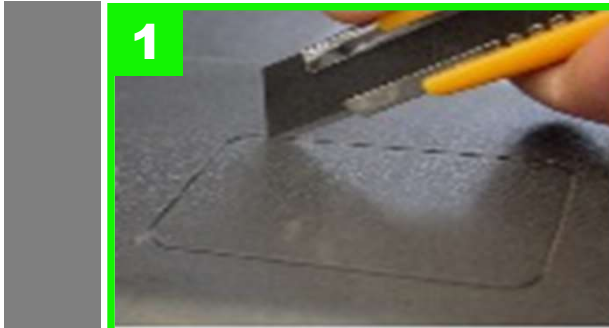





INSTALLATION DIAGRAMS

Go to Index



3. Bolt Kit

Designation	Part No	Name	Spec.	Q'ty
	1000	Bolts	DIN 6921 (M8x50) CHROME	8 pcs
	1000	Bolts	DIN 6921 (M8x20) CHROME	16 pcs
	1002	Nuts	DIN 6923 (M8) CHROME	24 pcs
	1007	Washer	DIN 125 (M12)	4 pcs