


3. Connect the other ends of the RF Cables to the RF Connectors on the antenna.

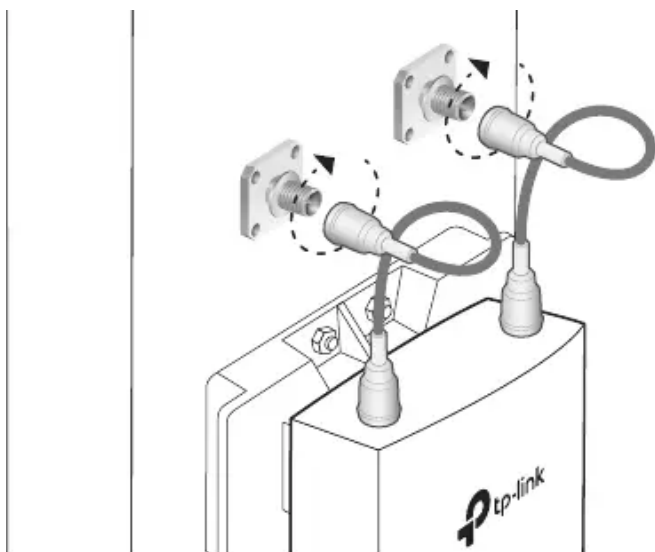

4. Slide the Protective Shroud down over the Base Station until it locks onto the Base Station Mount Bracket.

