

# Metal Walk-in **Chicken Coop Run**

Instruction manual  
For specification: 8m(L) x 3m(W) x 2m(H)



Please read this manual carefully before assembly


## PART LIST IN BOX 1



1 x4pcs 1410mm pipe




2 x20pcs 1870mm pipe




4 x10pcs 1480mm pipe



D1 x1pcs



D2 x1pcs



D3 x1pcs



5 x2pcs 440mm pipe



6 x1pcs 535mm pipe



M x12pcs



N 4bags


## PART LIST IN BOX 2




3 x10pcs 970mm pipe




J x2pcs Roof



F 1x60m




A x6pcs




B x9pcs



C x4pcs



D x6pcs



E x2pcs



O x28pcs




H x2pcs



I x3pcs






K x4pcs



L x5pcs



## Step 1

Assemble the bottom frame as the below drawing.

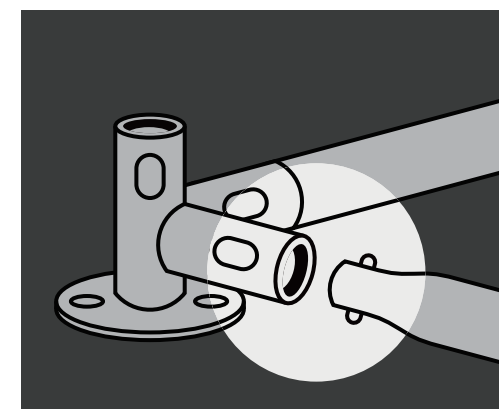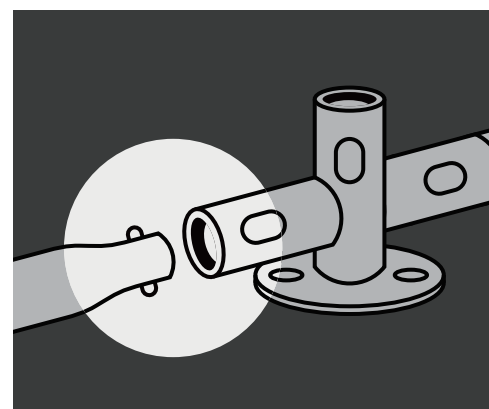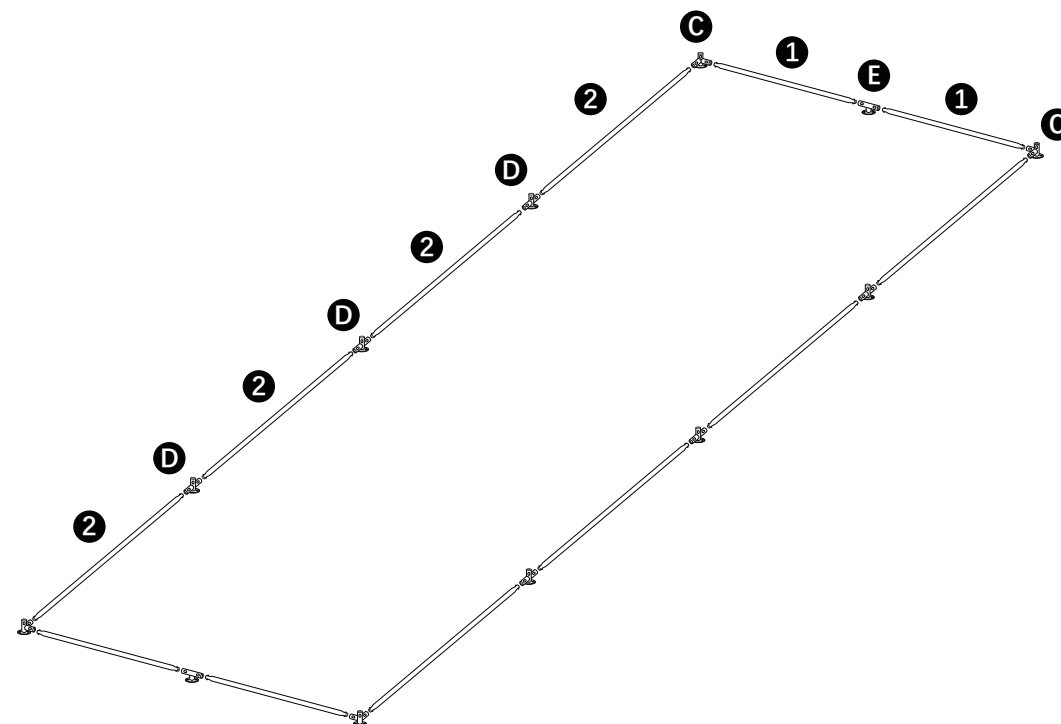




## Step 2

Gather pipe "3"×10pcs, insert the pipes into the connectors "C", "D" as the below drawing.

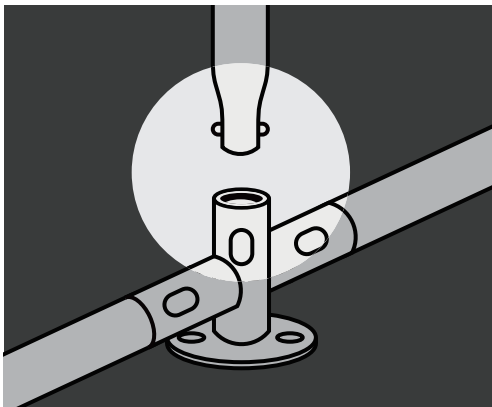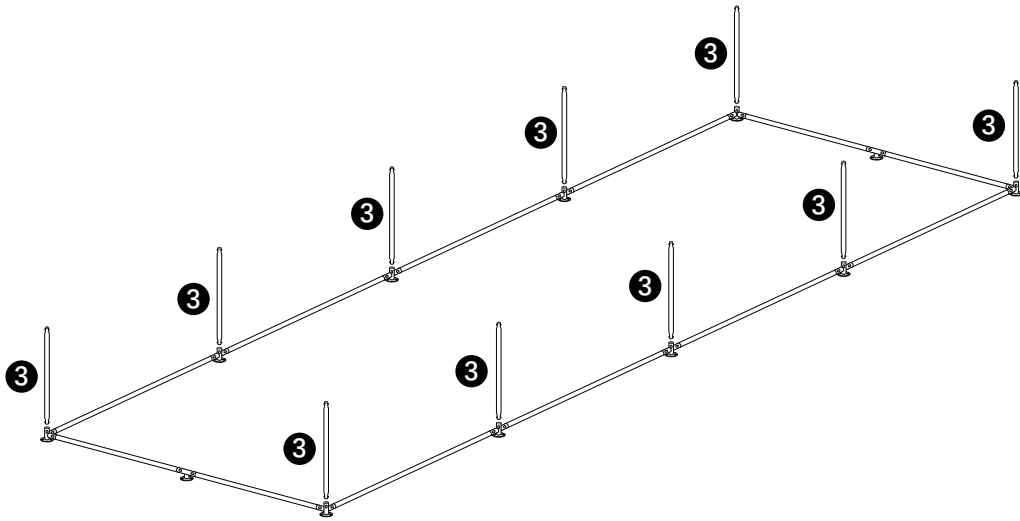



## Step 3

Gather connector "A"×4pcs, "B"×6pcs, and pipe "2"×8pcs, assemble as the below drawing.

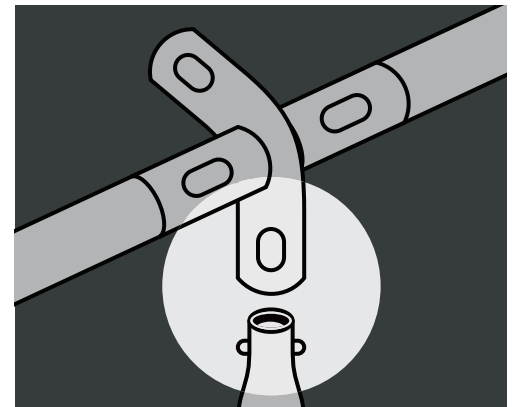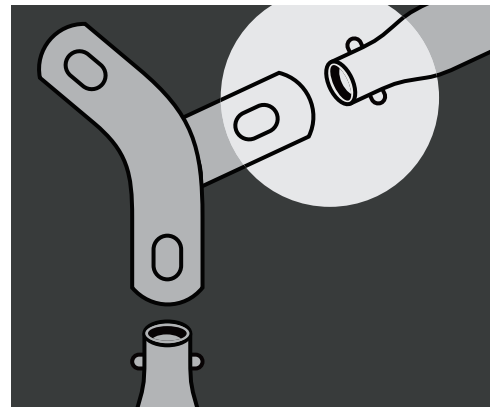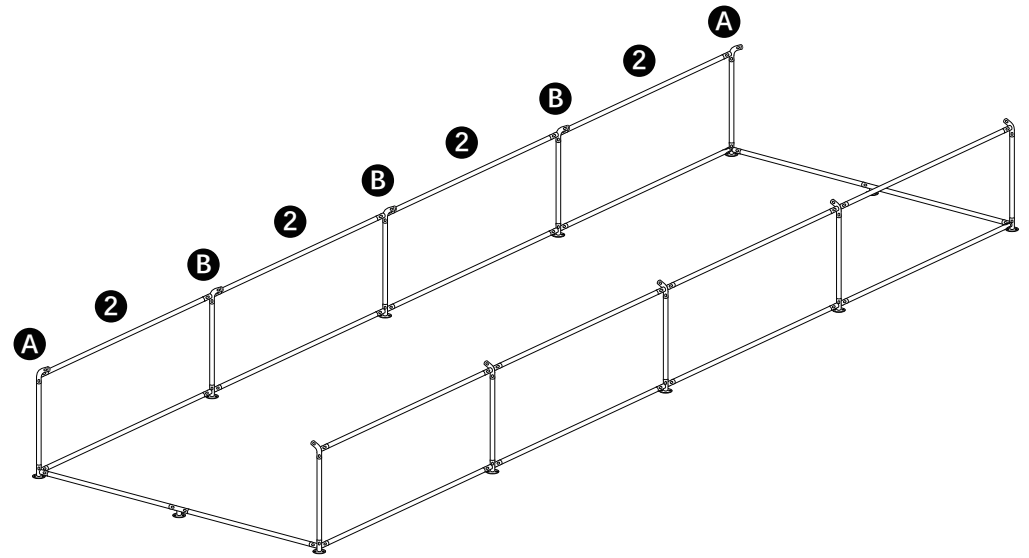



## Step 4

Gather connector "A"×2pcs, "B"×3pcs. Pipe "4"×10pcs and "2"×4pcs  
Assemble the top frame as the drawing.

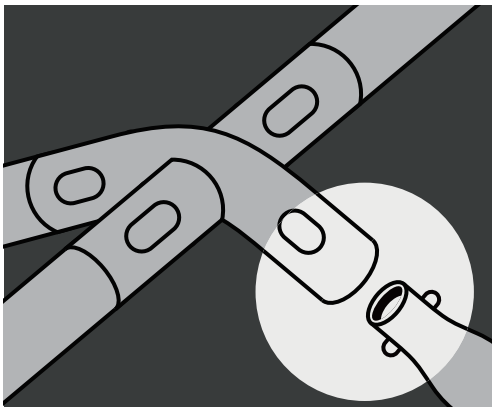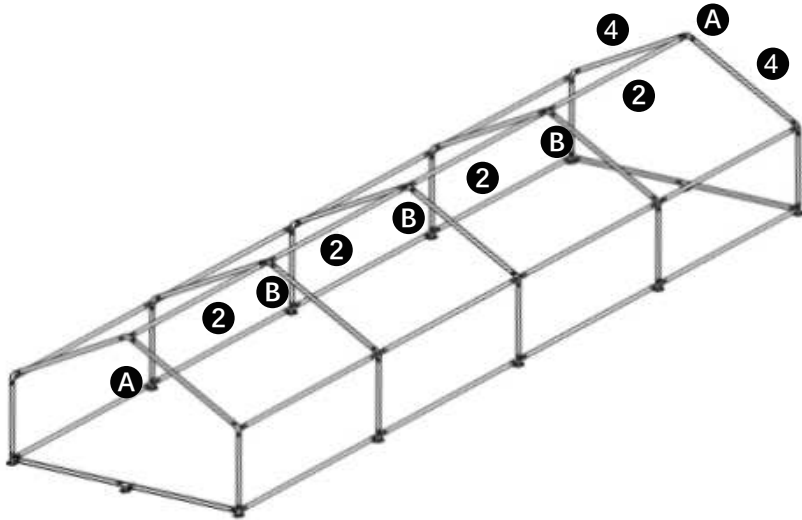




## Step 5

Assemble the door with 1 pcs of "D1", 1pcs of "D2", 1 pcs of "D3",  
2 pcs of "5" and 1 pcs of "6".

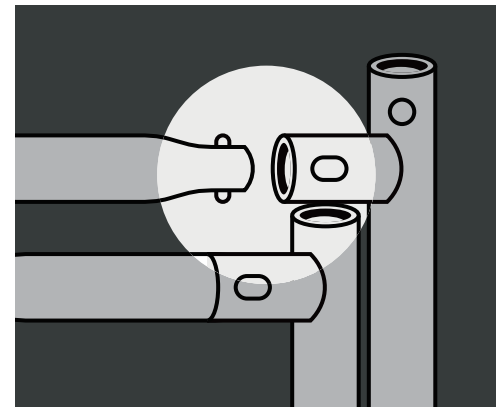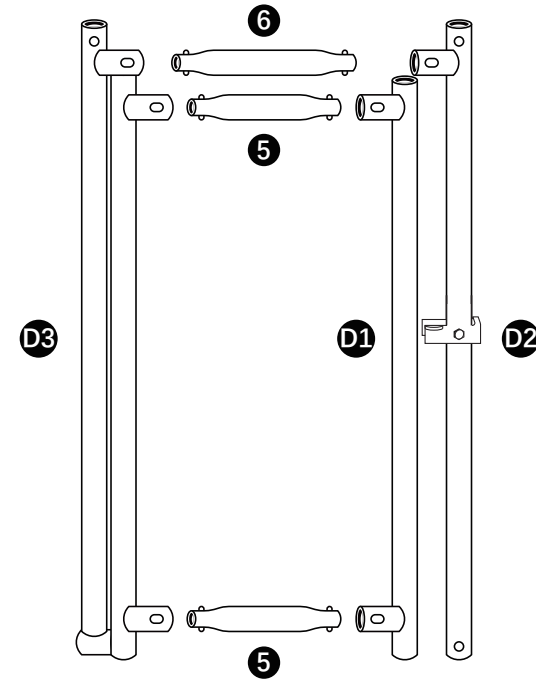




## Step 6

Install the door to the chicken frame with "H"x2 pcs, "I"x1pc and screws.

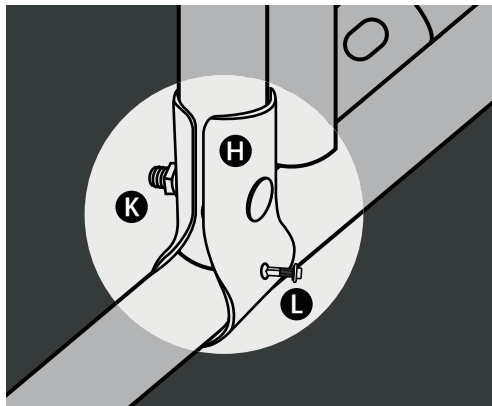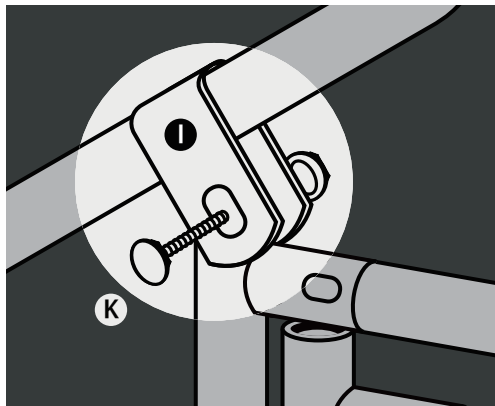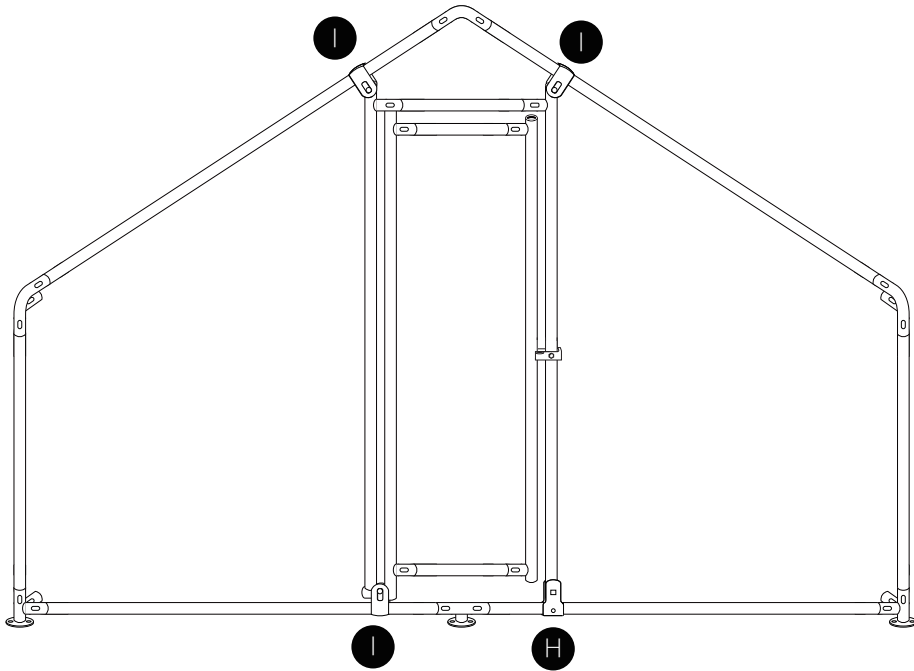

## Step 7


Step 1: NO PRE-CUT! Cover around the house, then cut off finally. And tie it to the pipes with strap "N".

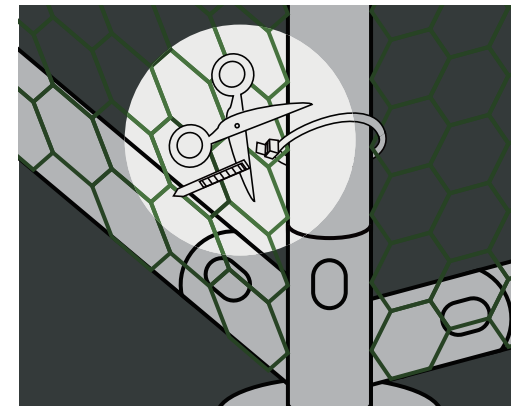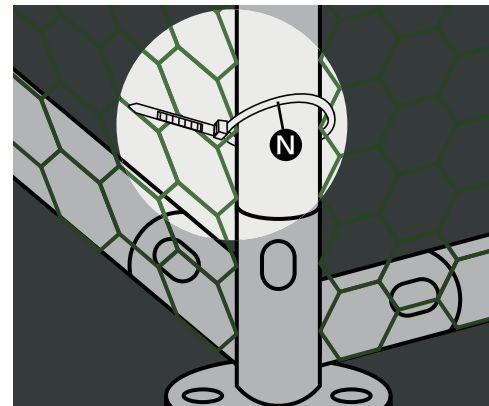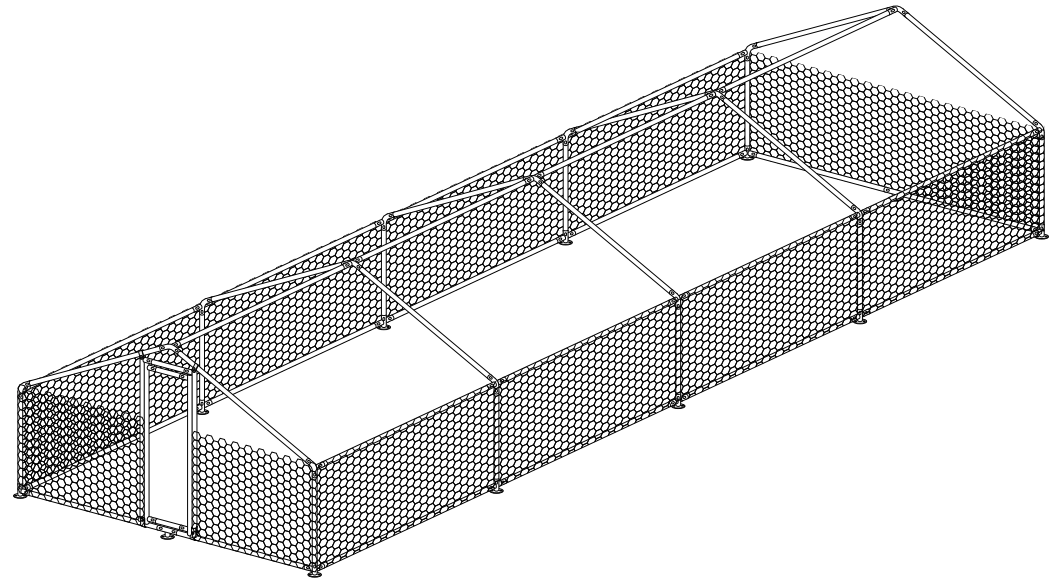




## Step 8

NO PRE-CUT! Cover the top, finally cut off. And tie it to the pipes with strap "N".

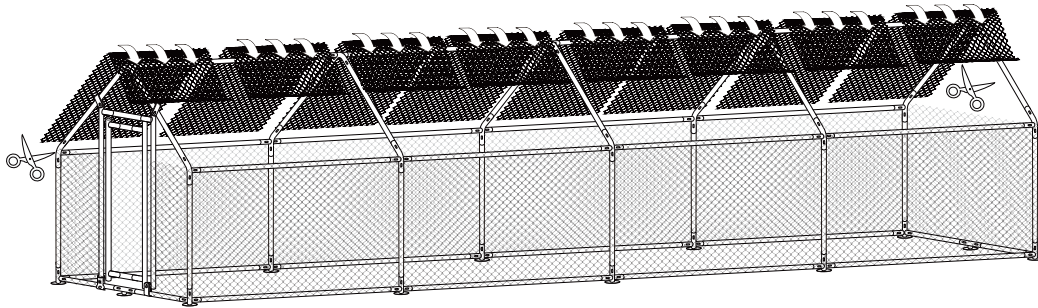

## Step 9

Measure the  $\Delta$  parts of front and back sides, Pre-cut the wire mesh for covering. And tie it to the pipes with strap "N".

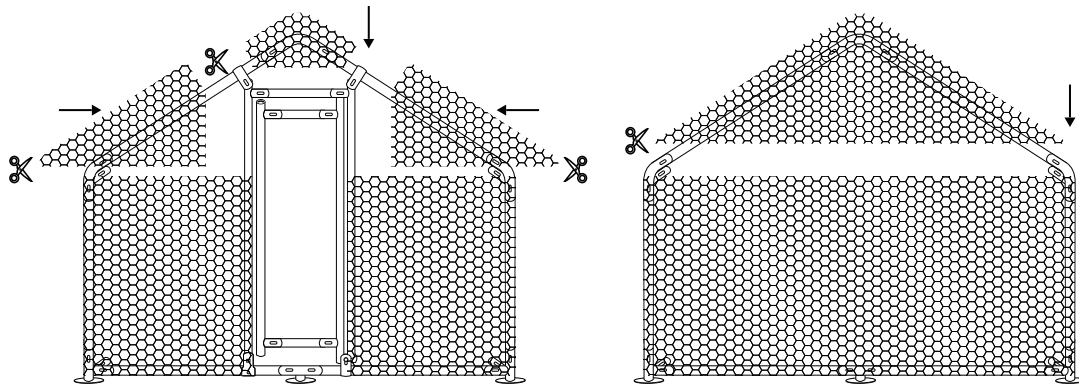


(Front)

(Back)



## Step 10

Measure the door size, Pre-cut the wire mesh for covering. And tie it to the pipes with strap "N".

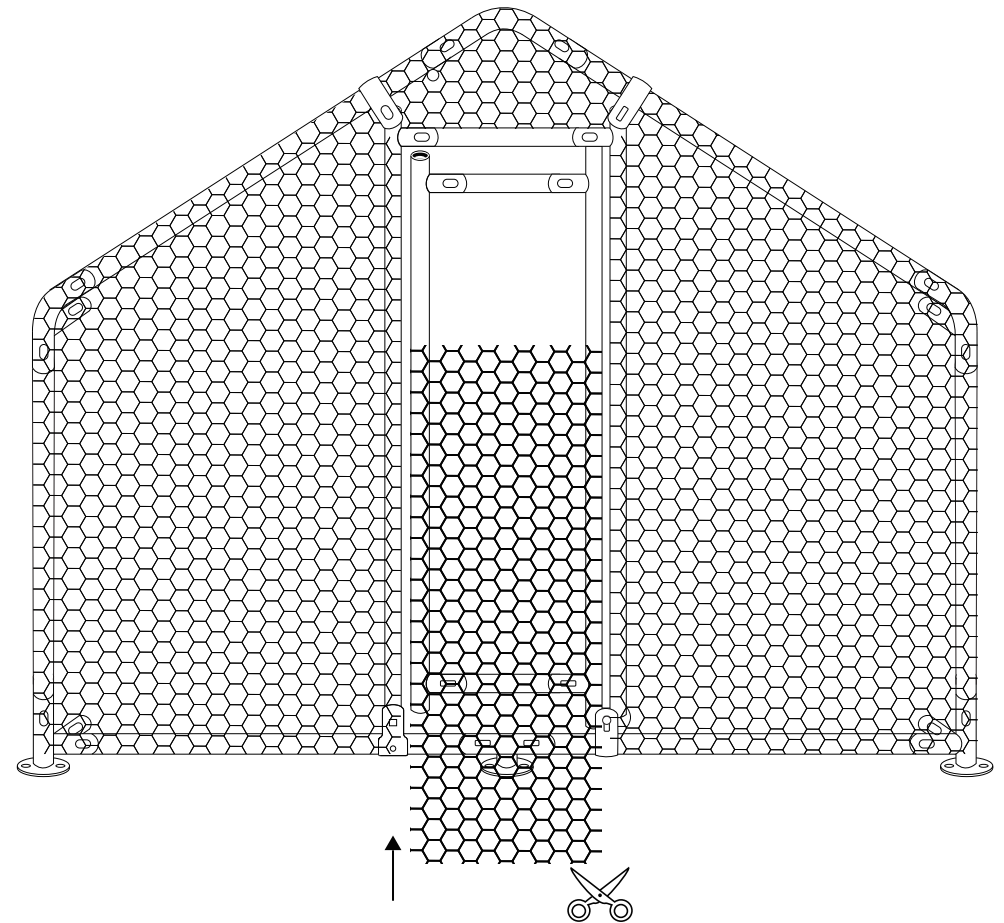

## Step 11

Put the waterproof cover "J" on the frame, tighten it on the frame with "O".

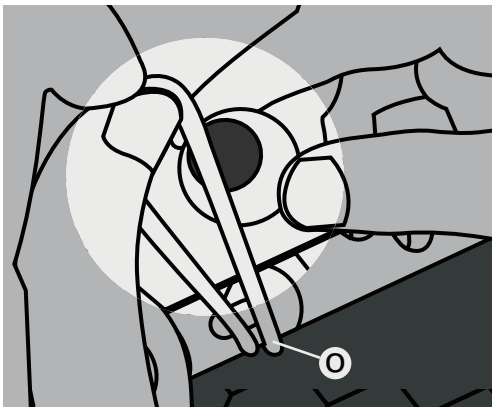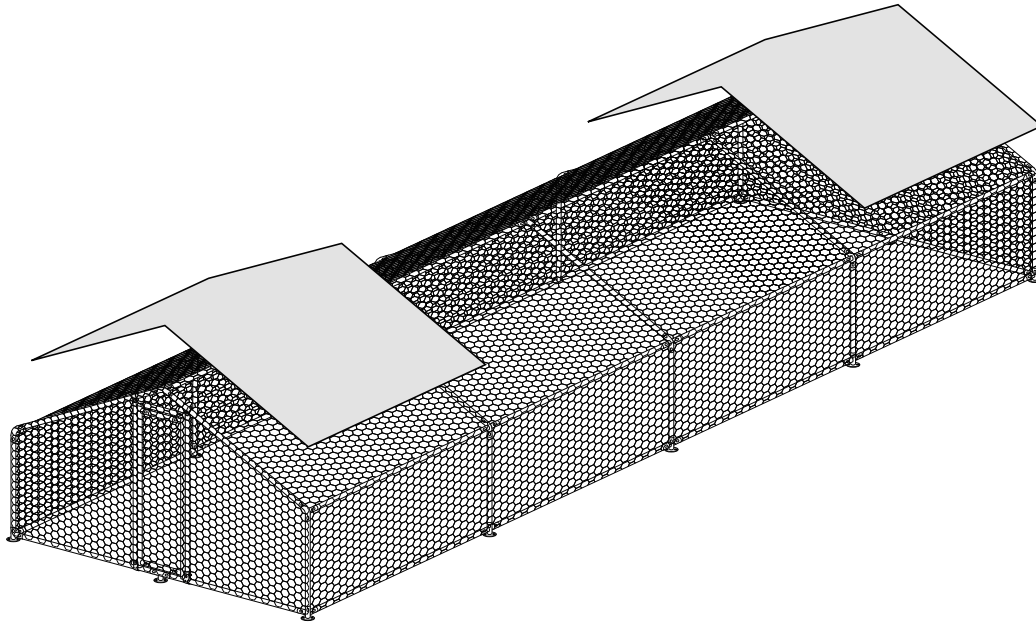

## Step 12

Put the ground anchor "M" into ground to make the cage more stable and durable.

