

KOD / CODE :

MONTAJ SETİ INSTALLATION SET


BRACKET EK
BAĞLANTI SOL
Bracket Contact Left

ADET:1

BRACKET EK
BAĞLANTI SAĞ
*Bracket Contact
Right*

ADET:1

M8 ÖZEL SOMUN
M8 Special Nut



ADET: 1

M10 BRACKET
BAĞLANTI ELEMANI
KOD:LMC-101
M10 Mounting
Bracket

ADET: 4

PARABAŞ CİVATA
M10
M10 Head Bolt



ADET: 4

M8x20 FLANŞLI
CİVATA
M8X20 Flanged



ADET: 6

M10 SOMUN
M10 Nut



ADET: 4

M8 SOMUN
M8 Nut



ADET:4


M10 PLASTİK
PUL
M10 Plastic Washer




ADET:4

M8 PUL
M8 Washer

ADET: 2

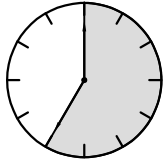

35 DAKİKA

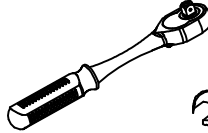

SW13 (20Nm)

SW17 (40Nm)




SW13 (20Nm)



SW15 (40Nm)



MONTAJ ŞEMASI

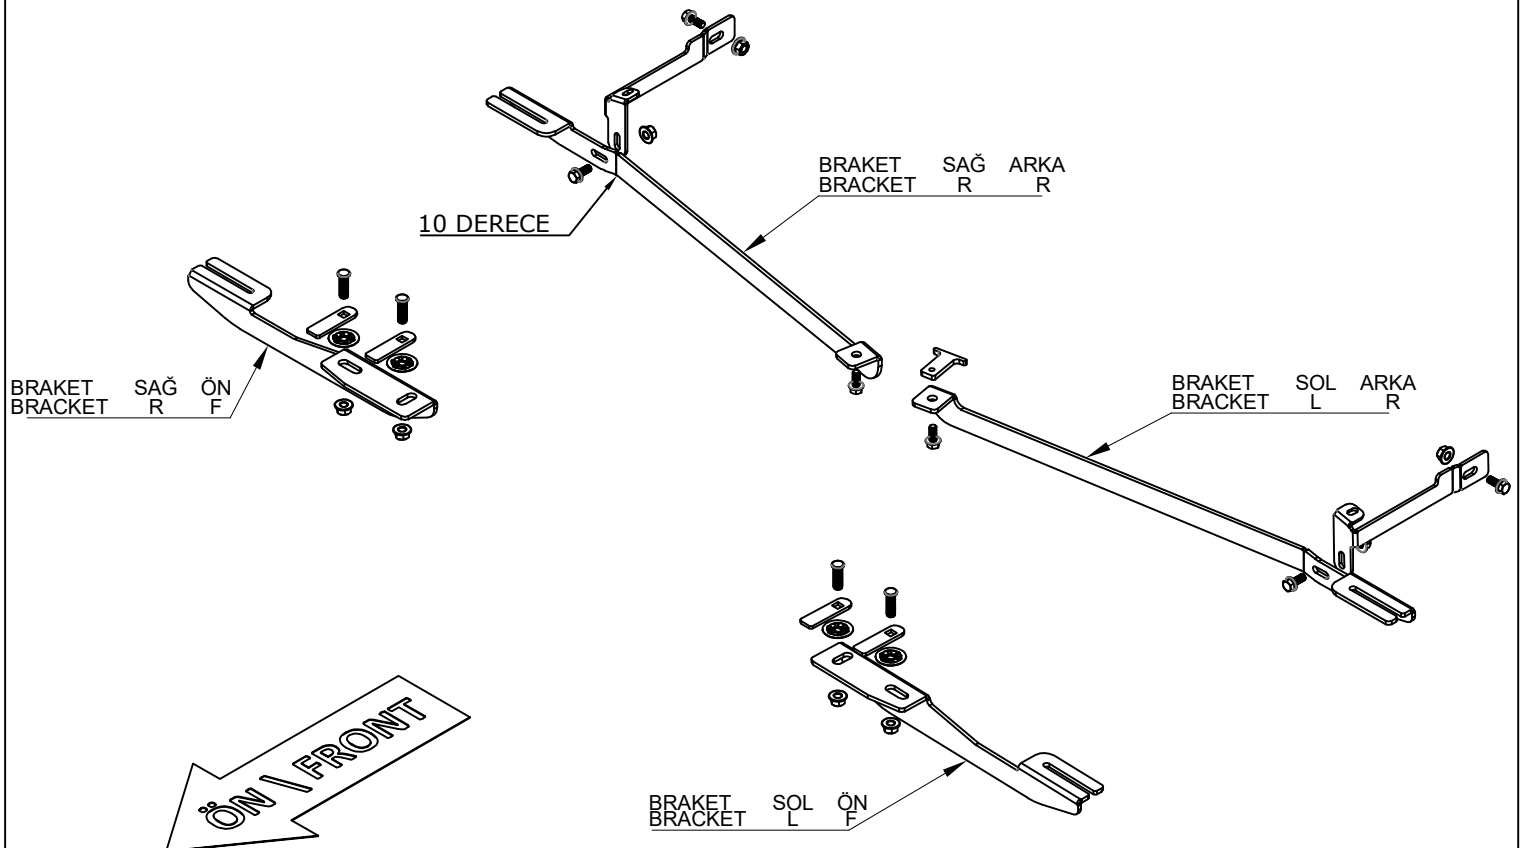

ÖN SOL (FRONT LEFT)



ARAÇ ÜZERİNDEKİ TAPAYI SÖKÜNÜZ.
Please unscrew the stopper on the vehicle



4

4

*** 4 NOLU 5 NUMARALI PARÇA İLE BİRLEŞTİREREK ARAÇ ÜZERİNDEKİ YERİNE TAKINIZ.**
** Please combine the parts number 5 with number 4 and montage it on the vehicle.*



7

7

*** 7 NUMARALI PARÇA İLE BRAKETİ LAMALI CİVATA İLE MONTAJLAYINIZ.**
** Please montage the part number 7 and bracket with blade bolt.*

SOL ARKA BRAKET BAĞLANTI Rear Left Bracket Connection



3

*** 3 NUMARALI PARÇAYI ARAÇ ÜZERİNDEKİ YERİNE TAKINIZ.**
** Please attach the part number 3 on the vehicle as shown in the picture*

ARKA SOL (REAR LEFT)



*** BELİRTİLEN PARÇAYI ARAÇ ÜZERİNDEN SÖKÜNÜZ.**
Please unscrew the stopper on the vehicle



2

6

*** SAĞ EK BRAKETİ ÇIKARMIŞ OLDUĞUNUZ PARÇA İLE MONTAJLAYINIZ.**
*** 6, 11 VE 8 NUMARALI PARÇALAR İLE EK BRAKET İLE MONTAJLAYINIZ.**
** Please montage the bracket contact with unscrewed part*
** Please combine the part number 8 and 11 with number 6 and montage it with bracket contact*



6

*** 6 NUMARALI PARÇAYI ARAÇ ÜZERİNDEKİ YERİNE TAKINIZ.**
** Please attach the part number 6 on the vehicle as shown in the picture.*



6

6

*** 6 NUMARALI PARÇAYI BRAKETİ YERİNE MONTAJLAYINIZ**
*** 6, 11 VE 8 NUMARALI PARÇALAR İLE EK BRAKET İLE MONTAJLAYINIZ.**
** Please montage the part number 6 on bracket*
** Please combine the part number 11 and 8 with number 6 and montage it with bracket contact*