



PEUGEOT - 3008 2009-2016

KOD / CODE :

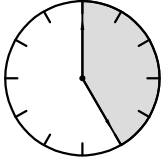

25 DAKİKA
25 MINUTES

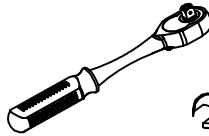


SW13 (20Nm)

SW17 (40Nm) SW15 (30Nm) SW13 (20Nm) SW10 (10Nm)



MONTAJ SETİ INSTALLATION SET

M10 BRAKET
BAĞLANTI ELEMANI
KOD:LMC-101
M8 BRACKET FASTENER



ADET / PCS : 4 ①

M8 BRAKET
BAĞLANTI ELEMANI
KOD:LMC-131
M8 BLADE BRACKET
FASTENER



ADET / PCS : 2 ②

M6 BRAKET LAMALI
BAĞLANTI ELEMANI
KOD:LMC-162
M8 BLADE BRACKET
FASTENER



ADET / PCS : 2 ③

PARABAŞ CIVATA
M10
HEAD BOLT M10



ADET / PCS : 4 ④

PARABAŞ CIVATA
M8
HEAD BOLT M8



ADET / PCS : 2 ⑤

M6 SOMUN
M6 NUT



ADET / PCS : 2 ⑥

M10 SOMUN
M10 NUT



ADET / PCS : 4 ⑦

M8 SOMUN
M8 NUT



ADET / PCS : 2 ⑧

M10 PLASTİK PUL
M10 PLASTIC WASHER



ADET / PCS : 4 ⑨

M8 PLASTİK PUL
M8 PLASTIC WASHER



ADET / PCS : 2 ⑩

MONTAJ ŞEMASI / MOUNTING DIAGRAM

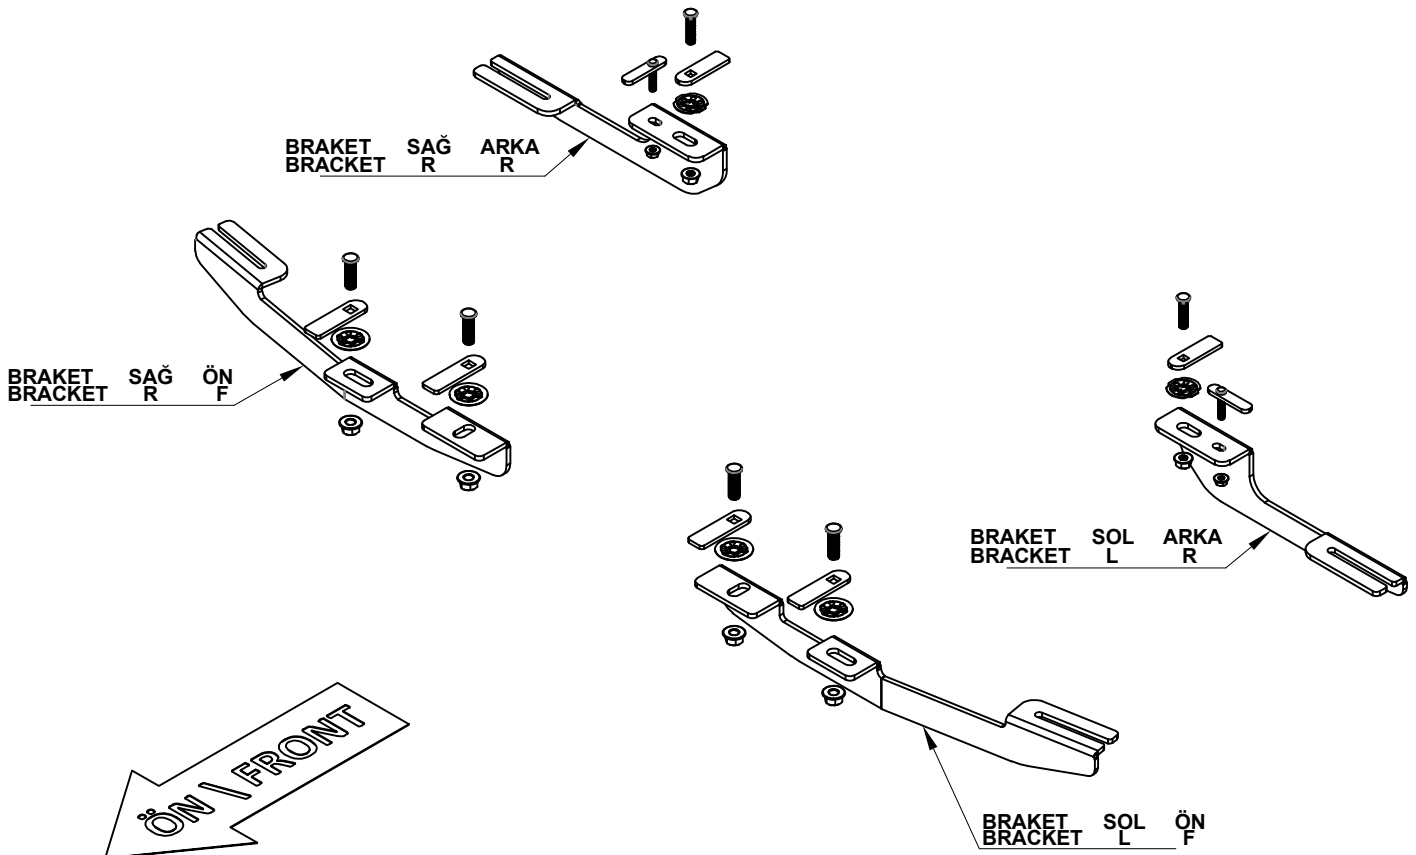




Fig. 1

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

LF



Fig. 5

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ

PLEASE REMOVE THE STOPPER THAT ALREADY ATTACHED ON THE VEHICLE

LR

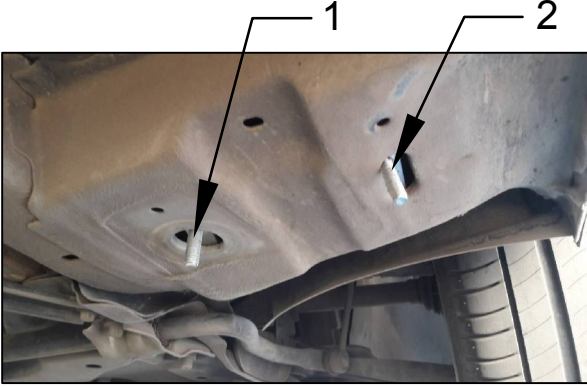


Fig. 2

1-2 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 1-2) TO THE PLACE SHOWN ABOVE

LF

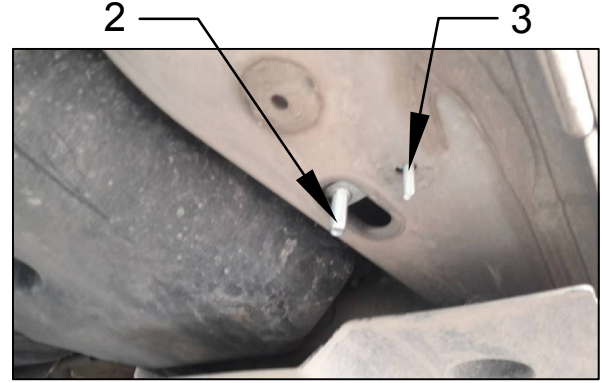


Fig. 6

2-3 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 2-3) TO THE PLACE SHOWN ABOVE

LR



Fig. 3

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

LF



Fig. 7

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS

LR



Fig. 4

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ

INSTALL THE BRACKET WITH BOLTS



Fig. 8

ÜRÜNÜ MONTAJLAYINIZ

PLEASE INSTALL THE PRODUCT