


GB270(1TZZQG270) Part Illustrations

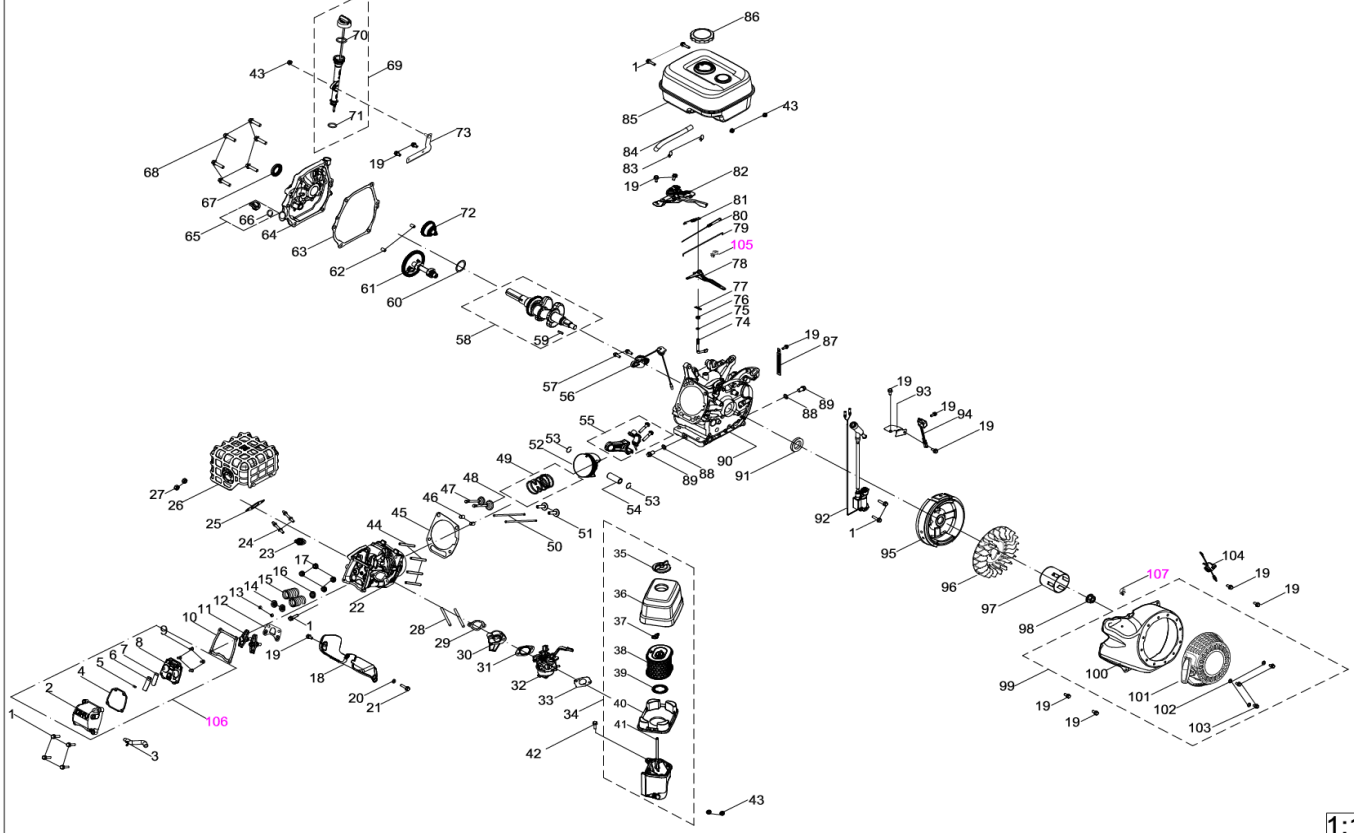

1:10

SPARE PARTS LIST

ITEM	PART CODE	PART NAME	QTY	UNIT
1	100011268-0003	Bolt, M6x25	9	PCS
2	100060504	Valve Cover	1	PCS
3	100066031	Breather Hose	1	PCS
4	100060664	Gasket, Cylinder Cover	1	PCS
5	100031867	Rivet, φ3×4	2	PCS
6	100002361	Breather Plate	1	PCS
7	100030397	Breather Valve	1	PCS
8	100061408	Inner Cover, Valve Cover	1	PCS
9	100010969-0001	Screw, M5x12	4	PCS
10	100060508	Gasket, Valve Cover	1	PCS
11	100057985	Rocker Arm Assembly	2	PCS
12	100072275	Rocker Arm Base	1	PCS
13	100073840	Valve Locker	4	PCS
14	100073758	Valve Spring Seat	2	PCS
15	100057903	Valve Spring	2	PCS
16	100004599	Intake Valve Seal	1	PCS
17	100011464-0003	Nut, M8	4	PCS
18	100057895	Shroud	1	PCS
19	100011261-0004	Bolt, M6x12	13	PCS
20	100010431-0001	Washer, φ6×1×φ18	1	PCS
21	100011262-0003	Bolt, M6x14	1	PCS

22	100057898	Cylinder Head	1	PCS
23	100009379	Spark Plug	1	PCS
24	100010398	Stud	2	PCS
25	100058175	Gasket, Muffler	1	PCS
26	100080512-0001	Muffler	1	PCS
27	100011422-0004	Nut, M8	2	PCS
28	100060505	Stud, M6×123	2	PCS
29	100060506	Gasket, Carburetor Insulator	1	PCS
30	100057900	Insulator	1	PCS
31	100067253	Gasket, Carburetor	1	PCS
32	100071219	Carburetor	1	PCS
33	100060759	Gasket, Carburetor	1	PCS
34	100064373	Air Filter Assembly	1	PCS
35	100023676	Air Filter Cover	1	PCS
36	100067940	Air Filter Cover	1	PCS
37	100005079	Butterfly Nut	1	PCS
38	100023670	Air Filter Element	1	PCS
39	100023666	Gasket, Air Filter	1	PCS
40	100061656	Air Filter Lower Cover	1	PCS
41	100077074	Air Filter Base Assembly	1	PCS
42	100011265-0003	Bolt, M6×18	1	PCS
43	100011463-0002	Nut, M6	5	PCS
44	100068954	Stud, M8×60	4	PCS
45	100060510	Gasket, Cylinder Head	1	PCS
46	100010557	Pin, φ10×14	2	PCS
47	100057855	Intake Valve	1	PCS
48	100057856	Exhaust Valve	1	PCS
49	100003248	Piston Ring Set	1	PCS
50	100057896	Push Rod	2	PCS
51	100004262	Tappet	2	PCS
52	100120224	Piston	1	PCS
53	100003221	Circlip	2	PCS
54	100061607	Piston Pin	1	PCS
55	100057889	Connecting Rod Assembly	1	PCS
56	100010021	Oil Sensor	1	PCS
57	100031966-0001	Bolt, M6×18	2	PCS
58	100067156	Crankshaft	1	PCS
59	100010577	Woodruff Key	1	PCS
60	100065317	Washer, φ32×0.3×φ40	1	PCS
61	100057883	Camshaft	1	PCS
62	100010550	Pin, φ8×14	2	PCS
63	100060509	Gasket, Crankcase	1	PCS
64	100057884	Crankcase Cover	1	PCS
65	100004171-0002	Oil Plug	1	PCS
66	100010077	O-Ring, φ15.8×2.5	1	PCS
67	100017651	Oil Seal, φ25×φ41.25×6	1	PCS
68	100011554-0002	Bolt, M8×35	6	PCS
69	100064374-0001	Dipstick	1	PCS
70	100031580	O-Ring, φ23×2.4	1	PCS
71	100056089	O-Ring, φ13.5×2.5	1	PCS
72	100057882	Governor Gear	1	PCS
73	100064116	Disptick Bracket	1	PCS
74	100057890	Governor Gear Shaft	1	PCS
75	100010113	O-Ring, φ5.2×1.9	1	PCS

76	100017630	Oil Seal, $\phi 6 \times \phi 11 \times 4$	1	PCS
77	100007986	Cotter Pin	1	PCS
78	100087656	Governor Lever	1	PCS
79	100087657	Throttle Linkage	1	PCS
80	100079631	Idle Spring	1	PCS
81	100079632	Governor Spring	1	PCS
82	100064371	Governor Gear Bracket Assembly	1	PCS
83	100005137	Clamp	2	PCS
84	100017798	Fuel Hose, $\phi 4 \times \phi 8 \times 230$	1	PCS
85	100064105-0001	Fuel Tank	1	PCS
86	100008767	Fuel Cap	1	PCS
87	100000655	Clip	1	PCS
88	100010459	Washer, $\phi 10 \times 1.5 \times \phi 16$	2	PCS
89	100010272	Drain Bolt	2	PCS
90	100074308	Crankcase	1	PCS
91	100061409	Oil Seal, $\phi 28 \times \phi 47 \times 7$	1	PCS
92	100076428	Ignition Module	1	PCS
93	100058123	Wire Board	1	PCS
94	100010040	Oil Sensor	1	PCS
95	100060690	Flywheel	1	PCS
96	100057887	Cooling Fan	1	PCS
97	100057886	Starter Cup	1	PCS
98	100011459-0003	Nut, M14x1.5	1	PCS
99	100074896-0001	Recoil Starter	1	PCS
100	100074898-0001	Blower Housing	1	PCS
101	100074342-0001	Recoil Starter	1	PCS
102	100010894-0001	Washer, $\phi 6$	3	PCS
103	100011565-0001	Bolt, M6x10	3	PCS
104	100009166-0001	Stop Switch	1	PCS
105	100008454	Choke Linkage Lock Clamp	1	PCS
106	100099496	Valve Cover	1	PCS
107	100000672	Clip	1	PCS