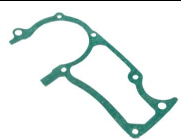



Holzforma G372/XP/XT Parts List

NAME			BRAND	
Chainsaw			Holzforma Farmertec	
NUMBER	PICTURES	FARMERTEC#	OEM #	PARTS NAME
30-41,43,59-60,85-87,91-101		PJ36500		Engine Motor For H. 362 365 371 372
91-95		QG36548R	503 93 90 71	cylinder piston kit with bore 48mm
91-95		QG37250R	503 93 93 72	cylinder piston kit with bore 50mm
91-95		QGBB37252	503 93 93 72	cylinder piston kit with bore 52mm
91-95		QG365XT50	575 77 41 02	cylinder piston kit with bore 50mm
93-95		HS36548	503 69 13 03	piston kit with bore 48mm
93-95		HS37250	503 69 12 71	piston kit with bore 50mm
93-95		HSBB37252	503 69 12 71	piston kit with bore 52mm
93-95		HS365XT50	577 20 77 02	piston kit with bore 50mm
93		HSH3654815	503 28 90-15	piston ring 48x1.5mm
93		HSH3725012PRO	503 28 90-42	FarmerBoss™ Piston Ring 50x1.2mm

93		HSH3725012	576 81 84-01	piston ring 50x1.2mm
93		HSH372B5212		piston ring 52x1.2mm
96		PJ36543	503 43 20-01	Piston Needle Bearing For H. 365/372/570/357/359/268/272
96		PJ36543PRO	503 25 56-01	FarmerBoss™ Piston Needle Cage Bearing 12x15x15 For H. 357 359 268 272 365 372 395 570
30-41		PJ36501	503 62 68-76	Crankcase Ass. For H. 362 365 371 372
121-126,130-134		PJ36502	503 71 32-73	Fuel Tank For H. 362 365 371 372
84		PJ36503	503 62 78-02	Top Cover For H. 362 365 371 372
102		PJ36504	503 62 80-01	Air Filter Cover For H. 362 365
102		PJ37204	503 81 77-01	Air Filter Cover For H. 362 365 372 372xp
84,102		PJ37203	575 25 59-02	Shroud Top Cover for H. 372 X-Torq
1-9		PJ36506	503 62 81-71	Recoil Starter For H. 362 365 371 372
1-9		PJ36506W		G372XP PRO Recoil Starter For H. 362 365 371 372
157		PJ37213	515 98 09 01	Hand Guard for H. 372 X-Torq

157		PJ36509	503 76 49-02 503 76 49-03	Hand Guard For H. 362 365 371 372
83		PJ36586	503 74 01-02	Clamp For Shroud For H. 362 365 371 372
105		PJ37208	503 81 80 01 503 81 80-04	372 372XP Air Filter HD Type For H. 372 372XP
107		PJ36505	503 81 45-03	Air Filter For H. 362 365
107		PJ36505B	575 26 91-01	Air Filter(Nylon) For H. 362 365
106		PJ36505A	503 73 54-01	Air Filter Clip Spring For H. 362 365 371 372
10		PJ36551	503 62 83-01	Air Conductor For H. 362 365 371 372
66-79		PJ36507	503 79 61-01 537 03 35-01	Chain Sprocket Cover For H. 362 365 371 372
164		PJ36508	503 62 67-71	Handle Bar For H. 362 365 371 372
169		PJ37209	522 59 32-01	Wrap Handle Bar Handlebar For H. 362 365 372XP 372 X- Torq
18-22		PJ36510	537 81 27-01	Ignition Coil For H. 340/345/346/350/351/353/357/ 359/362/365/372/371/385/390
17.5		PJ36511	537 05 16-05	Flywheel For H. 362 365 371 372
		PJ36511A		Flywheel Key For H. 362 365 371 372

145		PJ36513	503 76 53-01	Muffler For H. 362 365 371 372
148		PJ36514	503 76 65-01	Muffler Bracket For H. 362 365 371 372
89		PJ36550	503 77 58-01	Muffler Shield For H. 362 365 371 372
31,34,39,90,92		PJ36599	503 64 72-01	Set Of Gaskets for HUS 362 365 371 372 XP
34,90,92		PJ36515	503 62 72-01 503 90 99-01 503 77 59-01	Gasket Set For H. 362 365 371 372
34		PJ36515A	503 62 72-01	Crankcase Gasket For H. 362 365 371 372
92		PJ36515B	503 90 99-01	Cylinder Gasket For H. 362 365 371 372
90		PJ36515C	503 77 59-01	Muffler Gasket For H. 362 365 371 372
113		PJ36516	503 28 32-03	Carburetor For H. 362 365 371 372
113		PJ37222	577 65 78-01	Carburetor For H. 372 X-Torq
113		PJ36596PRO	503 28 18-04	Genuine Walbro HD-6B HD-12B carburetor For H. 365 372XP
100		PJ36517	503 74 87-01	Crankshaft For H. 362 365 371 372
100		PJ36517PRO	503 74 87-01	FarmerBoss™ Crankshaft For HUS 362 365 371 372 XP

99,101		T0011	738 22 02-25	6202 Grooved Ball Bearing 15*35*11
99,101		T0011PRO	738 22 02-25	FarmerBoss™ 6202 Grooved Ball Bearing 15*35*11
31,39		PJ36519PRO	503 26 03-01 505 27 57-19	FarmerBoss™ Oil seal set (Viton Rubber) 15*26*4 , 18.4*26.5*3.6 For H. 362 365 371 372
31		PJ36519XPRO	505 27 57-19	FarmerBoss™ Oil seal (Viton Rubber) small one 15*26*4 For HUS 362 365 371 372
39		PJ36519DPRO	503 26 03-01	FarmerBoss™ Oil seal (Viton Rubber) big one 18.4*26.4*3.6 For HUS 362 365 371 372
49		PJ36544	503 43 20-01	Clutch Needle Bearing For H. 365/372/570/575xp
49		PJ36544PRO	503 43 20-01	FarmerBoss™ Drum Needle Cage Bearing 12x16x13 For H. 365 372 570 575xp
48,50		PJ36520	503 93 24-71	Chain sprocket 3/8" - 7 For H. 362 365 371 372
48,50		PJ36584	503 86 17-71	7 tooth 3/8" Chain Sprocket For H. 362 365 365 X-Torq 371 372 XP
47		PJ36521	503 74 44-01	Clutch For H. 362 365 371 372
50		PJ36021	503 93 24-71	Sprocket Rim 3/8"-7T For H. 362 365 371 372
50		PJ36021PRO	503 93 24-71	FarmerBoss™ Sprocket Rim 3/8"-7T
53-58,62		PJ36523	503 52 13-05	Oil Pump For H. 362 365 371 372


63		PJ36524	503 75 61-02	Worm Gear For H. 362 365 371 372
64		PJ36526	503 77 43-01	Level For H. 362 365 371 372
63.5		PJ36527	503 23 00-59	Ring For H. 362 365 371 372
59		PJ36528	503 42 67-01	Oil Hose For H. 362 365 371 372
60		T0027	501 54 41-02	Oil Filter For H. 362 365 371 372
132		T0026	503 57 76-02	Fuel Line For H. 362 365 371 372
133		T0025	503 44 32-01	Fuel Filter For H. 362 365 371 372
85		T0004	1110 400 7005	L7TC SPARK PLUG FOR NGK BMP7A MANY ST HUS and OTHER MACHINES For ST MS250 MS230 025 023
87		T0005	1128 020 9400	Decompression Valve M10X1.0 For ST MS260 MS240 026 024
127-129		PJ36532	501 81 96-02	Fuel/Oil Cap For H. 362 365 371 372
66-74		PJ36534	537 07 95-01 503 99 83-01 537 07 94-01	Chain Adjuster (10 Items) For H. 362 365 371 372
23		PJ36535	503 71 82-01	On Off Switch For H. 362 365 371 372
136		PJ36536	503 62 77-01	Choke Rod For H. 362 365 371 372

45		PJ36537	537 01 37-71	Bar Plate For H. 362 365 371 372
7		T0003	503 54 39-01	Starter Handle For H. 362 365 371 372
5		PJ36539	503 85 96-01	Starter Pulley For H. 362 365 371 372
4		PJ36540	503 78 72-01	Starter Spring For H. 362 365 371 372
118		PJ36541	503 74 39-01 503 96 45-01	Intake Manifold (Round Type) For H. 362 365 371 372
118		PJ37216	521 99 25-01 521 99 25-02 521 99 25-04	Intake manifold for HUS 372XT
118		PJ36542		Intake Manifold (Square Type) For H. 362 365 371 372
119		PJ36541A	503 56 00-04	Manifold Clip For H. 362 365 371 372
119.5		PJ36542A	503 74 38-01	Intake Cover and Screw For H. 362 365 371 372
117		PJ36541B	503 71 27-01	Intake Support For H. 362 365 371 372
115		PJ36541C	503 43 18-01	Intake Sleeve For H. 362 365 371 372
111		PJ36541D	503 66 53-01	Carb Adjusting Rubber Kit For H. 362 365 371 372
173		PJ36545	537 01 71-01	Bumper Spike For H. 362 365 371 372

143		PJ36587		Bumper Spike For H. 362 365 371 372
144		PJ36588		Bumper Spike For H. 362 365 371 372
37.5		PJ36546	501 81 57-01	Collar screw For H. 362 365 371 372
80		T0032	503 22 00-01	Bar Nut For H. 362 365 371 372
22		PJ36548	503 71 76-01	Throttle Cable For H. 362 365 371 372
51		PJ36553	503 75 24-01	Washer For H. 362 365 371 372
52		PJ36554	503 27 21-01	E-Clip For H. 362 365 371 372
42		PJ36580	503 85 95-01	Pawl For H. 362 365 371 372
15		PJ26808B	501 67 35-01	Pawl Spring For H. 362 365 371 372
122		PJ36556	503 82 98-01	Trigger For H. 362 365 371 372
121		PJ36557	503 55 66-01	Trigger Support For H. 362 365 371 372
124		PJ36558	503 73 64-01	Spring For H. 362 365 371 372
97		PJ36525		Barrel For H. 362 365 371 372

123		PJ36559	720 12 72-20	Pin M4X20 For H. 362 365 371 372
120		PJ36560	720 12 40-20	Pin M3X25 For H. 362 365 371 372
(154)		PJ36578		Pin M3X10 For H. 362 365 371 372
154		PJ36552	503 75 22-01	Brake Band For H. 362 365 371 372
155		PJ36561	503 75 11-03	Brake Cover For H. 362 365 371 372
153		PJ36562	501 87 53-03	Level For H. 362 365 371 372
151		PJ36563	503 70 99-01	Spring For H. 362 365 371 372
150		PJ36564	503 79 27-01	Spring sleeve
161		PJ36565	503 43 65-01	Brake Spring For H. 362 365 371 372
160		PJ36566	503 83 81-02	Spring Sleeve For H. 362 365 371 372
159		PJ36567	537 00 87-01	Level For H. 362 365 371 372
158		PJ36568	503 77 52-01	Brake Sleeve For H. 362 365 371 372
134		PJ36569	503 63 76-01	AV Buffer Mount Spring Front Tank For H. 362 365 371 372

126		PJ36570	503 89 56-01	AV Buffer Mount Spring Rear Tank For H. 362 365 371 372
165		PJ36571	503 63 75-02	AV Buffer Mount Spring Handle Bar For H. 362 365 371 372
138		PJ36555	503 62 73-01	Base(For Carburetor) For H. 362 365 371 372
137		PJ36572	503 73 44-01	Choke Rod Grommet For H. 362 365 371 372
140		PJ36573	503 79 14-01	Grommet For H. 362 365 371 372
135		PJ36574	503 67 86-01	Grommet Spacer For H. 362 365 371 372
28		PJ36575	503 62 84-01	Air Baffle For H. 362 365 371 372
108		PJ36576	725 53 05-55	Carburetor Bolt For H. 362 365 371 372
109		PJ36577	503 62 75-01	Air Filter Base For H. 362 365 371 372
109		PJ37277	503 81 78-01	H372XP Air Filter Base For H. 362 365 371 372
20		PJ36582	501 48 54-02	Ignition Lead WT Spark Plug Boot and Spring Assy 5.0X21.5MM For H. 362 365 371 372
76		PJ36581		Chip Guard For Chain Sprocket Cover For H. 362 365 371 372
174		PJ36583	503 47 05-01	Chain Catcher For H. 362 365 371 372

65		PJ36593	503 64 47-01	washer(for hus365 oil pump) For H. 362 365 371 372
66		PJ36594	504 30 00-26	seal sleeve for oil tube(for hus365 oil pump) For H. 362 365 371 372
98		PJ36598	503 26 30-19	O-ring 15*0.6 For HUS 362 365 371 372XP
166,167,168,171,172		TP53160	503 21 49-16	Hexagon flange self tapping screw ST5.3X16 For Assembling HUS 362 365 371 372XP Handle Bar
35		PJ36597	501 27 08-01	Bushing For HUS 362 365 371 372XP
27		PJ36532A	503 26 30-17	Fuel/Oil Cap O-ring For Hus 288 365 372XP 395XP 3120