

# CARSON®

# LL-20

## LumiLoupe™

### 10x Stand Magnifier with Snap-on Reticle

Congratulations on selecting your new LumiLoupe™!  
In order to achieve optimum performance, please follow instructions for proper use and care.

#### PRODUCT SPECIFICATION

|                |                    |
|----------------|--------------------|
| Magnification: | 10x                |
| Weight:        | 0.09 lbs           |
| Dimensions:    | 2.1" x 2.0" x 1.9" |




#### FOCUSING LOUPE

1. Place loupe over subject you are viewing.
2. Your eye(s) should be reasonably close to loupe.
3. It's best to start with loupe flat against a table. Depending on your vision, raise as needed to focus.

#### REMOVING RETICLE

With loupe upside down, locate the two holes on either side of the reticle as shown in Fig. 1. Using a tool such as a pen, insert into one of the holes to lift reticle out from compartment. To reattach, push back into place.

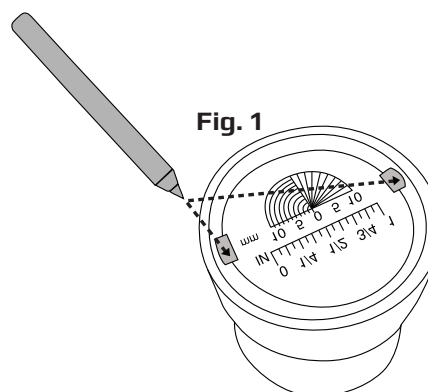

#### CLEANING

Clean using microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.

#### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ [info@carson.com](mailto:info@carson.com)



✉ [uksupport@carson.com](mailto:uksupport@carson.com)



✉ [eusupport@carson.com](mailto:eusupport@carson.com)

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

**[www.carson.com](http://www.carson.com)**

Carson Optical 2070 5th  
Avenue, Ronkonkoma, NY  
11779 | Tel: 631-963-5000