

Cylindrical Photoelectric Sensors



BRQ Series (side sensing type) PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Excellent noise immunity and minimal influence from ambient light
- Reverse power protection circuit, reverse output protection circuit, output short overcurrent protection circuit
- Mutual interference prevention function (except through-beam type)
- Sensitivity adjuster
- Light ON/Dark ON mode selectable by control wire
- Protection rating : IP67 (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
When using a separate power supply for the sensor and load, supply power to the sensor first.
- 10-30 VDC= power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 3
 - Installation category II

Product Components

Sensing type	Through-beam	Polarized retroreflective	Diffuse reflective
Product components	Product, instruction manual		
Reflector	-	MS-2S	-
Adjustment screwdriver	× 1	× 1	× 1
M18 fixing nut	× 4	× 2	× 2

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website.

BRQ P S ① - ② D T A - ③ - ④

① Sensing distance

Number: Sensing distance (unit: mm)
Number+M: Sensing distance (unit: m)

② Sensing type

T: Through-beam
P: Polarized retroreflective
D: Diffuse reflective

③ Connection

No mark: Cable type
C: Connector type

④ Control output

No mark: NPN open collector output
P: PNP open collector output

Sold Separately

- Reflector: MS Series
- Bracket: BK-BR-A
- Retroreflective tape: MST Series
- Connector cable, connector connection cable


Cautions during Installation

- Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.
 - Installation environment and background (reflected light)
 - Sensing distance and sensing target
 - Direction of target's movement
 - Feature data
- When installing multiple sensors closely, it may result in malfunction due to mutual interference.
- For installation, tighten the screw with a torque of 0.39 N m. Mount the brackets correctly to prevent the twisting of the sensor's optical axis.
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

Through-beam	Retroreflective	Reflective
Emitter - Receiver: Install to face each other	Sensor - Reflector: At least 0.1 m apart, install to face each other (parallel with the sensing side of the unit)	Sensor - Sensing target: Install to face each other (parallel with the sensing side of the unit)

Operation Timing Chart


■ Light ON mode

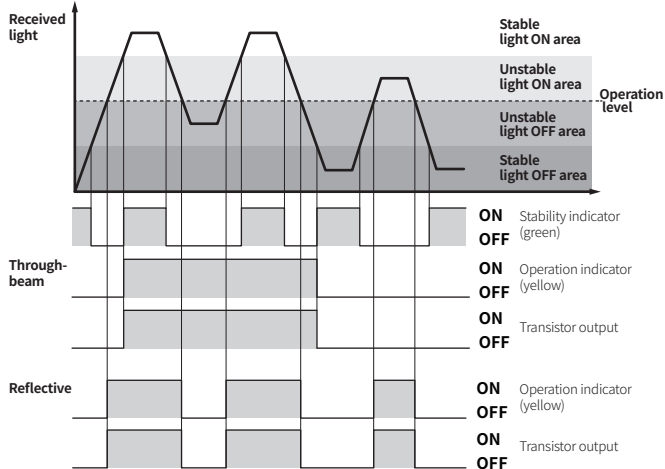


- In Dark ON mode, the waveforms are reversed.
- Operation indicator and transistor output differ from the sensing method.

Connections


■ Cable type: Emitter

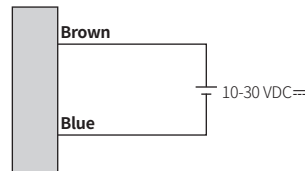

■ Cable type: Receiver, Polarized retroreflective, Diffuse reflective type

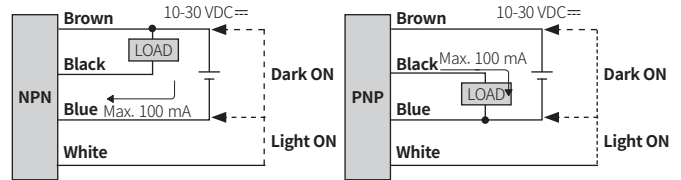

■ Connector type

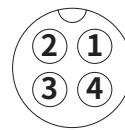

Pin	Color	Function
①	Brown	+V
②	White	CONTROL
③	Blue	0V
④	Black	OUT

- Connector pin (2), (4) are N.C (not connected) terminal for the emitter.


■ Operation mode selection

- △ Be sure to connect the control wire when selecting the operation mode.
Failure to this instruction may result in product damage.


Operation mode	Wiring
Dark ON	Connect the control wire (white) to +V (brown)
Light ON	Connect the control wire (white) to 0V (Blue)

Circuit

■ NPN open collector output

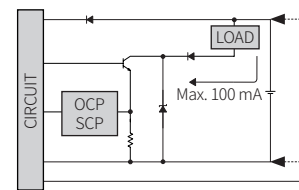

■ PNP open collector output

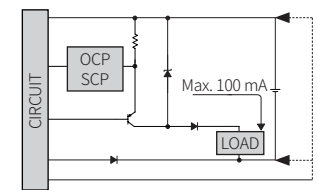

- OCP (over current protection), SCP (short circuit protection)
- If short-circuit the control output terminal or supply current over the rated specification, normal control signal is not output due to the protection circuit.

Sensitivity Adjustment


- Set the adjuster for stable Light ON area, minimizing the effect of the installation environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.


STEP	Status	Description
01	Received	Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area.
02	Interrupted	Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B).
03	-	Set the adjuster at the mid position between (A) and (B) for optimal sensitivity.

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

A	Optical axis of emitter	D	Stability indicator (green)
B	Optical axis of receiver	E	Power indicator (red)
C	Operation indicator (yellow)	F	Sensitivity adjuster

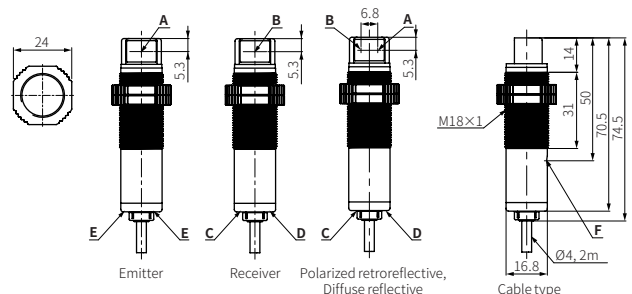


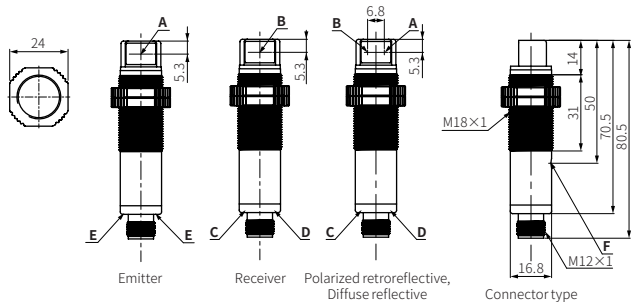

■ Reflector (MS-2S)

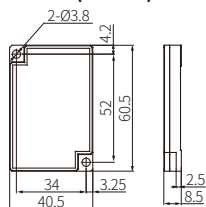

■ M18 fixing nut



Specifications

Model	BRQPS□-TDTA-□-□	BRQPS3M-PDTA-□-□	BRQPS□-DDTA-□-□
Sensing type	Through-beam	Polarized retroreflective	Diffuse reflective
Sensing distance	10 m 20 m	3 m ⁽¹⁾	100 mm ⁽²⁾ 400 mm ⁽²⁾ 700 mm ⁽³⁾
Sensing target	Opaque materials	Opaque materials	Opaque, translucent materials
Min. sensing target	≥ Ø 7 mm	≥ Ø 75 mm	-
Hysteresis	-	-	≤ 20 % of sensing distance
Response time	≤ 1 ms	-	-
Light source	Red	Red	Red
Peak emission wavelength	660 nm	660 nm	660 nm
Sensitivity adjustment	YES (Adjuster)	YES (Adjuster)	YES (Adjuster)
Mutual interference prevention	-	YES	YES
Operation mode	Light ON mode - Dark ON mode selectable (Control wire)		
Indicator	Operation indicator (yellow), stability indicator (green), power indicator (red) ⁽⁴⁾		
Approval	CE, RoHS, ENEC	CE, RoHS, ENEC	CE, RoHS, ENEC

(1) Reflector (MS-2S)

(2) Non-glossy white paper 100 × 100 mm

(3) Non-glossy white paper 200 × 200 mm


(4) Only for the emitter

Unit weight (packaged)	Through-beam	Polarized retroreflective, Diffuse reflective
Cable type	≈ 120 g (≈ 170 g)	≈ 70 g (≈ 130 g)
Connector type	≈ 35 g (≈ 120 g)	≈ 25 g (≈ 120 g)

Power supply	10-30 VDC= ± 10 % (ripple P-P: ≤ 10 %)
Current consumption	It depends on the sensing type
Through-beam	Emitter: ≤ 20 mA, receiver: ≤ 20 mA
Reflective	≤ 30 mA
Control output	NPN open collector output / PNP open collector output model
Load voltage	≤ 30 VDC=
Load current	≤ 100 mA
Residual voltage	NPN: ≤ 2 VDC=, PNP: ≤ 2 VDC=
Protection circuit	Reverse power/output protection circuit, output short overcurrent protection circuit
Insulation resistance	≥ 20 MΩ (500 VDC= megger)
Noise immunity	± 240 VDC= the square wave noise (pulse width: 1 μs) by the noise simulator
Dielectric strength	1,000 VAC~ 50/60 Hz for 1 min
Vibration	1.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Shock	500 m/s ² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient illuminance (receiver)	Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx
Ambient temperature	-25 to 60 °C, storage: -30 to 70 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Protection rating	IP67 (IEC standard)
Connection	Cable type / Connector type model
Cable spec.	Ø 4 mm, 4-wire, (Emitter: 2-wire), 2 m
Wire spec.	AWG26 (0.52 mm, 20-core), insulator outer diameter: Ø 1 mm
Connector	M12 4-pin plug type
Material	Case: PC, lens and lens cover: PMMA


Sold Separately: Bracket (BK-BR-A)

- Unit: mm, For the detailed drawings, follow the Autonics website.

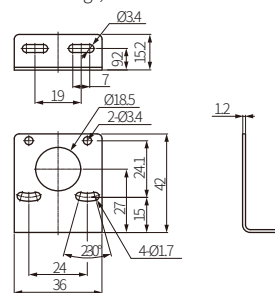


Feature Data: Through-beam Type


■ Sensing area




• BRQPS10M-TDTA

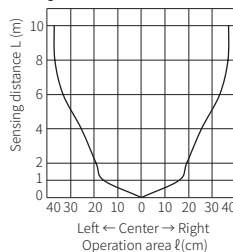


• BRQPS20M-TDTA

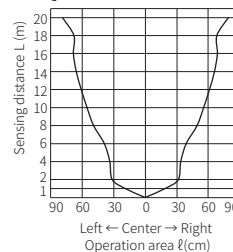


■ Emitter angle

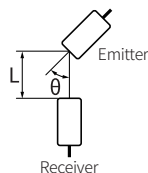

• BRQPS10M-TDTA

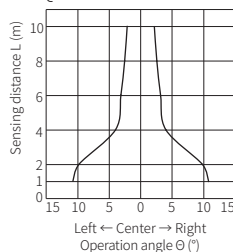


• BRQPS20M-TDTA

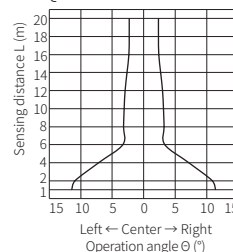


Feature Data : Polarized Retroreflective Type


■ Sensing area




• BRQPS3M-PDTA

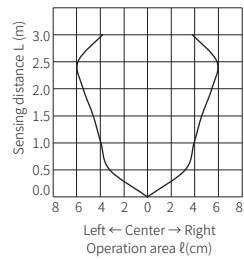


■ Sensor angle




• BRQPS3M-PDTA

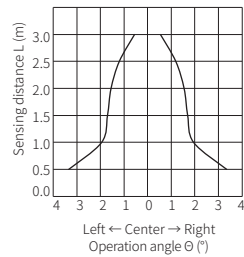

■ Reflector angle




• BRQPS3M-PDTA

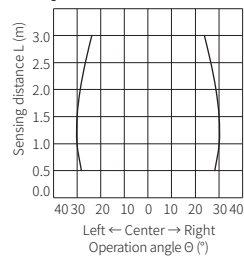


Feature Data: Diffuse Reflective Type


■ Sensing area

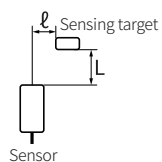

• BRQPS100-DDTA

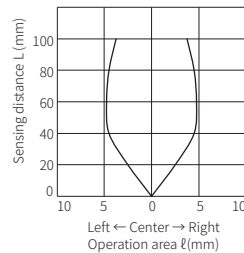

• BRQPS400-DDTA

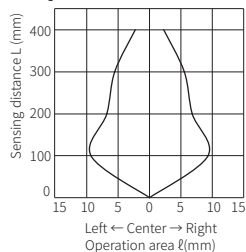

• BRQPS700-DDTA

